
2.7X2.7M GAZEBO W/2 SIDE PANELS

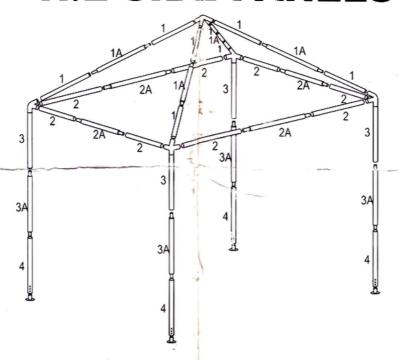


Pack Contents

| NUMBER | PARTS | SIZE MM | QTY |
|-----------------------|--|------------|-----|
| 1 | | 565 | 8 |
| 1A | | 688 | 4 |
| 2 | 0 | 810 | 8 |
| 2A | | 810 | 4 |
| 3 | | 688 | 4 |
| 3A | | 688 | 4 |
| 4 | •••• | 688 | 4 |
| CENTRE CONNECTOR | | | _ 1 |
| BASE PLATE | | | 4 |
| STAKE | | , | 4 |
| SIDE CORNER JOINTS | | - | 4 |
| ROPE | The state of the s | | 4 |
| COVER | | | 1 |
| SIDE PANEL | | | 1 |


Customer Care

- * This Gazebo is not water proof.
- * The Gazebo is shower proof to BS 5066-1974.
- * This Gazebo is not a permanent structure and should be disassembled and stored away after use.
- * Do not repack your Gazebo until completely dry.
- * This Gazebo must be assembled by two persons.
- * This Gazebo must not be left erect in windy conditions.
- * If you have any problems with your Gazebo please call our helpline on 0151 520 0074.

STEP BY STEP GUIDE TO ASSEMBLY

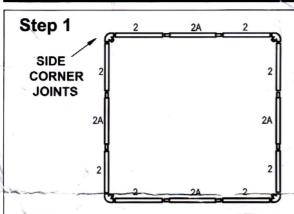


Assemble upper frame as shown using Tubes 2 & 2A and Side Corner Joints ensure that all poles are fully pushed into corner.

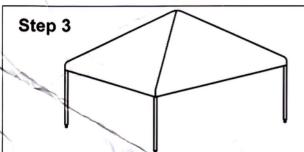

Assemble Gazebo cover, pull the cover tightly over the assembled roof frame.


Step 4

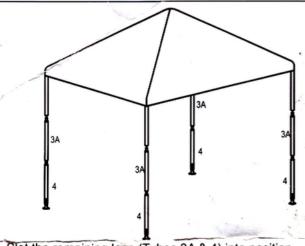

Slot the remaining legs (Tubes 3A & 4) into position ensuring the side tube holes are at the base. Push the plastic feet into place.

Step 2 CENTRE CONNECTOR 1A 2A 1A 2A 2A 2A 3 3

Assemble 1 & 1A poles into centre connector then assemble into corner joints then connect poles No.3 into side corner joints.

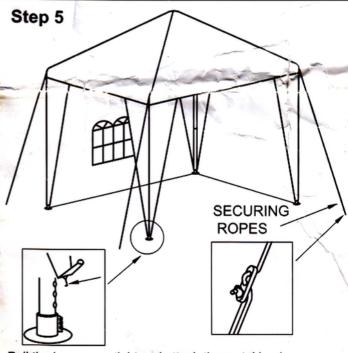

Pull the leg covers tight and attach the metal hooks into tube holes near the feet if the cover becomes loose, Tighten by moving the hook to a lower hole. The securing ropes can now be fitted if required.

Side Panels

The side panels can be attached by using the curtain hooks provided to the poles(2,2A), these can then be secured by wrapping the Velcro tabs around the poles(3,3A,4).

FIRE PRECAUTIONS

This gazebo can burn.

Do not use naked flames in the gazebo.

This gazebo has no flame retardant cooking area.

FOR HELP AND ASSISTANCE WITH YOUR PRODUCT PLEASE CALL THE CUSTOMER HELPLINE
TEL:0151 520 0074.MON-FRI 9:00am-5:00pm
PLEASE STORE INSIDE DURING THE WINTER MONTHS