



# Hand Blender Instruction Manual



Item No. 35090



**IMPORTANT SAFEGUARDS**  
**PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE**  
**USING THIS APPLIANCE AND RETAIN THEM FOR FUTURE**  
**REFERENCE**

## CAUTIONS & WARNINGS

- Only use this appliance for its intended purpose, (Domestic use only).
- Do not immerse the appliance into water or any other liquid.
- Connect the appliance only to an alternating current of the voltage specified on the rating plate & only to an earthed socket. To avoid circuit overload do not operate another high wattage appliance on the same circuit.
- Never pull the cord to disconnect from the socket, always remove by grasping the plug.
- Do not lift the appliance by the electric cord.
- Always disconnect the appliance from the socket when not in use.
- Do not operate this appliance if the cord has been damaged or if it has been dropped, it must be inspected by a qualified person, (electrician) for examination and repair.
- Always keep the appliance out of reach of children and always ensure that children are supervised when the appliance is switched on.
- Do not allow the power cord or hose to touch the hot surface.
- Never twist the supply cord during use.
- Never leave the appliance unattended when it is switched on.
- This appliance is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- Never handle the appliance if your hands are wet.
- Avoid contact with any moving parts.
- Ensure that all hair is tied up when using this appliance.
- Ensure that no clothes are hanging down when using this appliance.



- Take care when handling the attachments as they are sharp.
- Misuse of this appliance may result in personal injury.
- This appliance should not be used by children. Keep the appliance and its cord out of reach of children.

## USING YOUR STICK MIXER

1. Simply plug the blender into power outlet. 220-240V/50Hz
2. Lower the mixer into food and depress the speed switch at the top of the motor unit as indicated, (see picture)
3. The mixer will only turn on if the low speed switch or high speed switch are depressed.



Low Speed Switch

High Speed Switch

## HOW TO CLEAN

1. On completion of using your appliance it is strongly recommended that you clean the blades immediately. This will remove any clinging food from the blades.
2. Unplug the appliance.
3. Clean the body of the appliance using only a soft, damp cloth.
4. To clean the blades turn the lower part of the stick in a clockwise direction to release then you can immerse the blades in water to clean.

**CAUTION: THE ATTACHMENT IS VERY SHARP!**

5. Make sure the base is completely dry before re-attaching to the upper body,