Getting to Know Your Device




Go to Apps > AT&T > Device Help Need more help?

What's in the Box

Quick Start Guide

Battery


- USB Type C Charger

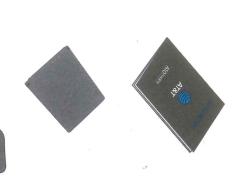

Replace SIM Card & Install Battery

Replace SIM Card

- bottom edge of hotspot. 1. Remove back cover using thumb catch on
- carrier logo facing up until it goes all the way. 2. Slide SIM card in SIM card slot with Wireless

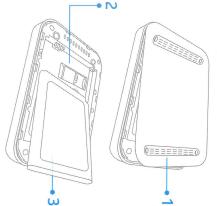

Install Battery

3. Align battery contact with those inside and then close back cover. press gently until battery is seated in place,

Home Screen

Power up the hotspot

To turn your Hotspot on or off, press and ho the Power Button on bottom side of the device for at least two seconds.

Main Screens

Your Hotspot has a series of screens allowing you view device information and system aler Press the Power Button (Navigation Key) to cycle through the following:.











Web Admin URL Guide Dis



TILLE #1 (1) [

Home screen, device mer guide (every 3 seconds)

Wi-Fi Name Display

Password Display

Back to home screen

Connect to the Internet

Connect a device to hotspot via Wi-Fi

- enabled device 1. Turn on your Hotspot and your Wi-Fi
- 2. Open the Wi-Fi application or controls on the computer or Wi-Fi-enabled device you
- Internet. want to connect to your Hotspot enter your password to connect to the Find your Hotspot's Wi-Fi name (SSID),

appear on the Hotspot display. Note: Your Wi-Fi name (SSID) and password

Charge the battery

AC power outlet. 1. Insert small end of the USB cable into USB 2. Plug charging adapter into a standard charging port on right side of hotspot

charging times. the one supplied can result in slower Note: Using a different charger other than

& Password Change WiFi Network Name

Access, monitor, and customize your device settings using the Hotspot Web Admin Page

 Open a browser on a computer connected Log into Hotspot Web Admin Page

to your Mobile Hotspot.

2. Navigate to http://mobile.hotspot

3. Enter your password and click Login.

You'll be taken to the Hotspot Web Admin home page.

Note: The default Admin password for logging into the Mobile Hotspot Web Admin Page is 'admin' and must be changed in order to proceed.







Reset the Device

You may want or need to clear your account information, reset user settings, or reset your device to its factory default settings.

Reset Wi-Fi settings only

- Log into Mobile Hotspot Web Admin page.
 Click the Settings tab.
 Use drop down menu, select Wi-Fi > Basic.
 Under Wi-Fi Settings Reset, click Reset.

Restore to factory defaults

- Turn device on.
- 2. Remove the battery cover while device is on. 3. Press and hold the Reset button until you see the "Factory Reset Restarting..." message on the device display.

 4. When device reboots, all settings will be restarted back to feet and feet the contract of the contract o restored back to factory default settings.

pressing reset button and must have sufficient Note: The hotspot must be powered on when battery level

Information About Safeguard

information. Lost or stolen devices should be immediately reported to your wireless carries opposer measures can be taken to protect accounts. For additional information, visit your wireless carrier's Privacy Policy. use. This device has a locking function (e.g., user-defined codes or patterns) that coserve as a first line of defense against unauthorized use or access to stored them to take advantage of the features available on this device to help secure it fror theft and/or other unauthorized access and We encourage customers to take appropria measures to secure their devices and invite

Help

User Guide

version. User Guide is available to download PDF Login to the Mobile Hotspot Web Admin page and click Support on the top menu

Updates

firmware version by going to Mobile Hotspot Web Admin Page > Settings firmware automatically at power on stage. Users can manually check the latest for New Software. > Device > Software Update > Check Device is designed to download latest

AT&T 5-Star Eco-Rating 2.0

Approved Firmware Versions

AT&T Eco Rating 2.0 only applies to A10 Mobile Hotspot For limited factors evaluated visit att.com/EcoSpace. Wireless Emergency Alerts is a registered Trademark and Service Mark of CTIA.

it will not function unauthorized firmware is placed device carrier and the device manufacturer. If versions approved for use by your wireless This device will only operate with firmware

2022 Franklin Wireless Corporation. All rights reserved. Franklin Logo is a registered trademark of Franklin Wireless Corp. LITE is a trademark of ETSI. 4G LITE not avail. everywhere. Contains Lithium-non battery, recycle or dispose of properly. 2022 AT&T intellectual Property. All rights reserved. AT&T, the AT&T logo and all other AT&T marks contained herein are trademarks of AT&T intellectual Property. All other marks are the property.

· 800.331.0500 or prepaid 800.901.9878

Compatible device and online account required, and messaging rates may apply for download ar app usage.

 On the web: att.com/myATT On your phone: Apps > myAT&T Manage Your Account with myAT&T

Find More Info

On your phone:
 Apps > AT&T > Device Help

Need More Help?

- On the web: att.com/DeviceHowTo

Give us a Call

611 from any AT&T wireless phone