

XM Yachting Pro Dry Humidifier

Basic Instructions

Most important things to know for your airdryer:

- After transport (when tilting or shaking occurred), leave for 2 hours before switching on.
- Make sure to push the water tank all the way in to avoid leaks.
- The main control knob is connected to a hygostat that determines how 'dry' the air in the room should get. Clockwise turning gives lower humidity (in the end). Similar to a thermostat.
- Do not set the humidity too low, it can and will damage any wood work/veneer by drying it out too much causing it to crack etc.
- If the unit operates below 12 Degrees centigrade, it will automatically run a defrost cycle every hour to prevent ice-forming in the unit. The indicator will light up during those cycles.
- When using an external drain, remove the cap from the outlet on the back and place it on the outlet that drains into the tank (remove the tank first). Do not forget to replace the tank afterwards.
- The hose connected to the drain has a diameter of 11 mm.
- Do not forget to clean the airfilter regularly.