

WARRANTY

Arlec guarantees this product in accordance with the Australian Consumer Law.

Arlec also warrants to the original first purchaser of this product ("you") from a retailer that this product will be free of defects in materials and workmanship for a period of 12 months from the date of purchase; provided the product is not used other than for the purpose, or in a manner not within the scope of the recommendations and limitations, specified by Arlec, is new and not damaged at the time of purchase, has not been subjected to abuse, misuse, neglect or damage, has not been modified or repaired without the approval of Arlec and has not been used for commercial purposes ("Warranty").

If you wish to claim on the Warranty, you must, at your own expense, return the product, and provide proof of original purchase and your name, address and telephone number, to Arlec at the address below or the retailer from whom you originally purchased the product within 12 months from the date of purchase.

Arlec will (or authorise the retailer to) assess any claim you may make on the Warranty in the above manner and if, in Arlec's reasonable opinion, the Warranty applies, Arlec will at its own option and expense (or authorise the retailer to) replace the product with the same or similar product or repair the product and return it to you or refund the price you paid for the product. Arlec will bear its own expenses of doing those things, and you must bear any other expenses of claiming on the Warranty.

The Warranty is in addition to other rights and remedies you may have under a law in relation to the product to which the Warranty relates.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

ARLEC

Arlec Australia Pty. Ltd. ACN 009 322 105 ("Arlec") gives the Warranty.

Arlec's telephone number, address and email address are:

Customer Service: (03) 9982 5111

New Zealand Toll Free: 0800 003 329

Building 3, 31 – 41 Joseph Street, Blackburn North, Victoria, 3130
Blackburn North LPO, P.O. Box 1065, Blackburn North, 3130

Email: custservice@arlec.com.au

© This instruction leaflet is subject to copyright and must not be reproduced, copied or otherwise used in any way or for any purpose without the consent in writing of the owner, Arlec Australia Pty Ltd (A.C.N. 009 322 105).

ARLEC

TWIN 500W HALOGEN TRIPOD WORKLIGHT



HL21 INSTRUCTIONS

HL21

DUAL HALOGEN FLOODLIGHTS WITH TRIPOD (HL21)

OPERATION: The Dual Halogen Floodlight HL21 is suitable for indoor or outdoor use, from any standard power point and is weatherproof to IP54

ASSEMBLY



To assemble stand, loosen locking knob, then push down black locking bracket until tripod legs are fully extended. Tighten locking knob. Always keep the centre telescopic pole vertical for stability and safety.

Attach Floodlight handle (A) and tighten wingnut (B).

Next mount the cross bar onto the tripod, then fit the floodlights to the crossbar using the screws and threaded knobs provided.

Fix the "Y" junction of the power cord by using the screw at the centre side face of the crossbar.

The pole may be raised by loosening the locking ring and extending the sections. Tighten locking ring to hold in place. Full height is approximately 1.8m.

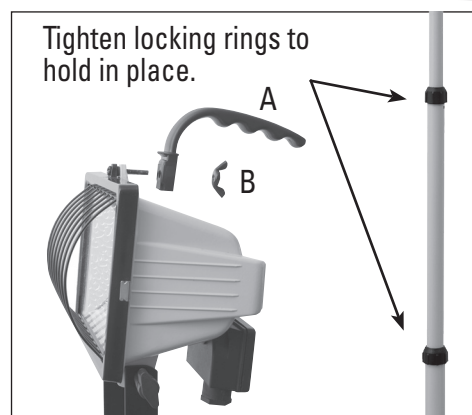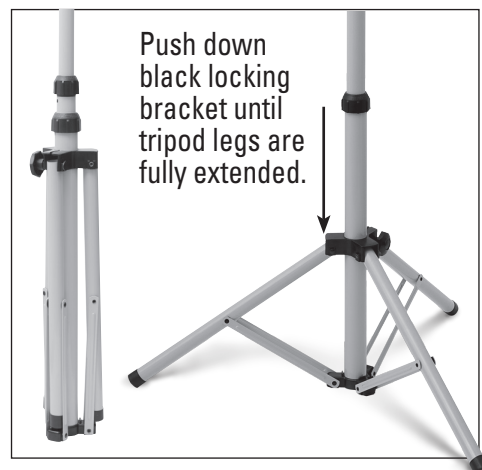

FITTING THE TUNGSTEN HALOGEN TUBE

The tungsten halogen tube is supplied and packed separately to avoid damage. Open the Floodlight housing by loosening the top screw. The glass front of the housing will hinge forward and down. Ensure that Floodlight is unplugged from wall socket. Insert the tube in the holder, ensuring that you do not touch the glass envelope of the tube with bare hands. Use the tube wrapper to handle tube. Check that the tube is seated correctly on the holder contacts.

(Oils from the hands can cause the tube to fail or shatter). If necessary the tube should be carefully cleaned with methylated spirit and dried before installation. Do not attempt to adjust or force the tube holder with tools, but carefully push the tube into the holder contacts. Reassemble the Floodlight housing.

DO'S AND DON'TS

Extreme care should be taken when handling and operating the dual Halogen Floodlight HL21. Please observe the following do's and don'ts to ensure safe and trouble free use:

- DO** ensure combustible material is kept away from Floodlight.
- DO** use the handle (A) to adjust the beam.
- DO** keep the floodlight out of reach of children when in use.
- DO** switch off and allow to cool for a minimum of 10 minutes before storing.
- DO** ensure that tripod is standing vertically on a stable surface.
- DO** take extreme care in crowded or confined areas that tripod is not positioned where it can be easily toppled over.
- DO** weigh down base of tripod with sandbags for extra stability if necessary. ie. one or more plastic bags filled with sand, then tied to pole or tripod legs.
- DO** use the Floodlights in horizontal position (+4°). If not used in horizontal position the tube life will be greatly reduced.



- DON'T** operate if the front glass safety shield is broken. Replace with correct tempered glass only.
- DON'T** touch tube with bare hands. This could cause tube to shatter when Floodlight is switched on.
- DON'T** stand Floodlight in pools of water.
- DON'T** handle with wet hands or operate when standing on wet surface.
- DON'T** position the Floodlight closer than one metre from surface to be illuminated.
- DON'T** allow power cable to come into contact with front of Floodlight or housing.
- DON'T** touch the housing or glass while hot.
- DON'T** allow overhanging shrubs or foliage to come into contact with Floodlight.
- DON'T** place or operate the Floodlight closer than 5 metres to a swimming pool or spa.
- DON'T** operate the Floodlight with the front of housing opened.