

Operator's Guide

ELITE*pro* SP™

and

ELOG™

Software



ELITE*pro* SP™/ELOG™ 12b

March 20, 2013

Operator's Guide: ELITEpro SP™ and ELOG™ Software ©2013 DENT Instruments, Inc. All rights reserved.
This manual may not be reproduced or distributed without written permission from DENT Instruments.

Congratulations!

You now own one of the world's most versatile, accurate, feature-rich, and lowest priced power/energy loggers, the **ELITEpro SP™**. The **ELITEpro SP** logger contains many features, some of which enable you to measure data across multiple platforms, view and graph real-time data, and retrieve data remotely.

In addition, this manual describes the features and functionality of the accompanying software **ELOG™ 12**, which is designed to be user-friendly, intuitive, and an easy-to-use component of your energy measuring projects.


NOTE: The **ELITEpro SP** power meter and **ELOG 12b** software have received a number of improvements and have plenty of new features added, so be sure to review the Introduction, New Features section.

Thank You for your business!

Trademarks

ELITEpro SP™, **ELOG™**, and **PhaseChek™** are trademarks of DENT Instruments, Inc.

Windows®, Windows® Vista, Windows® 7, Windows® 8, Windows® XP, and Notepad® are registered trademarks of Microsoft Corporation.

Bluetooth® wireless technology is a registered trademark of the *Bluetooth* SIG. If your unit is equipped with *Bluetooth* wireless technology, look for the following trademark symbol: 

DENT Instruments | 925 SW Emkay Drive | Bend, Oregon 97702 USA

Phone 541.388.4774 | Fax 541.385.9333 | www.DENTinstruments.com

TABLE OF CONTENTS

Introduction.....	5
New Features	5
ELITEpro SP™ SAFETY SUMMARY and SPECIFICATIONS	7
ELITEpro SP™ RÉSUMÉ DE SÉCURITÉ ET SPÉCIFICATIONS.....	10
ELITEpro SP™ TECHNICAL SPECIFICATIONS.....	13
ELITEpro SP™ CONNECTIONS	15
SECTION I: Installing, Setting Up, and Using the ELITEpro SP™	16
Install the ELOG Software on the Computer.....	16
Mount the ELITEpro SP	17
ELITEpro SP Connections	18
Complete the Wiring Connections.....	19
CT Connections.....	19
Voltage Connections	23
Digital Channel Connections	23
Power In/Out Connection	25
Connecting the USB Cable.....	25
Other Communication Connections.....	26
Communicating with the ELITEpro SP.....	27
Terminating the ELITEpro SP to Computer Connection	29
SECTION II: Elitepro SP, Best Practices	30
Creating and Using the Logger Setup Tables	30
Retrieve an Existing Setup Table from the ELITEpro SP	30
Open an Existing Setup Table on Your PC	31
Create a New Setup Table	31
Configure the Setup Table.....	32
Data Logging Controls	33
Memory Capacity	33
Quick Setups.....	34
Configure a Physical Power Channel	35
Calculated Power Channels	37
Send a Setup Table to the Logger.....	38
Save a Setup Table on the Computer	39

LED Diagnostics	40
PhaseChek™ LEDs	40
COMM—Communications LED	40
Power Measurement—Connecting Sensors & Configuring Channels	41
Wiring Label Conventions.....	42
Current Transformer (CT) Selection	42
CT Selection Examples.....	44
Connecting CTs and Configuring Channels.....	44
ELOG Quick Setup Wiring Diagrams	45
Using the ELOG Software	50
ELOG Speed Buttons.....	50
File Menu.....	52
Edit Menu	53
View Menu	54
Logger Menu	55
Tools Menu.....	70
Data Menu.....	72
Section III: Appendices	82
Appendix A—Installing Firmware Updates	82
Firmware Updates	82
Troubleshooting Firmware Update Installation Issues in Windows 7 64-Bit	83
Appendix B—Unusual Metering Systems	84
3-Phase Delta with a “Wild” (Red) Leg	84
2-½ Element Meters	85
Using The 2-Watt Element (2 Ct) Method On A 3-Wire Delta Service	86
Using The 3-Watt Element (3 Ct) Method On A 3-Wire Delta Service	87
Appendix C—Troubleshooting ELITEpro SP Driver Installation	89
Appendix D—AUTOPOLL: Unattended Data Collection.....	93
AutoPoll Menu Options.....	93
Understanding the Logger Lists.....	98
Appendix E—Calculated Power Channel Formulas	102
Wye Configuration L1-N, L2-N, L3-N	102
DELTA Configuration: L1-L2 and L3-L2	103
Appendix F—Communication Options	104
USB (Standard)	104
Ethernet LAN (Standard)	105
WiFi and Wireless Access Point Connection (Optional)	109
Bluetooth (Optional).....	115
Cell Modem Connection (Optional).....	118
Index	119

INTRODUCTION

The **ELITEpro SP** is a powerful and versatile tool for pinpointing electric usage and quantifying energy usage. It is capable of measuring, storing, and analyzing consumption data including Volts, Amps, Watts, Volt-Amps (VA), Volt-Amps reactive (VAR), Kilowatts (kW), Kilowatt Hours (kWh), KVAh, kVARh, and Power Factor of an electrical load or an entire building. The **ELITEpro SP** also offers some power quality features such as the ability to view in real-time voltage, current, and power waveforms and calculate harmonics to the 63rd order.

The **ELITEpro SP** is line-powered from the service being measured, eliminating the need for external power or space-consuming batteries at the job site. The measurements are stored in on-board, non-volatile memory in a time series format at an interval selected by the user. The **ELITEpro SP** can be mounted anywhere with its magnetic back and is small enough to be secured inside the electrical panel.

The Windows-based **ELOG** software package is used to setup the meter, display metered values, and retrieve and analyze the collected data. **ELOG** graphically displays recorded data, performs analysis and facilitates automatic remote data collection. Data is also easily exported to popular spreadsheet and database programs for additional analysis.

The **ELITEpro SP**[™] requires a computer and ELOG[™] software for setup, data retrieval, and data analysis. Download and test the software prior to the field installation of the logger.

If your installation is using ELOG with legacy devices, contact DENT Instruments for a prior version of this manual.

New Features

What's new in the **ELITEpro SP** and ELOG 12b software? A number of new features, some standard, some optional, have been added.

- PhaseChek LEDs now change to blue if the CT is on backward (-kW). The PhaseChek LEDs flash red if on the wrong phase, flash blue if negative power (CT backwards). If both problems exist, red then blue flashes alternately.
- Channel descriptions defined in the Setup Table now appear in the headers of the data file columns.
- Added **About the Connected Logger...** for information about the logger's serial number, firmware version number, Ethernet IP address, optional wireless communication, etc.
- Can now save a .csv into a different folder than where the .elog data file resides.
- A change of Setup Table line frequency persists between ELOG 12b sessions.
- RōCoils now can be used down to ~5A and up to 5,000!

- Default graph export type is now .jpg (not .emf).
- When importing a .csv file you now have the opportunity to name it something other than the name of the original .elog or .dat file name.
- When importing/exporting a .elog data file to a .csv data file all header names from Setup Table are retained.
- Using back space or delete to remove an entry in a Setup Table recording flag field actually deletes the entry instead of just showing it as removed (field was blank).
- Previously, the Midnight button on Extract a Range of Data/by Date used to get one extra record at the beginning of the extracted file because the first time stamp was 0:00:00, which is technically the end of the record *before* midnight. Now the first timestamp using the Midnight button is the timestamp *after* midnight.
- ELOG 12b may be run in the French language as well as English.
- ELOG 12b is compatible with Windows 8.
- Added kW, kVA, kVAR System Demands, Time of the peak demands, and Demand Window Size to the Data File Summary.
- Added Net kWh, +/- kWh, Net kVARh, +/- kVARh, and Net kVAh System Totalizers to Data File Summary.

AutoPoll

- Can now sort loggers in LoggerList by serial number.
- Can now launch AutoPoll without having to open a Logger List first.

And there's much more: As always, there have been a number of improvements made to the software to improve performance, increase ease of use, and reduce issues.

Enjoy these new features!

For further information on what's new or to provide comments and suggestions, contact us at:

800.388.0770 or info@DENTInstruments.com

ELITEpro SP™ SAFETY SUMMARY AND SPECIFICATIONS

<p>This general safety information is to be used by both the Logger operator and servicing personnel. DENT Instruments, Inc. assumes no liability for user's failure to comply with these safety guidelines.</p>	<p>CE</p> <p>cULus</p> <p>4RH8</p> <p>E186827</p>	<p>Conforms to UL Std 61010-1</p> <p>Certified to CSA Std C22.2 No. 61010-1</p>
<p>The ELITEpro SP™ is an Over-Voltage Category III device. Use approved rubber gloves with mechanical protection and goggles when operating the device.</p>		
<p>CAUTION: This LOGGER may contain life threatening voltages. QUALIFIED PERSONNEL MUST disconnect all high voltage wiring before using or servicing the LOGGER.</p>		



Warning: Use of this device in a manner for which it is not intended may impair its means of protection.

SYMBOLS ON EQUIPMENT



Denotes caution. See manual for a description of the meanings.

When connecting the **ELITEpro SP** to an AC load, follow these steps in sequence to prevent a shock hazard.



1. If possible, de-energize the circuit to be monitored.
2. Connect the CTs to the phases being monitored.
3. Connect the voltage leads to the different phases. Use proper safety equipment (gloves, mask, and protective clothing) as required for the voltages monitored.



 
Risk of electric shock. Life threatening voltages may be present. Qualified personnel only.



DO NOT EXCEED 600V Phase to Phase. This logger is equipped to monitor loads up to 600V. Exceeding this voltage will cause damage to the logger and danger to the user. Always use a Potential Transformer (PT) for loads in excess of 600V. The **ELITEpro SP** is a 600 Volt Over Voltage Category III device.



Dispose of properly.

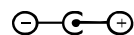

IN: 6-10 VDC, 500 mA

OUT: 6 VDC, 200 mA maximum



USB port

SENSOR LIMITATIONS

USE ONLY SHUNTED CURRENT TRANSFORMERS (CTs).

Do not use other CTs. Only use shunted CTs with a 333mV maximum output only. Serious shock hazard and logger damage can occur if unshunted CTs are used. The UL listing covers the use of the following DENT Instruments CTs that are UL Recognized and have been evaluated to IEC 61010-1:



CT-HSC-020-X (20A Mini), CT-HSC-050-X (50A Mini), CT-HMC-0100-X (100A Midi), and the CT-HMC-0200-X (200A Midi). The use of any other CT will invalidate the UL Listing of the **ELITEpro SP**.



Pulse: Use only "dry contact" non-energized pulse inputs. Use of energized pulse initiators can cause damage to the logger and a potential shock hazard to the user. Wiring must meet 600V AC CAT III rating.



Equipment protected throughout by double insulation (IEC 536 Class II). CAT III 80-600 VAC 125mA 50/60 Hz

MAINTENANCE

There is no required maintenance with the **ELITEpro SP**. Abide by the following items:

Cleaning: No cleaning agents, including water, shall be used on the **ELITEpro SP**.



Battery Life: The lithium battery is only used to maintain the date and clock settings during power failure and has a life expectancy of greater than 10 years. Contact DENT Instruments for service.

No accessories are approved for use with the **ELITEpro SP** other than those specified in the DENT Instruments product literature and price sheets.

If the logger appears damaged or defective, first disconnect all power and sensors. Call or email technical support for assistance.

DENT Instruments
Bend, Oregon USA
Phone: 541.388.4774
DENTinstruments.com
Email: techhelp@DENTinstruments.com

ELITEpro SP™ RÉSUMÉ DE SÉCURITÉ ET SPÉCIFICATIONS

<p>Cette information de sécurité est destinée à être utilisée à la fois par l'opérateur de l'enregistreur et le personnel de service. DENT Instruments, Inc n'assume aucune responsabilité pour l'utilisateur qui ne respecte pas les directives en matière de sécurité.</p>	  4RH8 E186827	<p>Conforme à UL Std 61010-1 Certifié CSA Std C22.2 No. 61010-1</p>
<p>Le ELITEpro SP est un appareil de surtension de catégorie III. Utiliser des gants en caoutchouc approuvé avec protection mécanique et des lunettes lors de l'utilisation de l'appareil.</p>		
<p>ATTENTION: Ce LOGGER peut contenir de hautes tensions qui peuvent être dangereuses. UN PERSONNEL QUALIFIÉ DOIT débrancher tous les câbles à haute tension avant d'utiliser ou de réparer du LOGGER.</p>		



Attention: L'utilisation de cet appareil d'une manière pour laquelle il n'est pas destiné peut annuler ses moyens de protection.

SYMBOLES DES EQUIPEMENTS



Signifie prudence. Voir le manuel pour une description de la signification.

En faisant la connexion du **ELITEpro SP** à une prise de courant alternatif, suivez ces étapes en ordre pour empêcher un risque de choc.

1. Décharger le circuit à contrôler.



2. Connectez le TC aux phases à surveiller.

3. Connectez les fils de tension à des phases différentes. Utiliser des équipements de sécurité (gants et des vêtements de protection) qui sont nécessaires pour les tensions surveillées.



 
Indique haute tension. Risque de choc électrique. Hautes tensions peuvent être présentes qui mettent la vie en danger. Personnel qualifié uniquement.



NE PAS DEPASSER 600V Phase à Phase. Ce compteur peut contrôler les charges jusqu'à 600V. Le dépassement de cette tension peut causer des dommages à l'appareil et du danger pour l'utilisateur. Utiliser toujours le potentiel transformateur (PT) pour des charges de plus de 600V. Le **ELITEpro SP** est un appareil à 600 V de surtension de catégorie III.



Se débarrasser de correctement.

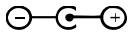

IN: 6-10 VDC, 500 mA

OUT: 6 VDC, 200 mA maximum



USB port

LIMITATIONS DE DÉTECTEUR

UTILISEZ SEULEMENT TRANSFORMATEURS DE COURANT (TC) SHUNTÉE.



N'utilisez pas d'autres TC. Utilisez seulement des TC shuntée avec une puissance maximale 333mV. Un sérieux risque de décharge électrique et des dommages à l'enregistreur peut se produire si des TC pas shuntée sont utilisés. Utiliser seulement les CTs des DENT Instruments suivants qui sont énumérés jusqu'au 600V/CATIII.

CT-HSC-020-U,CT-HSC-050-U,CT-HMC-0100-U,CT-HMC-0200-U



Impulsion: n'utilisez que "contact sec" impulsion intrants non charger. Utilisation de impulsion initiateurs charger peut causer des dommages à l'enregistreur et une décharge électrique potentielle pour l'utilisateur. Il faut que l'installation électrique satisfasse l'évaluation de 600V AC CATIII.



L'équipement protégé en double isolation (IEC 536 Classe II). CAT III 80-600 VAC 125mA 50/60 Hz

Entretien

Il n'y a aucun entretien requis avec le **ELITEpro SP**. Respectez les points suivants:

Nettoyage: Aucun agents de nettoyage, y compris l'eau, doit être utilisé sur le **ELITEpro SP**.

Espérance de Vie de la Batterie: La pile au lithium est utilisée uniquement pour maintenir les paramètres de date et d'heure en cas de coupure de le courant et a une espérance de vie de plus de 10 ans. Contactez DENT Instruments pour le service.

Pas d'accessoires approuvés pour une utilisation avec le **ELITEpro SP** sauf ceux spécifiés par DENT Instruments dans ses documentations sur les produits et également sur les prix.

Si le compteur semble endommagé ou défectueux, tout d'abord déconnecter le pouvoir de l'appareil. Alors s'il vous plaît appelez 541.388.4774 ou contacter par courriel l'assistance technique pour obtenir de l'aide.

DENT Instruments
Bend, Oregon USA
Phone: 541.388.4774
DENTinstruments.com
Email: techhelp@DENTinstruments.com

ELITEpro SP™ TECHNICAL SPECIFICATIONS


Specification	Description
Service Types	Single Phase-Two Wire, Single Phase-Three Wire, Three Phase-Four Wire (WYE), Three Phase-Three Wire (DELTA)
Voltage Channels	80-600VAC (80-800VDC), Line-to-Line : 1-600 (1-800 VDC) with External Power
Current Channels	Uses voltage output CTs (0-333 mVAC) for maximum safety
Maximum Current Channel Input Voltage	0-666 mVAC or 0-1.0VDC
Measurement Type	True RMS using high-speed digital signal processing (DSP)
Line Frequency	DC/50/60/400Hz
Waveform Sampling	12 kHz
Channel Sampling Rate (internal sampling)	200 samples/cycle at 60Hz 240 samples/cycle at 50Hz 30 samples/cycle at 400Hz
Data Interval	The default integration period is fifteen minutes. The choices are 1, 3, 15, 30 seconds; 1, 2, 5, 10, 15, 20 and 30 minutes; 1 and 12 hours; 1 day.
Measurements	Volts, Amps, Amp-Hrs (Ah), kW, kWh, kVAR, kVARh, kVA, kVAh, Displacement Power Factor (dPF). All parameters for each phase and for system total. ¹
Accuracy	Better than 1% (<0.5% typical) for V, A, kW, kVAR, kVA, PF ²
Resolution	0.01 Amp, 0.1 Volt, 0.1 Watt, 0.1 VAR, 0.1 VA, 0.01 Power Factor
LED Indicators	Tri-colors (red, green, and blue): 1 LED to indicate communication, 4 LEDs for correct phasing (green when voltage and current on the same phase; red when incorrectly wired, blue for wireless, <i>Bluetooth</i> wireless technology, and Ethernet), 2 LED output indicators
Pulse Output	Open collector 75 mA maximum current, 5 Hz maximum frequency
Communication	
USB (Standard)	USB standard. 1.8 M (6 FT) A-to-B USB Cable (included)
ETHERNET (Standard)	Standard RJ-45 Connector supports 10/100 MB Ethernet over Cat 5 or better. Configure for DHCP or Static IP address.
BLUETOOTH® WIRELESS TECHNOLOGY (Optional)	Internal antenna: typical conditions <10ft up to 100ft range. Requires <i>Bluetooth</i> wireless technology adapter on Window PC. Adapter must support the Serial Port Profile (SPP).
WiFi ADAPTER (Optional)	Internal WiFi adapter with two separate configurations: Internal antenna: typical conditions <75ft up to 300ft External 3 dbi antenna: typical conditions <150ft up to 300ft

Power	
Line Power Supply	From L1 Phase to L2 Phase: 80-600VAC CAT III 50/60Hz Line-to-Line. 125mA Maximum current input Non-user replaceable .5 Amp internal fuse protection
Power In (optional)	6-10 VDC maximum, 500 mA minimum
Power Out	6 VDC, 200 mA maximum
Mechanical	
Operating Temperature	-7 to + 60°C (20 to 140°F)
Humidity	5% to 95% non-condensing
Enclosure	ABS plastic, 94-V0 flammability rating
Weight	340 g (12 ounces, excluding sensors and leads)
Dimensions	69 x 58 x 203 mm (2.7" x 2.2" x 8.0")
Minimum System Requirements	
Operating System	Windows® 7 (32 or 64 bit), Windows 8, Vista (32 or 64 bit) or XP
Processor	Pentium Class 1 GHz or more recommended
Hard Drive	50 MB minimum available
Communications Port	One USB
CD Drive	CD or DVD drive required for software installation


¹ For 400Hz Volts, Amps, Amp-Hrs (Ah), kW, kWh, kVA, kVAh only

² Better than 2% at 400Hz

ELITEpro SP™ CONNECTIONS

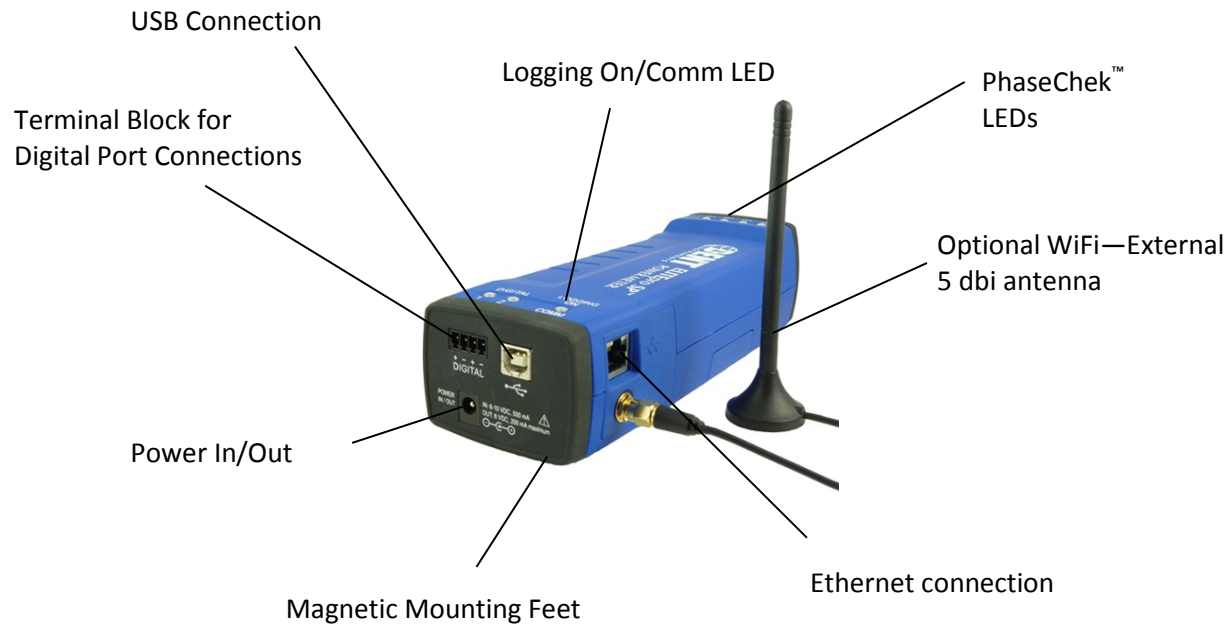

ELITEpro SP Layout

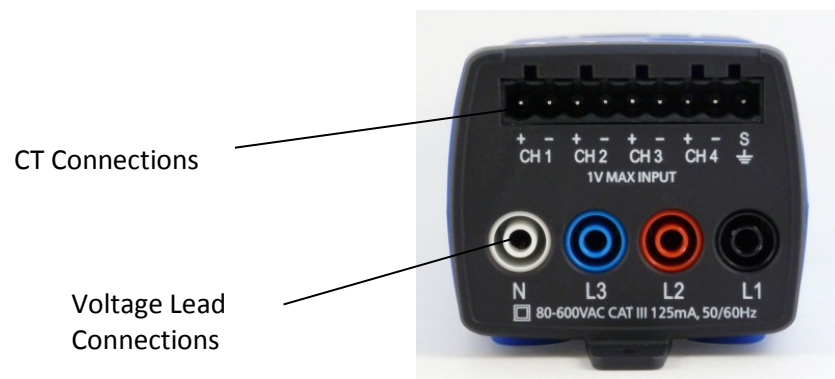

ELITEpro SP End View of CT and Voltage Lead Connections

SECTION I: INSTALLING, SETTING UP, AND USING THE ELITE^{pro} SP™

IMPORTANT: DO NOT CONNECT THE ELITE^{pro} SP TO YOUR COMPUTER UNTIL YOU HAVE INSTALLED ELOG 12b

Install the ELOG Software on the Computer

Complete this step prior to installation and ascertain that communication between the **ELITE^{pro} SP** and PC is established before going into the field.

NOTE: The new path for Data files in ELOG 12b is: C:\Users\UserName\Documents\DENT\ELOG\Data


ELOG is compatible with Windows® 7 (32 or 64 bit), Windows® 8 (32 or 64 bit), Vista (32 or 64 bit) or XP.

- 1) Insert the ELOG CD into the CD/DVD drive.

The installer starts automatically. If it does not, browse to the CD and locate the ELOGInstaller.exe program. Start the installer by double-clicking ELOGInstaller.exe.



- 2) Follow the directions on the screen to install the software.

NOTE: When ELOG is installed, another program, AutoPoll, is also installed. AutoPoll may be used for unattended and automatic data retrieval from a number of remote loggers where the computer calls the loggers. See *Appendix D—AUTOPOLL: Unattended Calling from the PC to the Logger*.

- 3) Install the **ELITE^{pro} SP** Driver on your computer.
 - a) Connect the USB cable to a USB port on your computer, inserting the other end in the USB port on the **ELITE^{pro} SP** (Hint: Look for this USB symbol: ). If a USB cable is to be used inside an electrical panel it must be rated to the appropriate voltage or wrapped in an appropriately rated insulating sleeve. The DENT-supplied cable does not meet this requirement without an insulating sleeve.
 - b) Perform the setup steps onscreen. You must allow ELOG to install the USB driver for the **ELITE^{pro} SP** to work correctly.
 - c) If the driver installation fails, see Appendix C: Troubleshooting **ELITE^{pro} SP** Driver Installation.

Mount the ELITEpro SP

The **ELITEpro SP** must be installed in an approved electrical panel or enclosure, following proper installation practices according to the local electrical codes.

	WARNING! Remove the LOGGER from all sources of voltage before mounting.
	AVERTISSEMENT! ENLEVEZ L'ENREGISTREUR DE TOUTES LES SOURCES DE TENSION AVANT DE MONTER.

- 1) To mount the **ELITEpro SP**, use the black tab on the end of the case containing the PhaseChek and voltage lead connections. Using a screw, securely mount the **ELITEpro SP** near a dedicated circuit disconnect breaker.

NOTE: Allow adequate space for accessing all ports and connectors. The mounting tab is intended for short term metering (less than 6 months) and must be subject to monthly monitoring by qualified personnel to verify the **ELITEpro SP** or its wiring have not shifted.

To remove the logger, remove the screw and roll the magnets off the cabinet it is mounted to.

NOTE: For temporary, spot load monitoring, the four magnets on the back of the **ELITEpro SP** case can be utilized to hold the logger on unpainted metal. The maximum combined weight of the logger and any attachments the magnets can support with a 4 times safety margin is 18oz (500 gm). The logger must be attended by the electrician when it is temporarily mounted by the four magnets.

In order to prevent injury upon removal, it is recommended practice to roll the device off, due to the strength of the magnets.



“Roll” the device, as seen below.



- 2) Mark the dedicated circuit as the disconnect for the **ELITEpro SP**.

ELITE^{PRO} SP CONNECTIONS

The **ELITE^{pro} SP** has the following connections:

- Four current transformers (CTs).
- Four voltage wire leads for connecting to voltage sources (L1, L2, L3, and Neutral).
- Two output ports. Each port can be individually used to output kWh, kVARh, or kVAh pulses.
- Power In/Out for connecting a DENT-provided external power supply or for powering external devices. Maintain polarity as marked on the case:

In: 6-10 Vdc, maximum input of 500 mA

Out: 6 Vdc output, up to 200 mA for powering other external devices

- USB connector for high speed downloads, setup, and communication with a computer. The **ELITE^{pro} SP** is also powered from the USB connection. If a USB cable is to be used inside an electrical panel, it must be rated to the appropriate voltage or wrapped in an appropriately rated insulating sleeve. The DENT-supplied cable does not meet this requirement without an insulating sleeve.
- Ethernet port for connecting the device to a network.
- An external coax connector for a WiFi antenna may also be present.

DID YOU KNOW? It is often easier to connect the CTs and voltage leads to the load to be monitored first, then simply plug the voltage leads and CT connectors into the **ELITE^{pro} SP** before mounting.

Complete the Wiring Connections

The following connections must be completed to install the **ELITEpro SP**. ALL WORK SHOULD BE PERFORMED BY A QUALIFIED ELECTRICIAN USING PROPER SAFETY EQUIPMENT.



CAUTION: THE ELITEpro SP SHOULD ONLY BE WIRED BY QUALIFIED PERSONNEL. HAZARDOUS VOLTAGES EXIST.



ATTENTION: LE ELITEpro SP ne doit être branché QUE par un personnel qualifié. TENSIONS DANGEREUSES sont présentes.

CT CONNECTIONS

NOTE: Use only inherently safe 333mV output CTs supplied by DENT. Never use current output CTs. The UL listing covers the use of the following DENT Instruments CTs that are UL Recognized and have been evaluated to IEC 61010-1:

CT-HSC-020-X (20A Mini), CT-HSC-050-X (50A Mini), CT-HMC-0100-X (100A Midi), and the CT-HMC-0200-X (200A Midi). The use of any other CT will invalidate the UL Listing of the **ELITEpro SP**.

- 1) Connect the CTs to the channel(s) on the **ELITEpro SP** labeled CH 1, CH 2, CH 3 and CH 4. The CT leads need to be connected to the terminal block using a small screwdriver. Connect each CT to a terminal block. For RōCoils, also connect the shield (bare) wires to the right-most ground terminal marked “S” (shield).
- 2) Place the CTs on the phase wires of the load to be monitored and corresponding to the phase of the voltage loads. The CTs must be placed as follows for each channel:
 - Left connector pin is the positive or high-side wire
 - Right pin is the negative or low-side

When using DENT Instruments current transformers, connect them as follows:

- Split-core CTs (removable leg)—the white CT wire is (+) and the black wire is (-).
- Clamp-on CTs (clothes-pin type)—the red wire is positive (+) and the black wire is negative (-).
- **RōCoil** CTs (flexible, Rogowski-style)—the white CT wire is (+) and the brown wire is (-). **If you are using RōCoil CTs, be sure to connect the bare wire to the “S” (shield) screw terminal.** This reduces interference and improves the accuracy of the CT.

Connecting Split-Core Style Millivolt CTs to a Load

- 1) Open the CT by holding on to the removable leg and pulling it apart.



- 2) Connect CT around the load conductor to be measured. Make sure the maximum current of the conductor does not exceed the maximum CT rating listed on the CT data sheet.



- 3) Carefully re-connect the removable leg while ensuring the CT core alignment matches. The conductor should be in the inside of the CT window.
- 4) Repeat Steps 1-3 if you are using more than one CT.

- 5) Connect the **white wire** on the CT to the **positive terminal** on the measuring device.
- 6) Connect the **black wire** on the CT to the **negative terminal** on the measuring device.



Current
Transformer
connections

Voltage lead
connections

Voltage Lead and Current Transformer Connections

DID YOU KNOW? Correct orientation of a CT is required to ensure proper measurement. If an arrow is shown on the CT label, it should be pointed toward the load. Otherwise, use the instructions printed on the CT.

CT 1 must be placed on the phase listed as V High for Channel 1 in the ELOG setup table. CT2, CT3 and CT4 must also correspond to the appropriate phase as shown in Channels 2, 3, and 4 in the ELOG setup table.

Connecting RōCoil CTs to a Load

To install the RōCoil CT to the conductor(s):



- 1) Open the CT by squeezing the connector latch and pulling it apart.
- 2) Connect the CT around the load conductor to be measured. Orient the CT so that the arrow on the CT case points towards the load. Make sure the maximum current of the conductor does not exceed 5,000 amps.
- 3) Push the connector back together with the conductor within the loop of the CT.



Repeat the above three steps if you are using more than one RōCoil CT.

To connect the CT's wires to the terminals on the ELITEpro SP:

- 1) Connect the CT's brown wire to the negative terminal on the connector. See photo below.
- 2) Connect the CT's white wire to the positive terminal on the connector.
- 3) Twist together the bare shield wires from the RōCoils and connect to the "S" shield terminal that is part of the CH 4 connector. This reduces interference and improves accuracy of the CT.

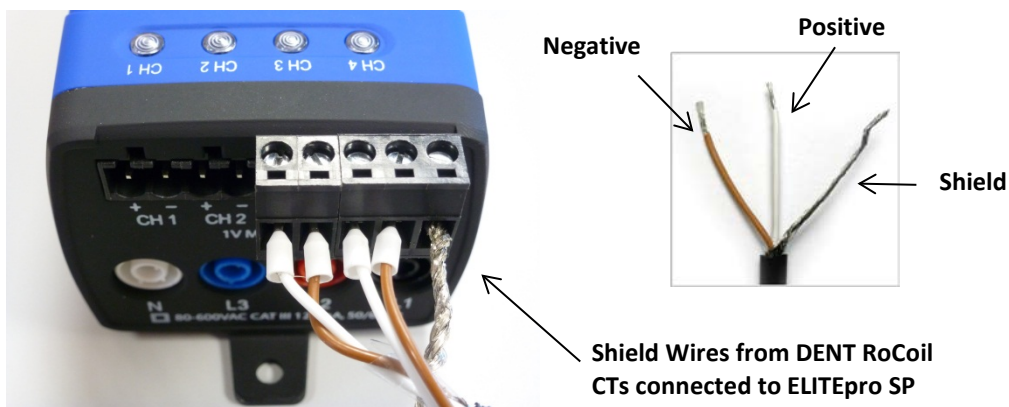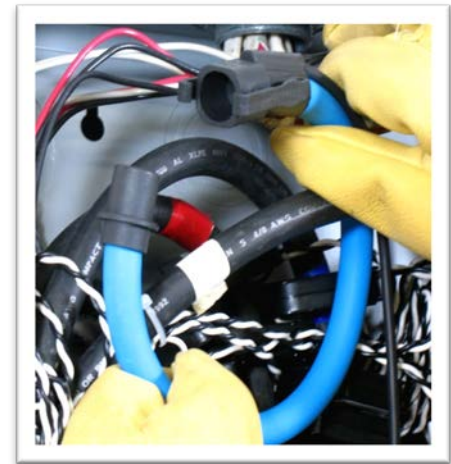

Connecting RōCoil CTs to an ELITEpro SP

VOLTAGE CONNECTIONS

- 1) Before connecting voltage leads L1, L2, L3, & N to the meter, first connect them to dedicated circuit breakers using either Croc-clips or lead adapters from DENT.
 - a) Refer to the wiring diagrams in Section 2 for wiring connection specifics. Follow local electrical codes during this installation.
 - b) **IMPORTANT:** Verify the breaker is marked as the disconnect breaker for the **ELITEpro SP**.
- 2) Connect lead adapters to the banana sockets at the end of the voltage leads.
- 3) Connect the voltage leads (L1, L2, L3, and N, as necessary) to the **ELITEpro SP**.

DID YOU KNOW? The ELITEpro SP is rated for 600V Over-Voltage Category III. Cat III is for measurements performed in the building. Examples are measurements on distribution boards, circuit-breakers, wiring including cables, bus bars, junction boxes, switches, and socket outlets in a fixed installation, and equipment for industrial use. Other equipment could include stationary motors with a permanent connection to the fixed installation.

DIGITAL CHANNEL CONNECTIONS

The Digital channels provide users with a way to export kWh, kVAh, and kVARh pulses to external devices. The ports are grounded when closed, and floating when open. For example, if the setup table Digital 1 is configured to output kWh pulses with a Scale of 1.0, Digital channel 1 will output a pulse for each kilowatt-hour of energy measured by the meter on Power Channel 1.

In Digital 2 the Scale is set to .001 (kWh), so a pulse would be generated for each Watt-hour of energy measured on Power Channel 2. *See below.*

For example, in the Digital Channels setup below: A desk lamp with a 100W bulb will use 0.1 kWh every hour; the meter produces a pulse once every 10 hours on Power Channel 1 and one pulse every hour on Power Channel 2. In contrast, a 1,000W heater will use 1 kWh every hour; the meter produces a single pulse once an hour on Power Channel 1 and 1,000 pulses every hour on Power Channel 2.

Digital Channels				
Digital	Name	Power Channel	Value	Scale
Digital 1				
<input type="button" value="Pulse Output"/>	Pulse OutPut Building 1	<input type="button" value="1"/>	<input type="button" value="KWh"/>	<input type="text" value="1.00"/>
Digital 2				
<input type="button" value="Pulse Output"/>	Pulse OutPut Building 1	<input type="button" value="2"/>	<input type="button" value="KWh"/>	<input type="text" value=".0010000"/>

Digital 1/2: Turns the channels on/off by choosing an option from the drop-down list.

- 1) Enter a descriptive name in the **Name** field to identify your logger (optional).
- 2) Choose which **Power Channel** (CT) will be used to generate pulses from the drop-down list.

NOTE: The Power Channel drop-down list displays any enabled channel, allowing users to choose which one(s) to use as a source for the pulses.

For example, if the setup table is only configured to measure one power channel, no other options will be available in the Power Channel drop-down list. If the setup table is configured to measure two power channels, you may choose either “1” or “2” from the drop-down list.

Users may wish to measure different pulse output variables on each channel. The Power Channels for Digital 1 and Digital 2 may both be set to “1,” or set to “1” and “2” in order to measure the pulse outputs of two Physical Power Channels, or both may be set to “2.” This enables users to measure pulse outputs with different data in the **Value** and **Scale** described in the following sections.

- 3) Select a parameter (kWh, kVARh, or kVAh) to be used as the source for pulses from the **Value** drop-down list.

The **ELITEpro SP** is capable of measuring the pulse output for kWh, kVAh, or kVARh. Only one may be measured at a time if a single digital output channel is turned on, but users have the option of measuring two different values concurrently from the same Power Channel if both Digital 1 and Digital 2 are in use.

- 4) Enter a scale in the **Scale** field to assign a significance to the pulses.

For example, if **22** is entered in the **Scale** field and **kWh** is selected for the **Value**, then each pulse generated by the meter is equal to 22 kWh on the selected Power Channel.

NOTE: The maximum output rate is five (5) pulses per second, or 5Hz, with a maximum current of 75mA and 30V DC.

To measure outputs pulse:

- 1) To count pulses, connect the wires of your measurement device to the +/- connection points on the **ELITEpro SP**.

NOTE: You can open ELOG 12b, and ensure that your PC and logger time are synchronized by selecting **Logger > Logger Clock > Synchronize Time to Match PC**.

- 2) Using an existing setup table (or follow the steps in Section 2 of this manual to create a new one), turn on the Digital 1 and/or Digital 2 channels.
- 3) Enter a descriptive identifier in the **Name** field. Choose your **Power Channel** to measure, the desired option from the **Value** drop-down list, and enter a scaling factor in the **Scale** field.
- 4) Click SEND SETUP TABLE to Logger.

NOTE: When logging is turned on or a new setup table is sent, pulse outputs start at the integration period relative to the hour that logging starts. For example, if you have a 5 minute integration period and you turn logging on at 1:05:01 PM (5 minutes and 1 second after the hour), logging AND pulse output accumulation will NOT start until 1:10:00 PM.

- 5) Upon completion of your pulse output measurements, disconnect the wires of your device from the **ELITEpro SP**.

POWER In/OUT CONNECTION

The Power In/Out connection can be used with the **ELITEpro SP** to measure loads where the line voltage is less than 80 VAC and the internal power supply will not operate (a small battery bank, for example) or where AC line voltages are not available and you want to use current transformers to record amps only. It can also be used as a 6V output to power any outside devices.


- 1) To power the **ELITEpro SP** using an external supply contact DENT Instruments for an appropriately rated power supply.
- 2) The **ELITEpro SP** can also supply 6V DC at up to 200mA to an external device when the **ELITEpro SP** voltage leads are connected to mains power between 80 and 600 VAC.

CONNECTING THE USB CABLE

- 1) Connect the USB cable to an available USB port on the computer and insert the other end in the COM port of the **ELITEpro SP**.

If a USB cable is used inside an electrical panel, it must be rated to the appropriate voltage or wrapped in an appropriately rated insulating sleeve. The DENT-supplied cable does not meet this requirement without an insulating sleeve.

- 2) Turn the breaker on.

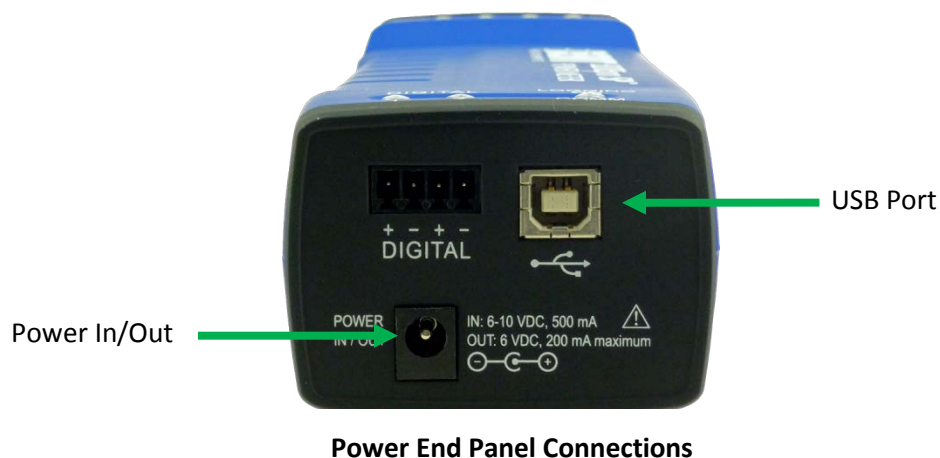

OTHER COMMUNICATION CONNECTIONS

- The RJ-45 Connector is for Ethernet Network connections.

NOTE: The Ethernet connector accommodates high speed downloads, setup and communication with a computer. If an Ethernet cable is to be used inside an electrical panel, it must be rated to the appropriate voltage or wrapped in an appropriately rated insulating sleeve.

- The Coax connector, if present, is for an optional external WiFi antenna.

NOTE: If an antenna is used inside an electrical panel, it must be at least 2" away from any live wiring or bus bars.

- An internal *Bluetooth* wireless technology antenna is an optional connection.

 


Communication Connections

Communicating with the ELITEpro SP


- 1) Plug the USB cable into the logger and the PC. ELOG 12b should auto-launch and connect to the **ELITEpro SP**. If not, double-click the ELOG icon on the PC desktop.


The ELOG window opens, displaying the menus and a row of speed buttons to quickly access frequently-used ELOG functions.

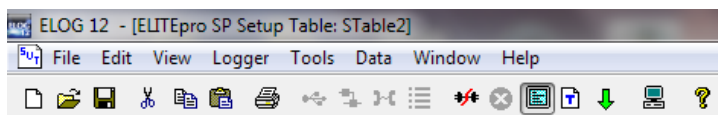

The **ELITEpro SP** and ELOG 12b software should connect automatically. If not, proceed with Step 2 below. If the automatic connection is made, proceed with Step 6 below.


- 2) Select **Tools > PC Setup** to open the **ELOG PC Setup** dialog box.

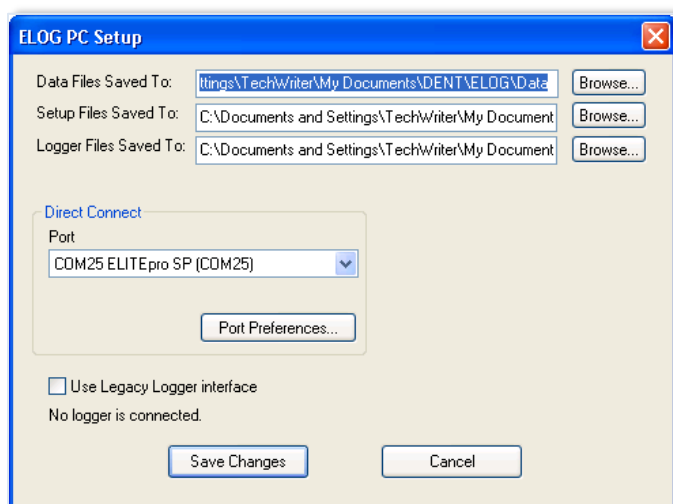

DID YOU KNOW? You can quickly set up the PC by clicking on the  **PC Setup** speed button. ELOG provides the user with “Friendly Ports™” in the Port drop-down list as a convenient way to identify where connections can be made.

- 3) In the middle section of the dialog box labeled **Direct Connect**, select the **Port** from the menu that corresponds to the computer’s COM port where you connected the USB cable.

Port Preferences: This option is used to hide COM Ports from ELOG, to change the order of COM Ports as they appear in the drop-down control, and the order they are searched when ELOG can't connect to a logger on the desired port.

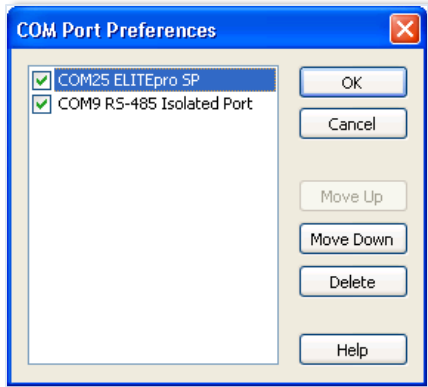


Ports that are unchecked will be hidden from ELOG. Ports are listed and searched in the order shown. The order can be changed by selecting a port and moving it up or down.


Every time ELOG connects to a logger, its port is moved to the top of this list.

- 4) Check the **Use Legacy Logger interface** checkbox to enable legacy menu items for customers using legacy products (ELITEpros). The default is unchecked, and the ELOG only displays features and menu items relevant to the current software release.
- 5) Click Save Changes.

For more information on the other **ELOG PC Setup** options see the *Tools Menu* content in Section 2.

- 6) Select **Logger > Communication > Direct Connect** to connect the computer to the ELITEpro SP.

DID YOU KNOW? To quickly make a USB or *Bluetooth* (optional) connection, use the  **Direct Connect** button.

To quickly disconnect, use the  **Disconnect** button.

The Logger Connection information displays along the bottom of the window, providing a status message as the computer connects to the **ELITEpro SP**. Simultaneously, the logger's COMM LED will begin to flash.

Logger serial number/firmware version number

ELOG fills the information fields of the Logger Connection window when the computer establishes communication with the **ELITEpro SP**. For more information on using ELOG, see *Using the ELOG Software*.


TX: <input type="checkbox"/>	Logger Type: <input type="text" value="ELITEpro SP"/>	Description: <input type="text" value="DENT ELITEpro SP"/>
RX: <input type="checkbox"/>	Logging: <input type="checkbox" value="On"/>	ID: <input type="text" value="SP1203055 / ES400.210"/>
ER: <input type="checkbox"/>	Baud: <input type="text" value="USB"/>	Port: <input type="text" value="COM25 ELITEpro SP"/>

- 7) Create and send a setup table to the logger. See *Creating and Using the Logger Setup Tables* for a complete description.
- 8) Use Logger > Display Real-Time Values to verify installation.

TERMINATING THE ELITE^{PRO} SP TO COMPUTER CONNECTION

To end the connection between the computer and the ELITE^{pro} SP, select **Logger > Communication > Terminate Connection**.

-or-

Use the **Disconnect**  speed button to quickly terminate the connection.

In order to prevent injury upon removal of a magnet-held mount, it is recommended practice to roll the device off, due to the strength of the magnets.



SECTION II: ELITEpro SP, BEST PRACTICES

Creating and Using the Logger Setup Tables

The **ELITEpro SP** requires that it be configured for use by first creating a “Setup Table” file and then loading the file into the meter. The **ELITEpro SP** is a flexible meter that can monitor a wide variety of parameters over a wide range of currents, voltages and service types. This requires that you determine what is recorded and at what intervals.

Setup Tables are created using the ELOG software and saved to the computer with a *.sut* file extension appended to the name. A *.sut* file may be:


- Loaded into the **ELITEpro SP** immediately or at a later time but prior to beginning a monitoring session
- Sent to any number of loggers
- Retrieved from an **ELITEpro SP**, modified and saved, and resent to the logger

RETRIEVE AN EXISTING SETUP TABLE FROM THE ELITEPRO SP

Existing Setup Tables on the **ELITEpro SP** can be retrieved once the computer and the Logger are connected and communicating.

- 1) Select Logger > Retrieve Logger Setup Table.


The Setup Table stored in the logger is retrieved and displayed, with the name of the file above the ELOG menu bar. The file can be modified and saved to disk or resent to the logger.

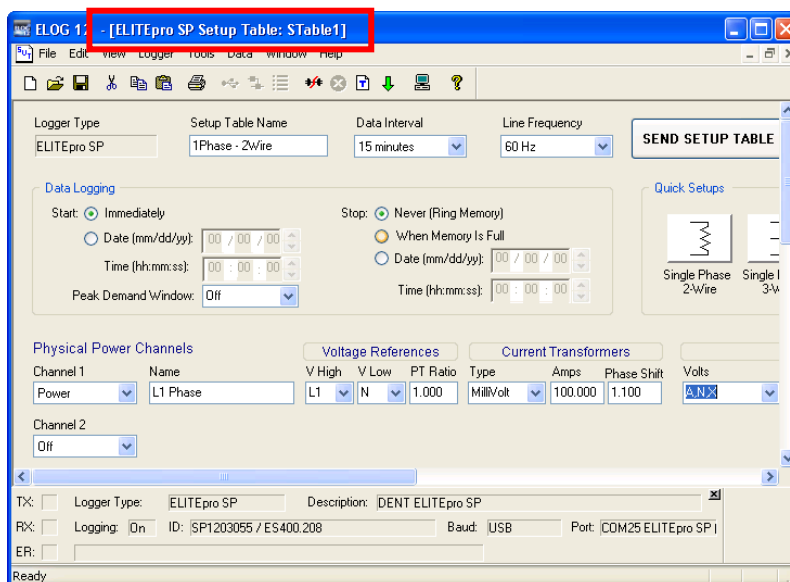

OPEN AN EXISTING SETUP TABLE ON YOUR PC

Existing Setup Tables on the computer can be opened, modified and saved.

- 1) Select **File > Open** to display the Open dialog box.

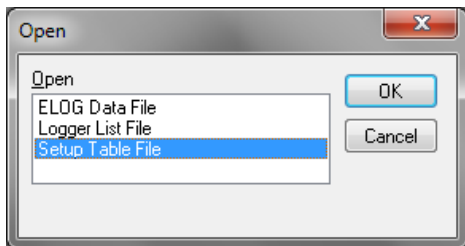

- 2) Select **Setup Table File** and click **OK**.
- 3) The Open dialog box displays. Select the desired Setup Table file or navigate to a folder containing additional files. The default folder is set to C:\Users\User Name\Documents\ELOG\Setups.
- 4) Select the file name and click **Open**.
-or-
Double-click the file name to open.

The Setup Table file can be reviewed, edited, and saved to disk or sent to the logger. For instructions on sending the file to the logger see ***Send a Setup Table to the Logger***.

CREATE A NEW SETUP TABLE

A new Setup Table can be created for any of the devices compatible with the current version of ELOG. This includes a variety of DENT Instruments legacy products in addition to the **ELITEpro SP**.

If the logger is not connected and communicating with the computer, Setup Tables can still be created and saved to the computer.

- 1) Select **File > New > Setup Table File** and click **OK**.

If your computer is currently connected to an **ELITEpro SP**, the ELOG software assumes the new setup file is for the connected device. Selecting **New** displays a Setup Table with the default parameters. If no **ELITEpro SP** or other logger is connected to the computer, the **Select A Setup Table Type** dialog box displays.

- 2) Select **ELITEpro SP** from the drop-down menu.
- 3) Click **OK**.

CONFIGURE THE SETUP TABLE

The Setup Table consists of several sections where the attributes of the **ELITEpro SP** are defined.

Logger Type	Setup Table Name	Data Interval	Line Frequency
ELITEpro SP	1Phase - 2Wire	15 minutes	60 Hz

Logger Type	ELITEpro SP is the default entry. This field cannot be edited once you are in the Setup Table window. Logger type must be chosen from the Select A Setup Table Type window.
Setup Table Name	Enter a name for the Setup Table. 20 character limit. This is helpful for identifying different Setup Tables. NOTE: The Setup Table name need not be the same as the .sut file name.
Data Interval	The default integration period is fifteen minutes. The choices are 1, 3, 15, 30 seconds; 1, 2, 5, 10, 15, 20 and 30 minutes; 1 and 12 hours; 1 day. This tells the logger at what time intervals data is to be stored in the memory. For example, if the integration period is set for 30 minutes and average watts is being monitored, then every 30 minutes the logger records the average power use (watts) for that channel over the preceding 30 minute interval, based on approximately 14,400 measurements of the monitored power draw. If Maximum (and/or Minimum) values are being recorded the highest (and/or lowest) of those 14,400 readings are also saved.
Line Frequency	Auto, 60 Hz, or 50Hz. Default is 60 Hz.

DATA LOGGING CONTROLS

The Data Logging section controls when the logger starts and stops collecting data. The default values are **Start Immediately** and **Stop Never (Ring Memory)**. Additional data logging options are defined below.

Data Logging

Start: ☒ Immediately ☐ Date (mm/dd/yy): 00 / 00 / 00 ☐ Time (hh:mm:ss): 00 : 00 : 00

Peak Demand Window: Off

Stop: ☒ Never (Ring Memory) ☐ When Memory Is Full ☐ Date (mm/dd/yy): 00 / 00 / 00 ☐ Time (hh:mm:ss): 00 : 00 : 00

Start Options

Immediately	Logging starts as soon as the Setup Table is sent to the logger.
Date (mm/dd/yy) Time (hh:mm:ss)	Logging starts at the designated date and time. Time should be set in a 24-hour format, e.g., 2:30PM should be entered as 14:30.
Peak Demand Window	The default is 15 Minutes. Choices are Off, 1, 2, 3, 4, 5, 6, 10, 12, 15, 20, 30, and 60 minutes.

Stop Options

Never (Ring Memory)	Logging is continuous, meaning when memory fills, the oldest records are replaced with the newest records, allowing for long term metering projects.
When Memory Is Full	Logging stops when the memory is full.
Date (mm/dd/yy) Time (hh:mm:ss)	Logging stops at the designated date and time. Time should be set in a 24 hour format, e.g., 2:30 pm should be entered as 14:30.

MEMORY CAPACITY

ELOG provides a convenient feature that calculates the approximate length of time required to fill the memory for any setup table. The feature is dynamic so that any time any parameter in a Setup Table affecting the memory duration is changed, the Memory Capacity field is updated, providing the (new) length of time the logger's memory will last.

Memory Capacity

19 Days 11.72 Hours


QUICK SETUPS

The Quick Setups section of the window provides four buttons to quickly configure the **ELITEpro SP**.

- 1) Click the **Quick Setup** button that represents your monitoring scenario.

Each button opens the CT Selection dialog window.


See **ELOG Quick Setup Wiring Diagrams** at the end of this section for more detail.

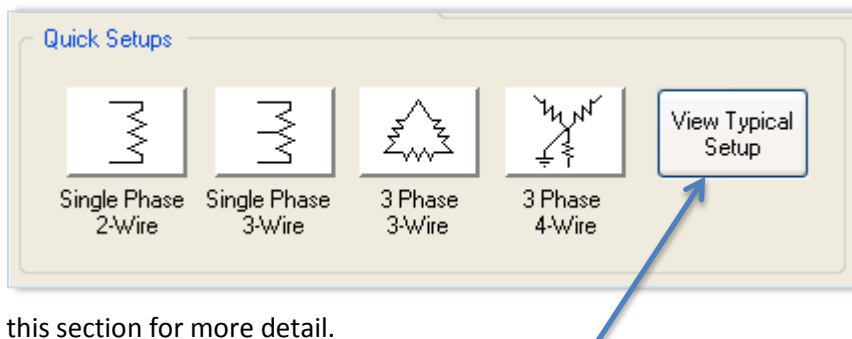

- 2) Enter the **CT Amps**, the primary current rating of the current transformer.

The default is 100 amps. The value to be used is printed on the CTs. Enter the value if it is not 100.

The **View Typical Setup** button is only visible *after* a Quick Setup selection is made.

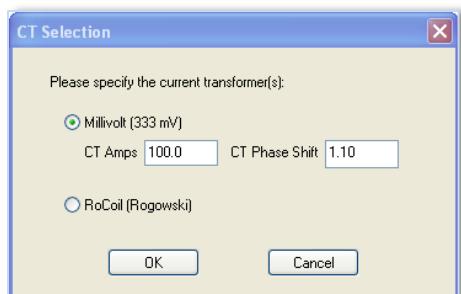

NOTE: If RōCoil (Rogowski) is selected, the CT Amps are set to 5,000 and the CT Phase Shift is set to 0.0 and may not be changed. All DENT RōCoils, regardless of size, use the same settings.

- 3) Enter the CT Phase Shift if different from the default value. Or, choose the RōCoil radio button if you are using them for your connection.
- 4) Click **OK**.

Once the Quick Setup is completed, the **View Typical Setup** button appears in the Quick Setup area of the screen. Clicking this button displays a wiring diagram that corresponds to the selected setup, showing how to connect the CTs and the voltage leads of the **ELITEpro SP**. The diagram can be printed and carried into the field for easy reference during installation. Refer to **ELOG Quick Setup Wiring Diagrams** for detailed information of each Quick Setup option.

Additionally, depending on the setup, **Calculated Power Channels** with configuration options display in the lower section of the Setup Table screen. See **Calculated Power Channels**.

CONFIGURE A PHYSICAL POWER CHANNEL

The **ELITEpro SP** has four configurable hardware channels corresponding to the current transformers or other sensors.

- 1) Click on the maximize button in the upper right-hand corner of the Setup Table window to display as much of the full screen as possible.
- 2) Click on the down arrow next to each channel you want to configure.

Physical Power Channels			Voltage References			Current Transformers		
Channel	Name		V High	V Low	PT Ratio	Type	Amps	Phase Shift
Channel 1								
Power	L1 Phase		L1	N	1.000	MilliVolt	100.000	1.100
Channel 2								
Off								

- 3) Select **Power** to turn on any channel. These channels refer to the current transformer inputs from the **ELITEpro SP**. Selecting **Power** displays the options for configuring the channel.
- 4) Next you can Name the channel, select the Voltage References, Current Transformers and the Recorded Values.

NOTE: The PT Ratio is used when monitoring voltages greater than 600 VAC (maximum rating of the **ELITEpro SP**). Use an instrument grade transformer with low phase shift and high accuracy since errors in the transformer will translate directly into errors in the recorded data. The PT Ratio value put into the Setup Table in the logger should be the transformer primary:secondary ratio. This feature is useful when monitoring high voltage loads such as found at a substation or on transmission lines.

CAUTION: If a PT (Potential Transformer) is not used on service voltages greater than 600V, the **ELITEpro SP** may overheat (or worse) causing irreparable damage and extreme danger to the user.

For example, a potential transformer is used to monitor a 4160 VAC load. The transformer steps the voltage down from 4160 to 120 VAC. The PT equals the transformer ratio or $4160/120 = 34.667$. Thus, 34.667 would be used for the PT value in the channel Setup Table.

The **Recorded Values** of a power channel tell the logger what parameters you wish to record and can be configured by selecting any combination of **Volts**, **Amps**, power (**kW**), volt-amps (**kVA**), power factor (**PF**), and volt-amps-reactive (**kVAR**) as desired for each channel you turned on.

Recorded Values					
Volts	Amps	KW	KVA	PF	KVAR
A	NXXH	A	A	A	ANXXH

For a description of the Recorded Values and their formulas for the Calculated Power Channels, see **Calculated Power Channels**.

The following options are available for configuring Physical Power Channels.

Physical Power Channel Options		
Name	Name the channel so it describes the location or item being monitored, such as "Water Heater" or "Pump L1 Phase." A maximum of 20 characters is allowed.	Optional
V High	High-side voltage. This is the "high" reference voltage that will be measured with respect to the reference "low" voltage, V Low.	Choices are: L1, L2, L3, Neutral.
V Low	Low-side voltage; reference for AC voltage.	Choices are: L1, L2, L3, Neutral.
PT Ratio	Potential Transformer turns ratio. This is used when a step-down transformer is needed to measure AC voltages greater than 600V. The default is 1.000.	
Type	This is the type of CT connected to the ELITE^{pro} SP .	Choices are: MilliVolt or RōCoil.
Amps	Depends on the type of CT selected. Displays the value entered in the CT Size screen.	
Phase Shift	Compensate for CT Phase Shift with this setting. Default setting is 1.1 degrees.	
Volts Amps KW KVA PF KVAR	To record any or all of these values use the menu to select an option.	Choices are: Average, Minimum, or Maximum. In addition the integrated hourly value in an option where appropriate.

See **Power Measurement—Connecting CTs and Configuring Channels** for information on how to properly configure the Setup Table for single-phase 2-wire, single-phase 3-wire, 3-phase 3-wire, and 3-phase 4-wire services.

CALCULATED POWER CHANNELS

Channels 5 and 6 are the Calculated Power Channels. They combine the data from two or more power channels (also called "hardware" or "physical channels") and are used primarily for calculating *total system* volts, amps, kW, kVA, power factor, and kVAR in polyphase or multiple single phase systems.

Channel	Name	Combine Channels	Volts	Amps	KW	KVA	PF	KVAR
Channel 5	2 Phase System Total	<input checked="" type="checkbox"/> 1 <input checked="" type="checkbox"/> 2 <input type="checkbox"/> 3 <input type="checkbox"/> 4	A,X	A,N,X,H	A	A,N,X,H	A	N,X
Channel 6	3 Phase System Total	<input checked="" type="checkbox"/> 1 <input checked="" type="checkbox"/> 2 <input checked="" type="checkbox"/> 3 <input type="checkbox"/> 4	A,N	A,N	A,X	A,X,H	A,N	A,N

The Calculated Power Channels are frequently used to:

- Record total system power parameters on three phase loads.
- Optimize the logger's memory by collecting and combining data from two or more channels instead of collecting data from two (or more) separate channels.

For a description of the formulas used to compute channels 5 & 6 based on the CT input channels 1–4, see **Appendix E—Calculated Power Channel Formulas**.

DID YOU KNOW? The Setup Table Calculated Power Channels displays:

None—If only one power channel is turned on in a Setup Table, then channels 5 and 6 do not appear.

Channel 5—If two power channels are turned on, then only channel 5 will appear.

Channels 5 and 6—If three or four power channels are turned on, then channels 5 and 6 will appear.

By default, the Calculated Power Channels are set to "Off" when they initially display in the Setup Table window.

Combining Channels

To combine channels and maximize memory use:

- Depending on your setup table configuration, ensure that the **Physical Power Channels** you wish to combine are set to **Power**.

It is **recommended** that the **Recorded Values** flags of **Volts**, **Amps**, **kW**, **kVA**, **PF**, and **kVAR** for the individual channels be left on. However, if maximum use of the memory is required they can be turned off.

Default recording flags may have the **Average** checkbox selected in each drop-down menu for the Recorded Values.

- Under **Calculated Power Channels**, turn on the channel by selecting **Power Sum** from the Channel 5 menu. Perform the same function for Channel 6, if desired.
- Enter a **Name** for the Calculated Power Channels (optional).
- Select the Physical Power Channels to be added together in the Combine Channels box.

- 5) Set each recording flag for **Volts, Amps, kW, kVA, PF, and kVAR** as desired.
- 6) Click **Send Setup Table to Logger** to send the Setup Table to the logger and make it the active table.

The following graphic is an example of a Setup Table for a 3-phase 4-wire connected load using a Calculated Power Channel with **Combine Channels 1, 2, and 3** selected to optimize memory usage on the **ELITEpro SP**.

Physical Power Channels		Voltage References			Current Transformers			
Channel	Name	V High	V Low	PT Ratio	Type	Amps	Phase Shift	
Channel 1	Power	L1 Phase	L1	N	1.000	MilliVolt	100.000	1.100
Channel 2	Power	L2 Phase	L2	N	1.000	MilliVolt	100.000	1.100
Channel 3	Power	L3 Phase	L3	N	1.000	MilliVolt	100.000	1.100
Channel 4	Off							

Calculated Power Channels		Combine Channels			
Channel	Name	1	2	3	4
Channel 5	Power Sum	3 Phase System Total			
Channel 6	Off				

NOTE: The Recorded values are not shown for simplicity.

SEND A SETUP TABLE TO THE LOGGER

When you've finished selecting the configuration options, the Setup Table needs to be sent to the **ELITEpro SP**.

- 1) After connecting to the logger, click on one of the **SEND SETUP TABLE to Logger** command buttons on the Setup Table screen. Separate buttons are available at the top and lower left of the Setup Table screen. Sending a new Setup Table to the logger deletes any data still stored in the logger. ELOG 12b displays the following dialog box to ensure desired data is not lost:

SEND SETUP TABLE to Logger



- 2) Click **Send SUT and Delete Data**. This loads the new Setup Table into the meter and clears the data in the logger. The **Logging is now ON** dialog box briefly displays.

-or-

Click **Download Data then Send SUT**. The **Select A Directory and A Name...** dialog box displays. Enter the name and location for the Setup Table data file. After the data is downloaded to the PC and saved, ELOG automatically sends the new Setup Table to the meter and starts logging.

-or-

Click **Cancel**.

ELOG automatically initiates logging when a Setup Table is downloaded to the Logger unless the Data Logging delayed start time is being used.

- 3) Select **Logger > Display Real-Time Values > Show As Text** to view the real-time values measured by the logger.

The screenshot shows the 'Real-Time Channel Values' window. At the top, it displays 'Serial Number: SP1203055', 'Description: DENT ELITEpro SP', and 'EPROM Ver: ES400.198'. Below this is a table with 6 channels. Channels 1-4 are 'POWER' and show values for V, A, kW, kVA, PF, and kVAR. Channels 5 and 6 are 'Off'. Below the table, there are status indicators: 'Line Frequency: 9694.1 Hz', 'Memory Remaining: 5.38 Days', 'Memory Used: 0.0%', 'Logger Date: 12/19/2012', 'Logger Time: 11:24:38', 'Logging Is: On', 'Memory Type: Ring', 'Integration Period: 15 Seconds', and a 'Display Update: ON' button. An 'Exit' button is at the bottom right.

CH	Channel Type	Channel Values					
1	POWER	0.0 V	0.00 A	0.000 kW	0.000 kVA	1.00 PF	0.000 kVAR
2	POWER	0.0 V	0.00 A	0.000 kW	0.000 kVA	1.00 PF	0.000 kVAR
3	POWER	0.0 V	0.00 A	0.000 kW	0.000 kVA	1.00 PF	0.000 kVAR
4	POWER	0.0 V	0.00 A	0.000 kW	0.000 kVA	1.00 PF	0.000 kVAR
5	Off						
6	Off						

Line Frequency: 9694.1 Hz
Memory Remaining: 5.38 Days
Memory Used: 0.0%
Logger Date: 12/19/2012
Logger Time: 11:24:38
Logging Is: On
Memory Type: Ring
Integration Period: 15 Seconds
Display Update: **ON**
Exit

SAVE A SETUP TABLE ON THE COMPUTER

When you've finished selecting the configuration options, the Setup Table can also be saved for downloading to the **ELITEpro SP** at a later time.

Select **File > Save** to save the Setup File to disk, or **Save As** to save to disk using a different file name or folder location.

Now the ELOG software is configured and the **ELITEpro SP** is connected and monitoring can begin. The following sections of this chapter provide assistance in making sure the logger is performing correctly.

DID YOU KNOW? If a standard Setup Table is created using one of the Quick Setup buttons, then a new command button appears called **View Typical Setup**. This button displays a schematic graphic of how to connect the **ELITEpro SP** to a load. The schematic can be printed and carried into the field for easy reference during installation.

LED Diagnostics

PHASECHEK™ LEDs

PhaseChek is a unique feature of the **ELITEpro SP** that simplifies installation by ensuring proper CT-to-voltage phase installation and avoiding faulty data collection.

The **ELITEpro SP** has four tri-color PhaseChek LEDs, one green/red/blue LED for each CT input. These LEDs provide the following information:

- All LEDs are green—the system power factor is greater than 0.55 and the CTs are properly placed on the corresponding voltage phases and the CT is oriented properly (arrow toward the load).
- LED is red—there is a CT voltage phase placement error. (Or the Power Factor is less than 0.55.)
- LED is blue— the CT is on backward (-kW) with the arrow pointed away from the load.
- LED flashes red and blue—CT is on backwards and on the wrong voltage phase

NOTE: If the Physical Power Channel (CT) is turned off in the Setup Table, the corresponding PhaseChek™ will be dark.

DID YOU KNOW? If the total system power factor is less than 0.55, the LEDs will be red even if connected properly. This situation is rare but could occur if, for example, the load to be monitored is a lightly loaded electric motor. It is common for an individual phase power factor to be less than 0.55 and the corresponding LED will be red.

COMM—COMMUNICATIONS LED

The **ELITEpro SP** COMM LED flashes different colors (green, blue, red) to indicate that the logger is connected, logging information, and communicating with the computer. Which color indicating which condition is dependent on the version of firmware being used by the logger. However; one color always indicates the same condition: green will flash approximately once per second when the **ELITEpro SP** is logging and communicating with the computer.

Power Measurement—Connecting Sensors & Configuring Channels

The **ELITEpro SP™** can monitor AC power loads ranging from single phase, 2-wire to 3 phase-4 wire systems and up to 600 VAC at 50, 60, or 400Hz.

Read all warning symbols described in the Safety section **AT THE BEGINNING OF THIS MANUAL**.

Use the proper Current Transformers (CTs) for the load being monitored. For a complete discussion on this, see the section *Current Transformer (CT) Selection* below.



CAUTION: DO NOT USE UNSHUNTED CTs. ONLY USE SHUNTED CTs FROM DENT INSTRUMENTS WITH 333 mVAC OUTPUT. ALL DIAGRAMS IN THIS SECTION SHOW THE CT PHASING ARROW POINTING TOWARD THE LOAD.

Always orient the arrow on the CT towards the load or as otherwise indicated on the CT. All diagrams in this section will show the CT phasing arrow oriented towards the load.

Always connect the white neutral wire to the neutral bus bar, if available, or to the L2 or L3 phase if metering a 3-phase, 3-wire system with no neutral.



WARNING: Use of this device in a manner for which it is not intended may impair its means of protection. Do not exceed 600 VAC into voltage inputs!



When connecting the **ELITEpro SP** to an AC load, follow these steps in sequence to prevent a shock hazard.

- 1) If possible, de-energize the circuit to be monitored.
- 2) Connect the CTs to the phases being monitored.
- 3) Connect the voltage leads to the different phases. Use proper safety equipment (gloves, mask, and protective clothing) as required for the voltages monitored.

WIRING LABEL CONVENTIONS

When connecting the voltage wires to the AC line, the following wire colors should be used for the different phases:

Voltage Phase	United States (Voltage Phase Color)	International (Voltage Phase Color and Wire Label)
L1 phase	Black	Follow local code
L2 Phase	Red	Follow local code
L3 Phase	Blue	Follow local code
Neutral	White	Follow local code

ELITEpro SP Voltage Phase Wire Colors

NOTE: U.S. color conventions are used in the document's diagrams. **ELITEpro SP™** meters supplied for international markets are provided with 5 colors of voltage leads: red, black, blue, white, and yellow. The voltage lead sockets on the meter are all black in color and labeled L1, L2, L3, and N.

CURRENT TRANSFORMER (CT) SELECTION

NOTE: The UL listing covers the use of the following DENT Instruments CTs that are UL Recognized and have been evaluated to IEC 61010-1:

CT-HSC-020-X (20A Mini), CT-HSC-050-X (50A Mini), CT-HMC-0100-X (100A Midi), and the CT-HMC-0200-X (200A Midi). Though all other CTs provided by DENT Instruments have been tested and certified to the same IEC 61010-1 standard by other Nationally Recognized Testing Laboratories (NRTLs), the use of any other CT will invalidate the UL Listing of the **ELITEpro SP**. This is simply a decision made by UL, and in the opinion of DENT Instruments, all CTs provided are equally safe to use.

Proper CT selection is critical for accurate results. Use CTs with the smallest diameter to fit around the wire(s), and whose rated amperage is not less than 100% of the largest load expected.

Generally, best CT accuracy will result when the load operates *as close to the full rating* of the CT as possible. Do not use CTs whose maximum current rating greatly exceeds the maximum current of the load of the item being monitored.

The following table contains a list of some of the DENT Instruments CTs.

Mini	Small Split Core	Midi	Medium Split Core	Large Split Core	Clamp-on	RōCoil (Rogowski)
20A	5A/15A (high accuracy)	100A	100A	600A	150A	5,000A
50A	50A	200A	200A	1000A	500A	RōCoil mV™ Various sizes available. Contact DENT Instruments.
	100A		400A		1000A	
			600A			

Current Ratings of CTs Available from DENT Instruments

All of the CTs in the table are available from DENT Instruments. These are internally shunted CTs (333mV output) which make them safe to handle even when connected to an energized wire. They are also case-insulated for 600V phase-to-phase service. Do not use on services with higher voltages.

The following table is a list of the UL recognized (61010-1) CTs that can be used to maintain the UL listing.

DID YOU KNOW? You can extend the leads for a RoCoil up to 100 feet and a split core up to 1000 feet without loss of accuracy, provided that the new wire is of the same size or larger than the CT lead wire.

High Performance 20A Mini	High Performance 50A Mini	High Performance 100A Midi	High Performance 200A Midi
CT-HSC-020-U	CT-HSC-050-U	CT-HMC-0100-U	CT-HMC-0200-U
CT-HSC-020-B	CT-HSC-050-B	CT-HMC-0100-B	CT-HMC-0200-B

UL Recognized CTs



CAUTION: DO NOT USE UNSHUNTED CTs. ONLY USE SHUNTED CTs WITH 333 mVAC OUTPUT. ALL DIAGRAMS IN THIS SECTION SHOW THE CT PHASING ARROW POINTING TOWARD THE LOAD.

CT SELECTION EXAMPLES

The following table provides three example scenarios for selecting the proper CT.

Example	Scenario Description	Correct CT
1	A single phase motor with a 20 amp breaker (rated as 10 amps running load) with #12 wire.	Use a 20 or 50 amp split core or 150 amp clamp-on
2	Four lighting circuits, #12 wires with 20 amp breakers. When all lights are on, the amperage measures 45 amps.	Use a 50 amp CT
3	A single heating circuit, with a 2/0 conductor and a 60 amp breaker.	Use a 100 amp CT

Example Scenarios for CT Selection

DID YOU KNOW? If a utility already has a meter with a 5A secondary CT(s) connected to a load being monitored, you may connect a 5A split core CT around the output (secondary) of the utility's CT. To calculate the CT value to be used in the Logger setup table, multiply the utility CT ratio by the **ELITEpro SP** CT size (e.g. if the utility CT is 4000:5 and the ELITE Logger CT is 50A use $(4000/5) \times 50 = 40,000$ for the value of the CT in the logger Setup Table.

CONNECTING CTs AND CONFIGURING CHANNELS


This section describes how to connect the CTs and the voltage leads to different service types, and how to configure the **ELITEpro SP** channel(s) for monitoring.

- 1) Connect each CT lead to the channel pins of the black connector termination block.

For each channel, the left connector pin is the positive or high-side wire and the right pin is the negative or low-side. Connect DENT Instruments-supplied current transformers as follows:

- Split-core CTs (removable leg) and hinged CTs—The white CT wire is (+) and the black wire is (-)
- Clamp-on CTs (clothes pin type)—The red lead is the (+) wire and the black lead is the (-) wire
- RōCoils— The white lead is the (+) wire and the brown lead is the (-) wire

DID YOU KNOW? Correct polarity is required to ensure proper orientation of the CT. A CT with the lead wires switched on the connector is the same as putting the CT on the monitored wire backwards.

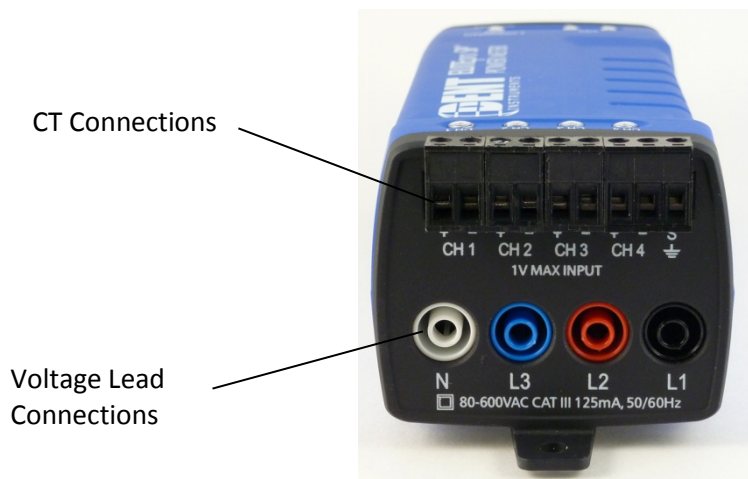


ELITEpro SP End View of CT and Voltage Lead Connections

- 2) Apply the CTs to the phases being monitored observing proper CT orientation.
- 3) If there is an arrow on the CT label, the label should point towards the load. Otherwise, use the instructions printed on the CT, for example, "This Side Toward Load."
- 4) Connect the voltage leads to the different phases. Connect the Neutral wire first, then the remaining voltage sense (phase) wires.


ELOG QUICK SETUP WIRING DIAGRAMS

When a Quick Setup is selected, the **View Typical Setup** button appears in the Quick Setup area of the screen. Clicking this button displays a wiring diagram that corresponds to the selected setup, showing how to connect the CTs and the voltage leads of the **ELITEpro SP**. The diagram can be printed and carried into the field for easy reference during installation.


The following pages show the diagrams available for each Quick Setup.

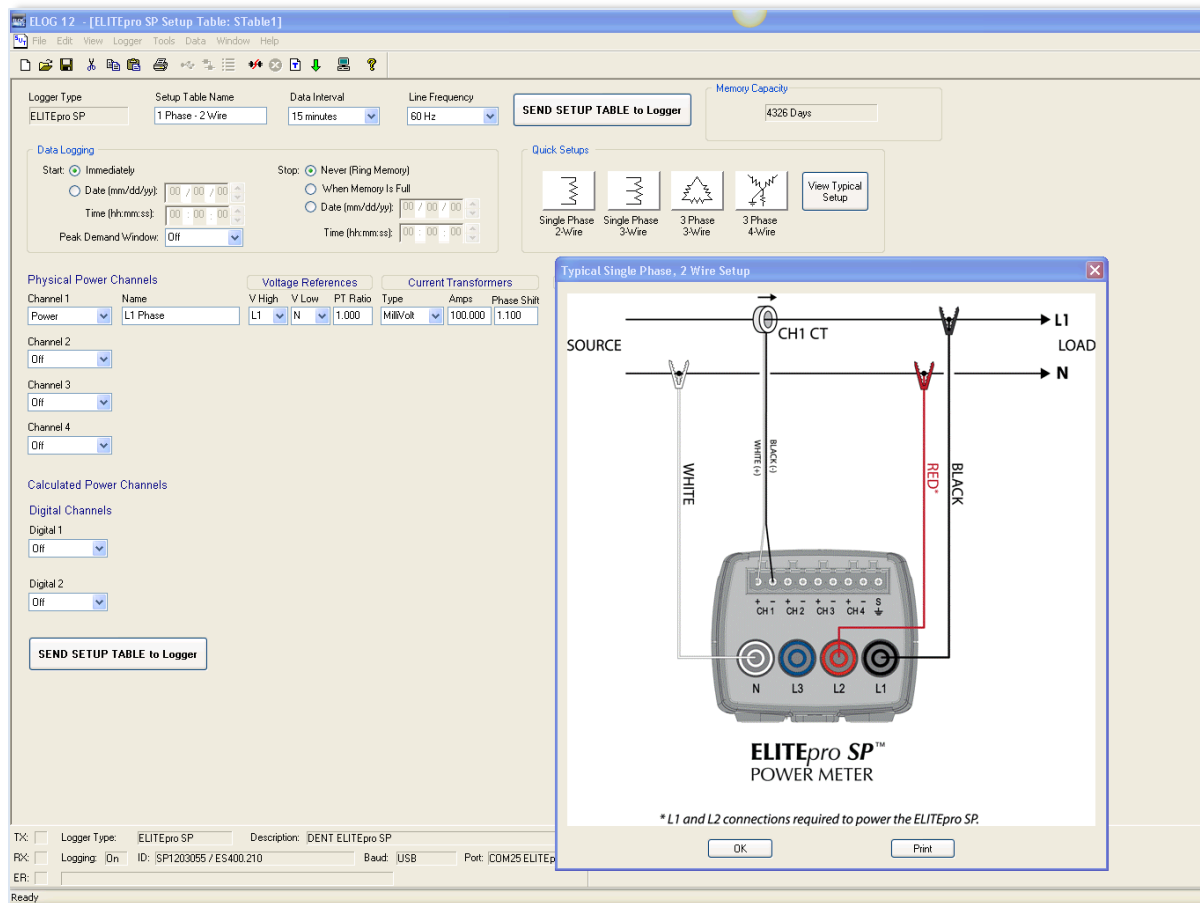

Single Phase, 2-Wire

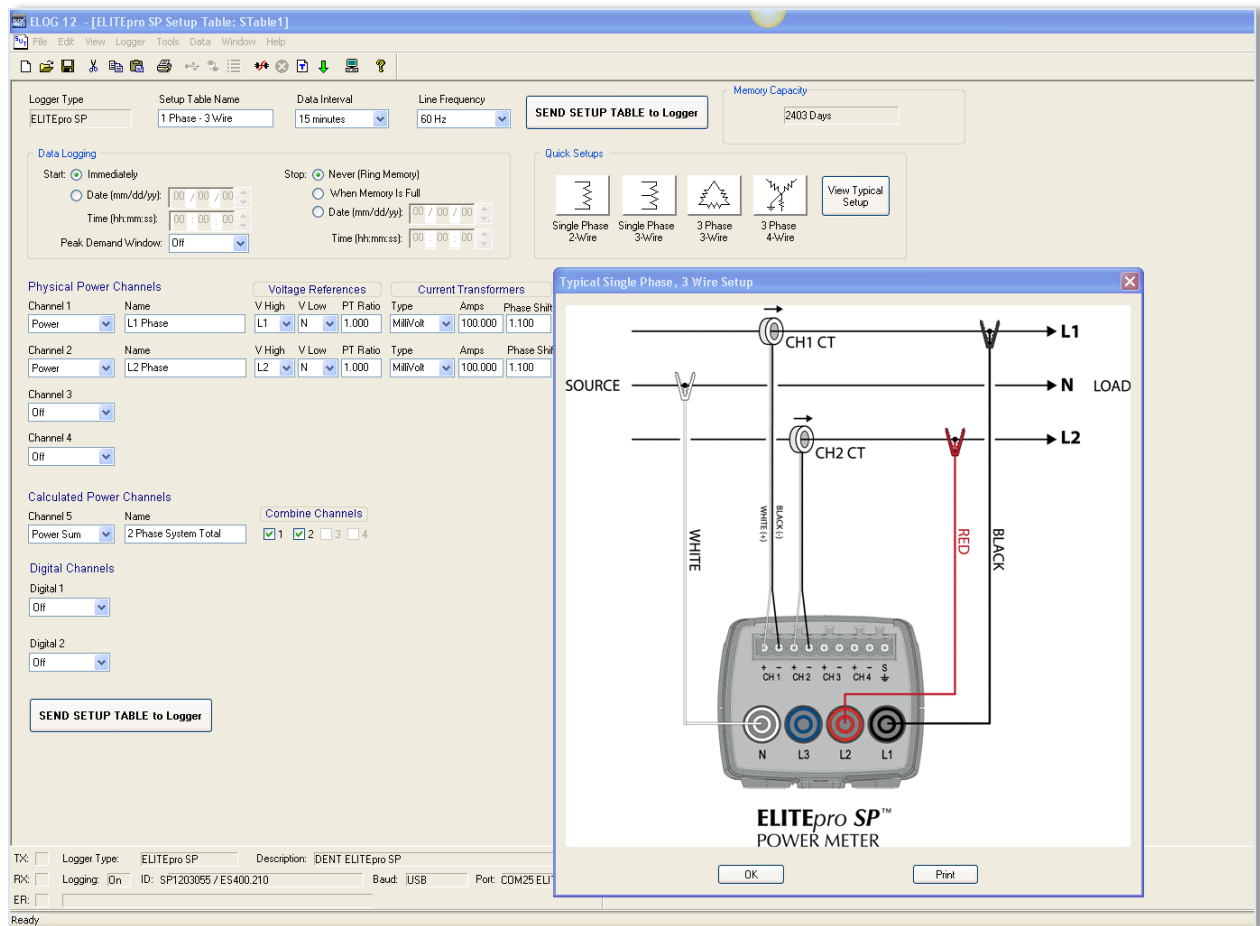

Single Phase, 3-Wire

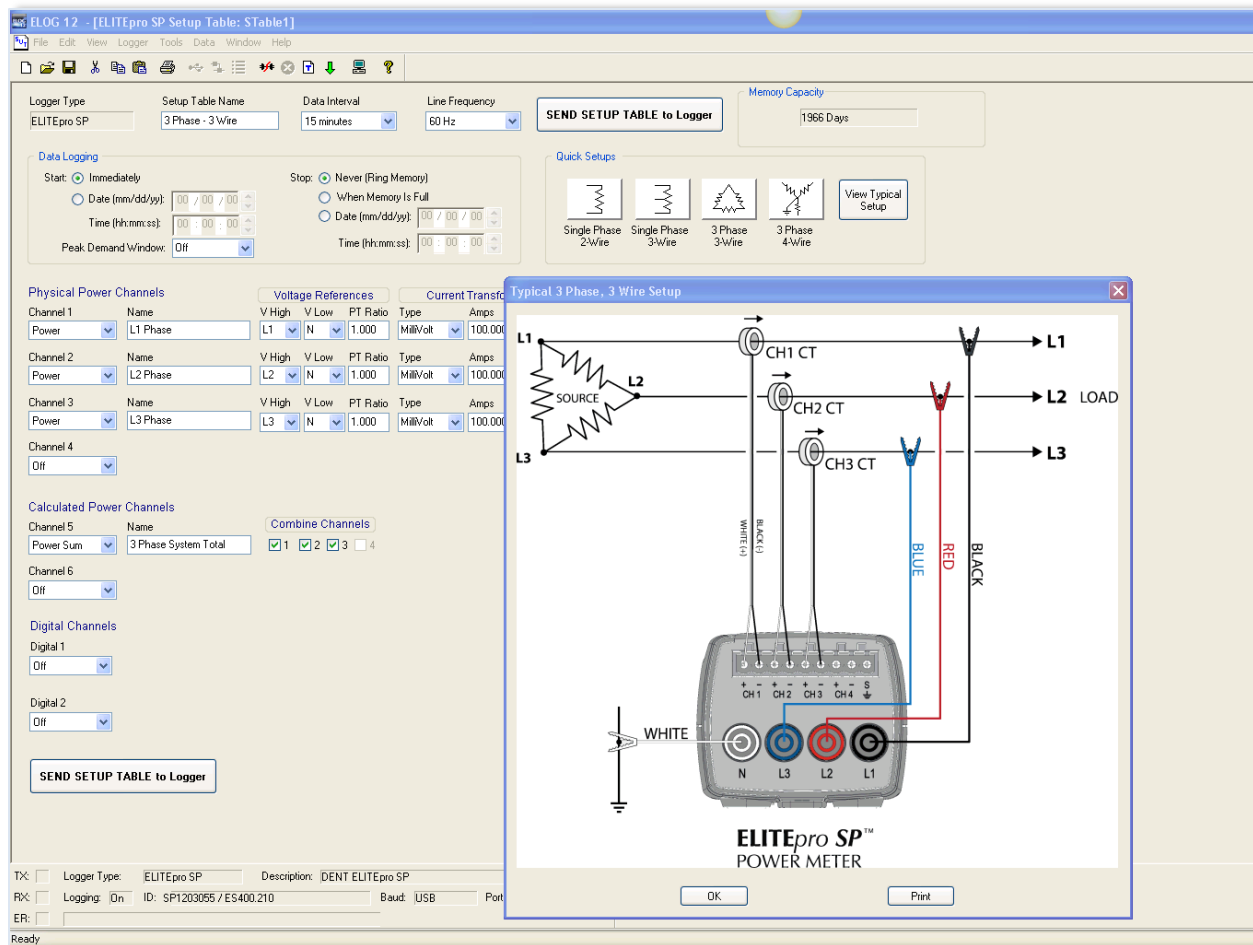

3 Phase, 3-Wire Delta

LOG 12 - [ELITEpro SP Setup Table: STable1]

File Edit View Logger Tools Data Window Help

Logger Type: ELITEpro SP Setup Table Name: 3 Phase - 4 Wire Data Interval: 15 minutes Line Frequency: 60 Hz Memory Capacity: 1966 Days

SEND SETUP TABLE to Logger

Data Logging

Start: ☒ Immediately ☐ Date (mm/dd/yy): 00 / 00 / 00 Stop: ☒ Never (Ring Memory) ☐ When Memory Is Full ☐ Date (mm/dd/yy): 00 / 00 / 00

Time (hh:mm:ss): 00 : 00 : 00 Time (hh:mm:ss): 00 : 00 : 00

Peak Demand Window: Off

Quick Setup

Single Phase 2-Wire Single Phase 3-Wire 3 Phase 3-Wire 3 Phase 4-Wire View Typical Setup

Physical Power Channels

Channel	Name	V High	V Low	PT Ratio	Type	Amps	Phase Shift
Channel 1	L1 Phase	L1	N	1.000	MilliVolt	100.000	1.100
Channel 2	L2 Phase	L2	N	1.000	MilliVolt	100.000	1.100
Channel 3	L3 Phase	L3	N	1.000	MilliVolt	100.000	1.100
Channel 4	Off						

Calculated Power Channels

Channel 5: Name: 3 Phase System Total Power Sum: ☒ 1 ☒ 2 ☒ 3 ☐ 4

Digital Channels

Digital 1: Off

Digital 2: Off

SEND SETUP TABLE to Logger

Typical 3 Phase, 4 Wire Setup

ELITEpro SP™ POWER METER

OK Print

TX: ☐ Logger Type: ELITEpro SP Description: DENT ELITEpro SP

RX: ☐ Logging: On ID: SP1203055 / ES400.210 Baud: USB Port: COM25 ELITE


ER: ☐

Ready


3 Phase, 4-Wire Wye

Using the ELOG Software

When ELOG starts, the window is empty until a task is requested, whether that be opening an existing Setup Table, creating a new one, or importing a data file. The following window displays with the ELOG menus and buttons for accessing frequently used ELOG features.

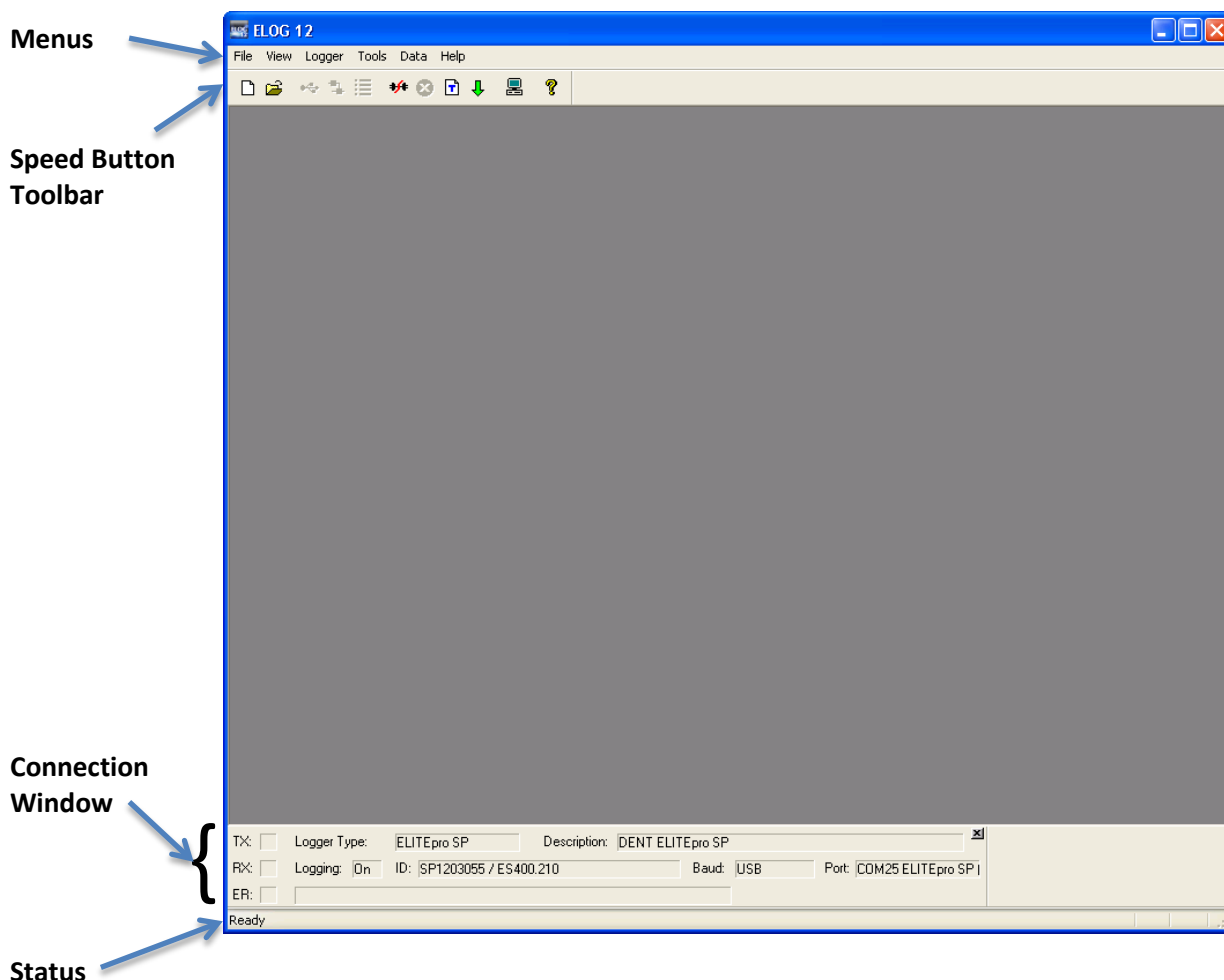

ELOG SPEED BUTTONS

The ELOG speed buttons enable users to quickly navigate between commonly used functions. For example, to connect between the computer and the **ELITEpro SP™** over a serial or *Bluetooth* connection, use the  button instead of the menu commands **Logger > Communication > Connect Via...** The button toolbar can be toggled on and off by selecting the **View > Toolbar** option. A description of each button follows.



New: Create a new Setup Table, Logger List, Data File (download), or Graph



Open: Open an existing Setup Table, Logger List, Data File, or Graph



Save: Use to save changes to modified items in ELOG



Cut: Performs the standard cut data function



Copy: Performs the standard copy data function



Paste: Performs the standard paste data function



Print: Print the active window



Direct Connection: Use for connecting the logger to the computer when using *Bluetooth* or a USB cable



Network Connection: Use for WiFi, Access Point mode, or Ethernet connection



Choose from last used Logger List: Use to connect to a logger on a Logger List



Disconnect: Quickly disconnect from either direct connection or a telephone connection



Cancel COMM OP: Cancel the current communication operation



Toggle Connection Window: Use to turn on and off the connection status window at the bottom of the screen



Display Real Time Text Values: Selecting this option displays the Instantaneous Channel Values screen



Retrieve Logger Data: Select this option to quickly retrieve logged data from the connected logger



Setup PC: Quickly access computer setup configurations



Create Graph: Create a graph from an open data file, available under the Data dropdown menu




UnZoom Graph: Use to back out of an expanded graph




Help Topics: Opens the **ELITEpro SP** and ELOG Manual

FILE MENU

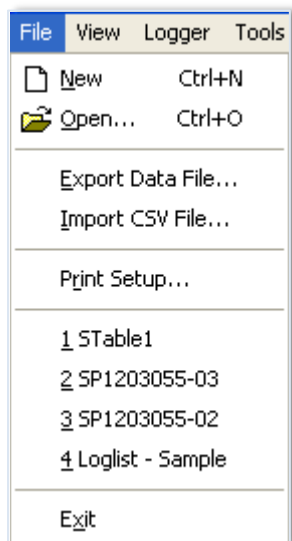


The File menu has options similar to that of other software products, such as a Print Setup and a list of recently accessed files. Descriptions of other options are below:

File > New creates a new file. There are four file types that are available for **ELITEpro SP™** loggers.

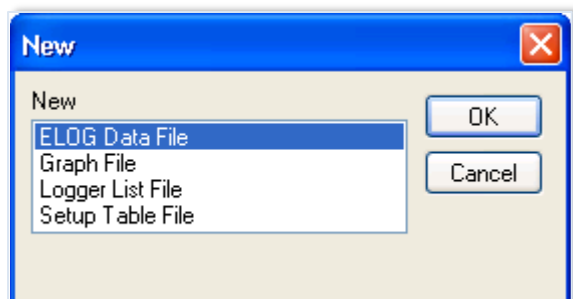


- **ELOG Data File**—contains data retrieved from a logger. If the computer is already connected to a logger, enter the file name for the data about to be retrieved from the logger. If the computer is not connected to a logger, ELOG requests the logger be connected from which the new data file will be extracted.
- **Graph File**—contains graphs created from logger data. Selecting Graph File opens a folder window where you may choose from already existing data files. Choose the one you wish to use to create a graph.
- **Logger List File**—displays groups of loggers used with AutoPoll, an automatic data collection application that is bundled with ELOG. Once chosen, you will be shown the folder where the Logger Lists reside and be allowed to select one for review or editing. (Logger Lists are used by AutoPoll for unattended data retrieval by the computer.)

- **Setup Table File**—If you are not already connected to a logger, ELOG prompts you to select the logger type (**ELITEpro SP**) for which you want to create a new Setup Table. If you are already connected to a logger, ELOG assumes that the Setup Table you are about to create is for the logger type to which you are connected.

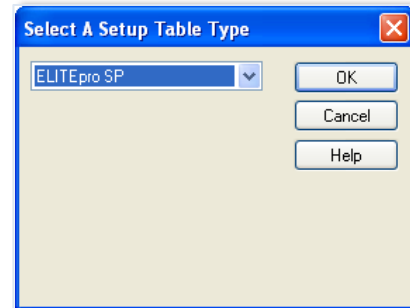

File > Open accesses an existing file, prompting you to select the file type. It operates the same whether or not you are connected to a logger.

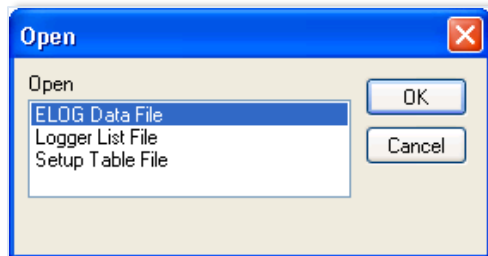


The **File > Save** and **File > Save As** functions allow for the saving of an open file of any type. **Save As** allows for saving to a new location or new name.

The **File > Export Data File** allows you to export a data file to a .csv file for use in another application.


The **File > Import CSV File** allows you to import a .csv file into ELOG.

EDIT MENU

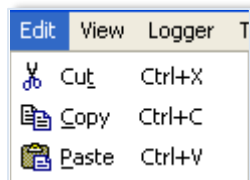

The ELOG Edit Menu has the standard Windows Cut, Copy, and Paste options.

VIEW MENU

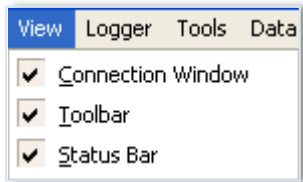


The **View** menu is used to display ELOG features in the ELOG window. Each display may be turned on or off in the window by clicking on the corresponding menu option.

The **Connection Window** appears at the bottom of the screen during connection to a logger and provides information about the logger, communication port, baud rates, etc. Refer to *Communicate with the ELITEpro SP* in Section 1 for more information.

The **Toolbar** option enables/disables buttons under the main menu.

The **Status Bar** option enables/disables information at the bottom of the ELOG window.


LOGGER MENU

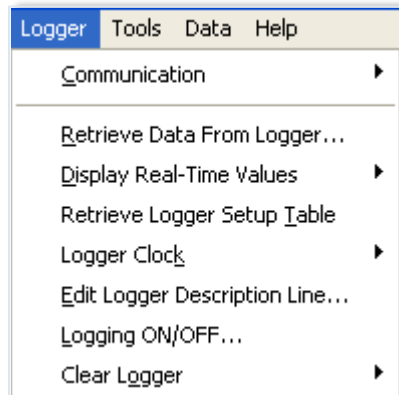

The **Logger** menu is used to configure the **ELITEpro SP**, view channel data in real time, download logger data, and set communication parameters. Graphing and analysis functions are found under the Data menu.

Communication Sub-Menu


Use the options on the Communication sub-menu to establish a connection between the computer and the **ELITEpro SP**.

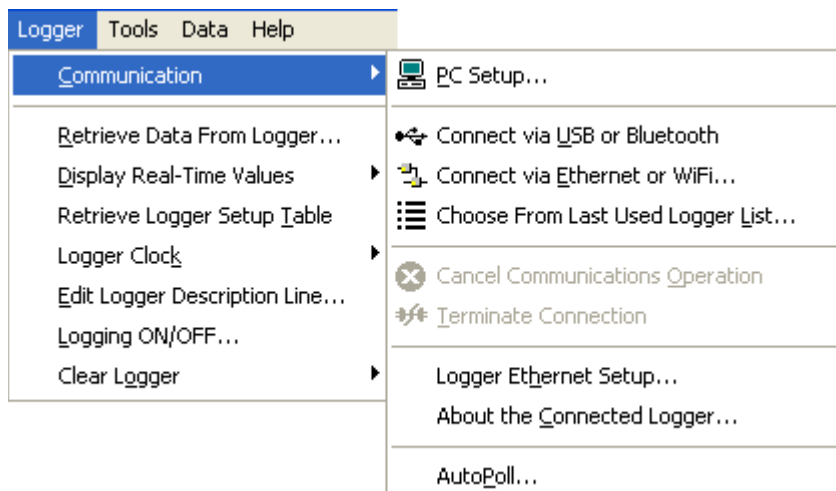

The options on the Communication sub-menu determine how communication with the **ELITEpro SP** is established and where logger information is saved.

- **PC Setup**

Use this option to set the default location for data, setup tables, and logger files. You can also set the default PC communication ports here. To enable legacy menu items for customers using legacy logger products, select the **Use Legacy Logger interface** checkbox and then choose Save Changes. The ELOG software will only display features and menus relevant to legacy products unless you connect to a new product. See **Tools Menu, PC Setup** for further information.

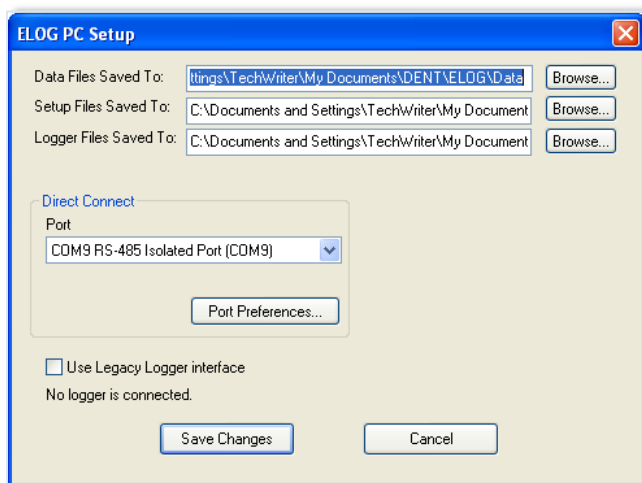

- **Connect via USB or Bluetooth**

This option is used to connect ELOG to a logger via a direct USB cable connection to the PC or with *Bluetooth* wireless technology. A connect message appears on the screen in the Connection window. See **Appendix F—Detailed Connection Options**.

- **Connect via Ethernet or WiFi...**

This option is used to connect ELOG to a logger over a network via an Ethernet, WiFi, or Access Point Mode connection. See **Appendix F—Detailed Connection Options**.

- **Choose From Last Used Logger List...**

Use this option to connect to a logger contained in a recently used logger list.

- **Cancel Communications Operation**


During any communication operation between the computer and the logger (connecting, retrieving data, viewing real time values), this option may be used to cancel the current communication command.

- **Terminate Connection**

Use this option to end the connection between the PC and the logger.

- **Logger Ethernet Setup...**

Enter the IP Address, Local Port Number and, if needed, the Subnet Mask and Gateway Address to connect the logger to a network via an Ethernet cable. This is the same IP address and Port Number you enter in the Network Connect dialog box to connect via Ethernet with ELOG. Select **Update Logger** to send the new Ethernet Setup to the logger or **Cancel** to close the window without updating the logger. See **Appendix F—Detailed Connection Options**.

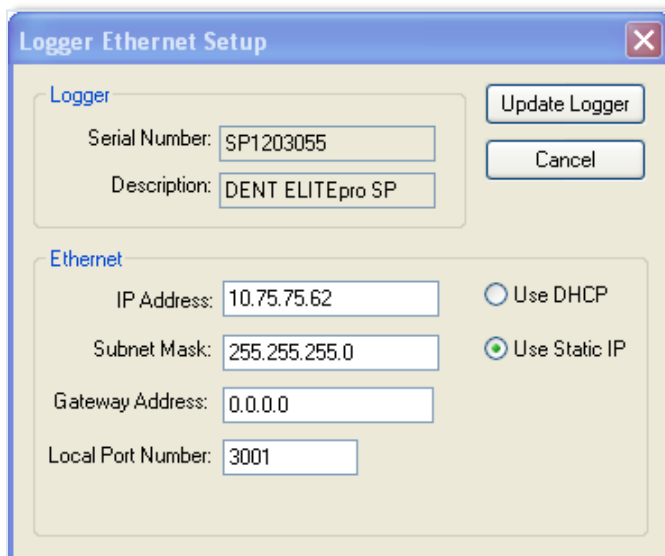

The screenshot shows a Windows-style dialog box titled "Logger Ethernet Setup". It has a close button (X) in the top right corner. The dialog is divided into two main sections: "Logger" and "Ethernet".

Logger Section:


- Serial Number: SP1203055
- Description: DENT ELITEpro SP
- Buttons: "Update Logger" and "Cancel"

Ethernet Section:

- IP Address: 10.75.75.62
- Subnet Mask: 255.255.255.0
- Gateway Address: 0.0.0.0
- Local Port Number: 3001
- Radio buttons: "Use DHCP" (unselected) and "Use Static IP" (selected)

- **About The Connected Logger...**

This option displays a text window containing information about the currently connected logger's properties, such as logger type, firmware version, description, etc., and information about built-in communication options, if any. Click **Refresh** to retrieve new information (for example, if the number of records used is changing) or **OK** to close the window.

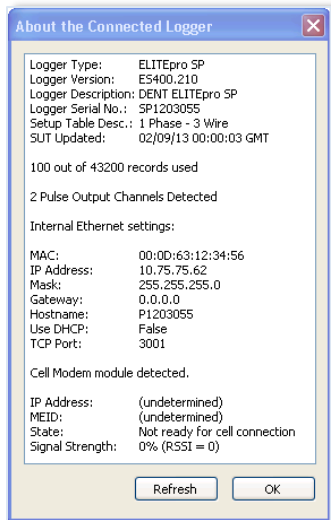


- **AutoPoll**


AutoPoll is a standalone Windows program (supplied with ELOG) that may be used for unattended and automatic data retrieval from a number of remote loggers where the PC connects to the loggers. A complete description of AutoPoll can be found in **Appendix D—AUTOPOLL: Unattended Data Collection**.

Retrieve Data From Logger

Retrieves data from the logger and saves it as an .elog file on the hard disk. The **Select A Directory And A Name...** dialog box displays prompting you for a file name. The default name is the logger serial number plus two digits that correspond to the number of times that data has been retrieved from the logger, however, at this point you may name the data file whatever you wish.

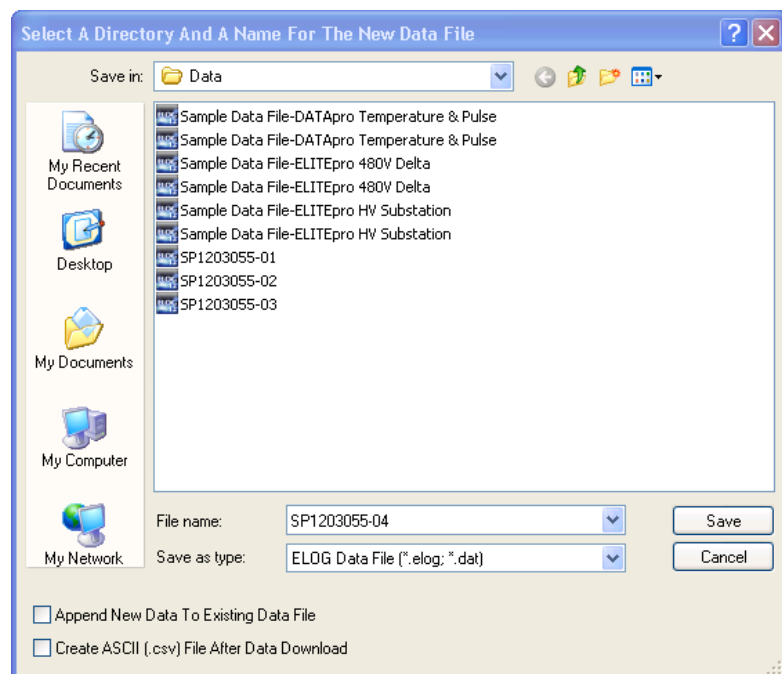


 There are two checkboxes in the lower left of the dialog box to select if you want to add (append) the data to an existing file and/or create an ASCII file of the data.

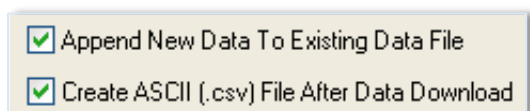

When a logger's memory is downloaded, the data may be added or "appended" to an already existing file from the same logger. Check the **Append New Data To Existing Data File** box. The name of the dialog box changes to **Select a Data File to Append Data To** and select which file you wish to add the data to.

The chosen file must have the same Setup Table used when the earlier data was downloaded. Selecting a file with different Setup Table parameters than those in the logger to be downloaded causes the following warning to display:

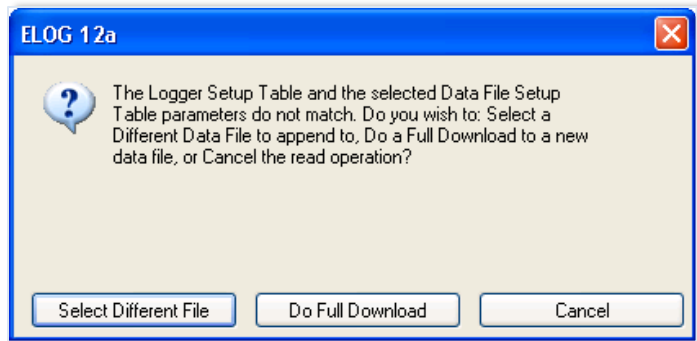

When the data is retrieved, a second comma separated value format (.csv) file can be created at the same time as the .elog data file is being downloaded. A .csv file is also called a “flat file,” or “ASCII file” and can be opened in other applications such as spreadsheets and databases.


The data will be saved to the folder specified in **Tools > PC Setup > Data Files Saved To:** unless changed in the **Select a Directory and A Name...** window. The default data folder is C:\Users\UserName\Documents\DENT\ELOG\Data.

To view a data file, use **Data > Open Data File** and then select the desired file.

Even if not downloaded as a .csv file, the original binary .elog data files may at any time be exported to a comma delimited ASCII file with a .csv extension. To export a data file see the Export Data File section.

Display Real-Time Values Sub-Menu

The Display Real Time Values option shows instantaneous readings for channels in use in either a textual or graphical format. Real-Time Values are an excellent way to verify the correct installation of a meter.

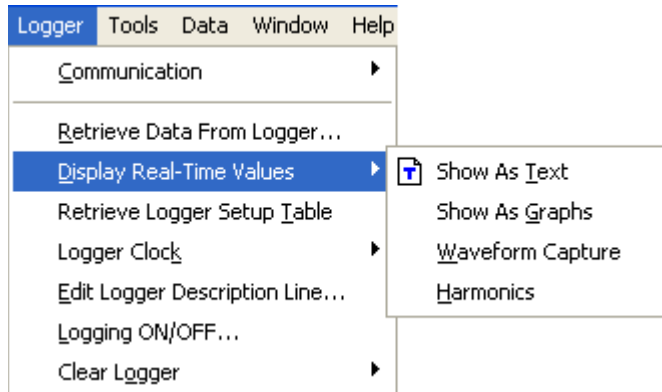

Real-Time Values may be displayed in either a textual or graphical format.


- **Show As Text**

When this option is selected, a screen similar to the one on the following page displays. All channels that are turned on (even if not being recorded) are displayed simultaneously. If a parameter is being recorded by the logger, it will be shaded in green as shown below. For a Power Channel, all six power parameters (V, A, kW, kVA, PF, and kVAR) are displayed even if only one of the parameters is being recorded.

This feature is useful for verifying correct installation of the logger.

This screen provides information about:

- The real-time data (which can be paused for cross-channel comparisons)
- The Line Frequency as measured between L1 and L2
- How much memory has been used and how many days the memory has remaining before filling
- The logger clock's current date and time
- Whether or not the data logging is turned on
- Type of memory: Linear (Stop When Full) or Ring (Continuous)

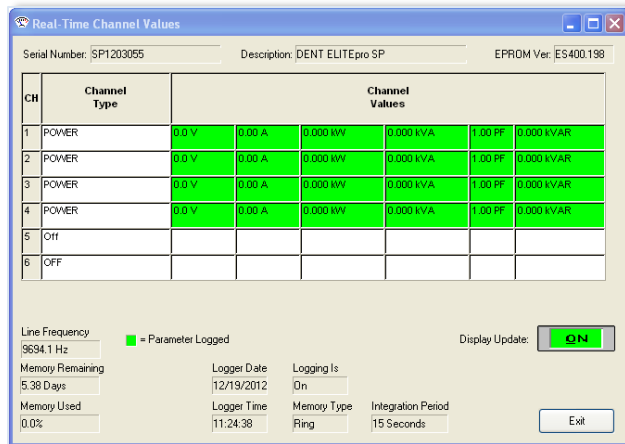


Click **Exit** to close the window.

▪ Show As Graphs

This menu selection displays the data as a graph instead of the text format described previously.

Select **Logger > Display Real-Time Values > Show as Graphs** to display the following dialog window.

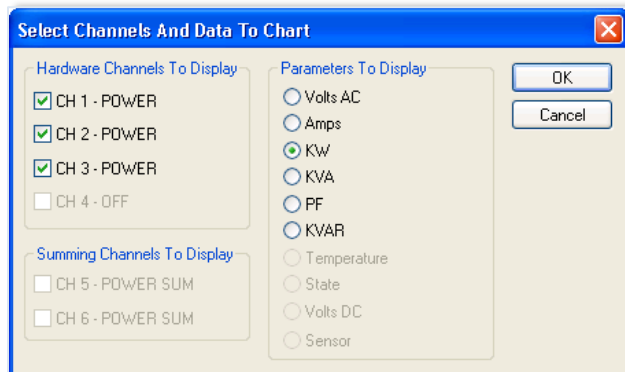

- 1) Select any or all physical power channels currently turned on in the logger in the **Hardware Channels To Display** section.


-OR-

Select one or both calculated power channels currently turned on in the logger in the **Summing Channels To Display** section.

Selecting a power channel activates the **Parameters To Display** option. You can only select one variable at a time to graph. This is not like a text display option where parameters are viewed simultaneously. This is due to differences in scaling and to reduce clutter on the graph. For example, you could display kW from four channels simultaneously but not a kW and a KVAR even if it is from the same channel.

- 2) Select a parameter to chart.

3) Select **OK** to view the graph.

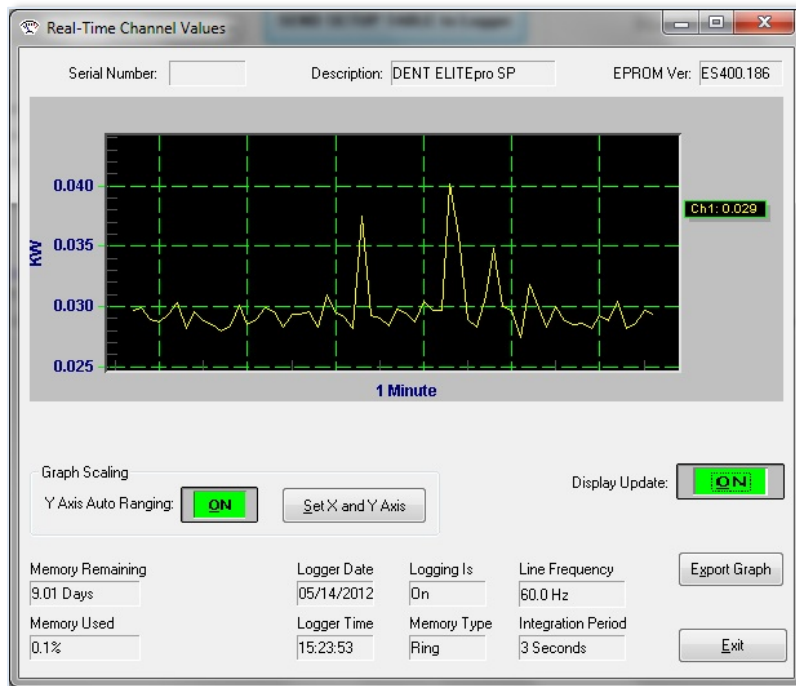


The graph presentation is very similar to paper strip chart recorders. The graph begins on the left edge and moves to the right. When it reaches the right edge, the entire graph scrolls to the left with each new reading. This always displays the most current data values and the older points slide off the left edge.

- Use **Set X and Y Axis** to set the scaling, and line type (e.g., linear or logarithmic). You can also set the amount of time that data is graphed. This can vary from 1 second to more than 18 hours (65,000 seconds). Note that the X-axis scaling is only approximate.


The 'Set X and Y Axis Scaling' dialog box allows users to configure the graph's axes. The 'Y Axis' section has two options: 'Auto' (selected) and 'Set Min/Max'. The 'Set Min/Max' section has input fields for 'Minimum' (0.00) and 'Maximum' (0.00). The 'X Axis' section has a 'Set Time Base' input field set to '60' seconds. At the bottom are 'OK' and 'Cancel' buttons.

- Use **Export Graph** to save the graph in a graphical or textual format. Graphs can be saved in an .emf, .wmf, .bmp, .jpg (default), .png format or as ASCII text file. You can select where the graph will go (clipboard, file, or printer) and what measurements (pixels, millimeters, inches, points) are used to save the graph.

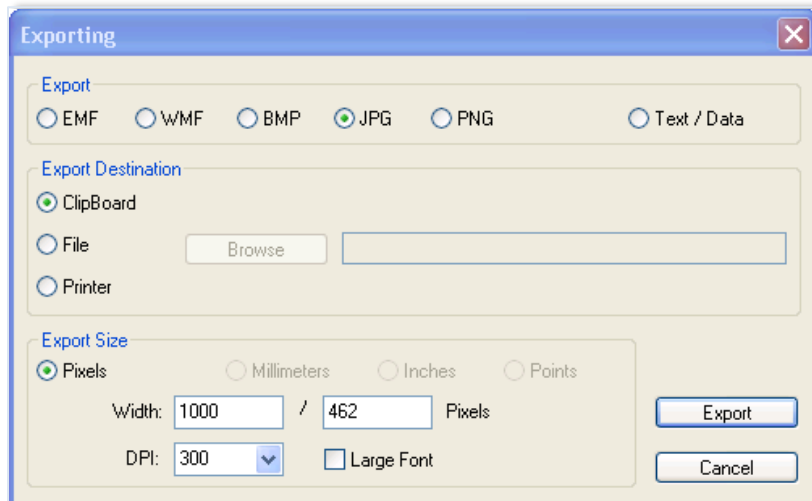


Waveform Capture

Select **Logger > Display Real-Time Values > Waveform Capture** to view the actual current, voltage and power waveform. The first capture is by default channel 1, but you can select different channels (logging off or on) to view, and copy the waveform to the clipboard for pasting into other programs or for printing.

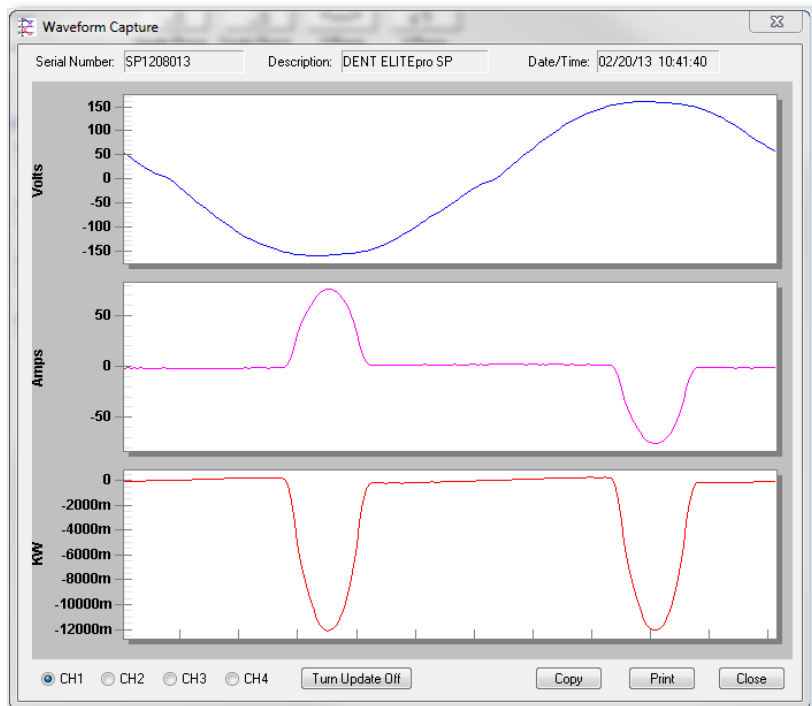

■ Harmonics

Use the software command **Logger > Display Real-Time Values > Harmonics** to see the actual harmonic content in the current, voltage, and power waveforms. A typical display is shown here:

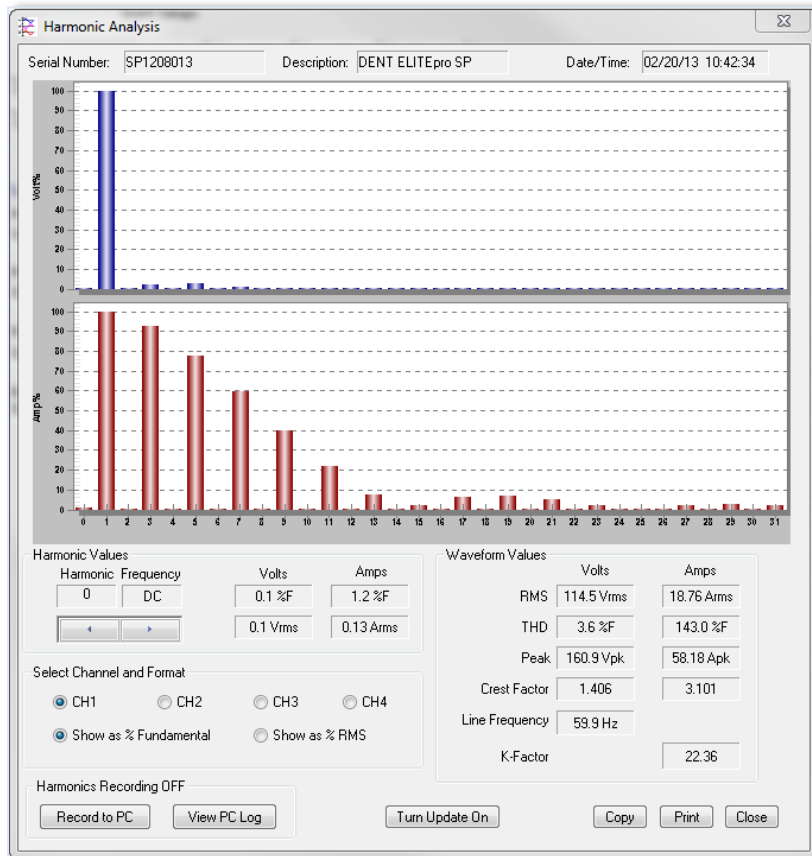


The buttons along the lower left side of the window select the Channel to be displayed. Only one channel may be viewed at a time. The voltage and current harmonics are presented graphically in the upper part of the window. The ordinate (y-axis) is scaled in percent of the fundamental. The abscissa (x-axis) is the harmonic. Both even and odd harmonics plus DC are shown.

DID YOU KNOW? The individual harmonic values and THD can be shown as a percentage of the fundamental (IEEE Standard 1035-1989) or as a percentage of the total RMA value (CSA and IEC standard).

The actual value of the voltage and current for each harmonic may be found in the Harmonic Values box. By clicking on the arrow buttons, higher and lower order harmonics may be selected. Though only the first 31 harmonics are displayed in the graph, the Harmonic Values function can be used to view the values up to the 63 harmonic. The Waveform Values box provides summary statistics for the overall current and voltage waveforms. This includes the RMS value, Total Harmonic Distortion (THD), Peak values, Crest Factor, and K-Factor.

The image presented is a single waveform snapshot. The first image is by default channel 1, but you can select different channels and update the image, copy the image to the clipboard for pasting into other programs, or print the image.

You can also record the harmonic values to your PC and then view a log of the harmonics in a spreadsheet. When you click **Record to PC** the Harmonic Logging Parameters dialog box displays.

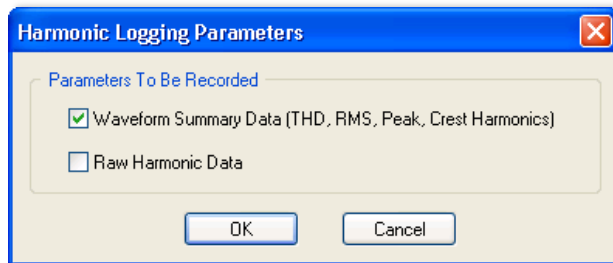

- 1) Select the **Waveform Summary Data** check box to create a "single column" of data in a spreadsheet stored on the PC. The data is the average harmonic content for each harmonic of the first 31 harmonics over the period of time the harmonic data was being collected.

Selecting **Raw Harmonic Data** creates a spreadsheet with the information above and a "row" of the 31 harmonics for each update of the logger. Since the logger updates faster than one time per second, selecting this option will create a LOT of data quickly!

- 2) Click **OK** and the recording begins.

The Record to PC button now reads **Stop Recording** on the Harmonics Analysis screen. Click that button to stop recording harmonic values to the PC.


- 3) Click **View PC Log** to open a file of recorded harmonic values in a spreadsheet on your computer.

Retrieve Logger Setup Table

This function instantly retrieves the Setup Table in the logger so it can be viewed, edited, resent to the logger or saved to the hard disk.


Logger Clock Sub-Menu

This function is used to set the logger's internal clock time and date. You may change the clock manually or synchronize it to the computer's clock. Note that the logger clock is actually set to UTC (also known as Greenwich Mean Time). When reading the logger clock or viewing data files, ELOG reads the Windows settings and converts the UTC time stamps in the logger to the local time zone of PC. If two PCs in different time zones open a data file or read the logger clock they will see different times.

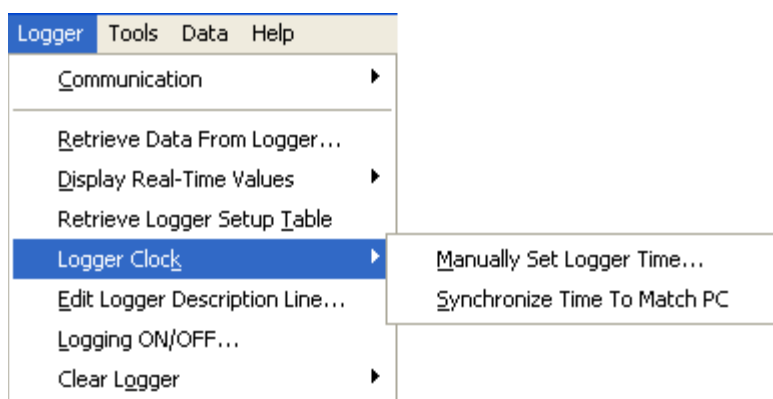

Set the logger's internal clock and date using the following menu option: **Logger > Logger Clock**. You may change the clock manually or synchronize it to the computer's clock.

▪ Manually Set Logger Time

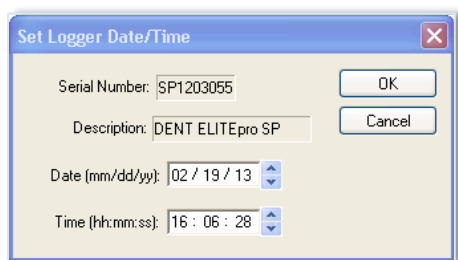


Use this option to manually set the date and internal clock. The date format defaults to what is used by the time settings on your PC (mm/dd/yy or dd/mm/yy) and the clock uses a 24-hour format.

▪ Synchronize Time To Match PC

Use this option to read the computer clock and automatically update the logger.


Edit Logger Description Line

This option allows you to change the user-defined, one line description stored in the logger. The Description Line can be used to help identify the specific logger after the logger has been retrieved from the field.

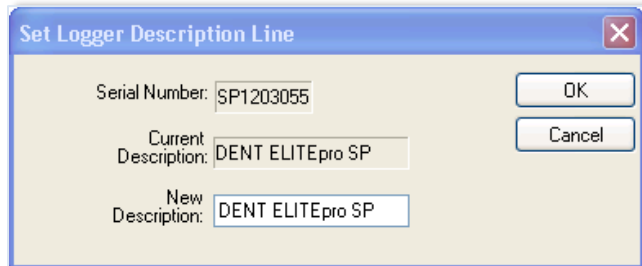


Logging ON/OFF

This option starts or stops data collection.

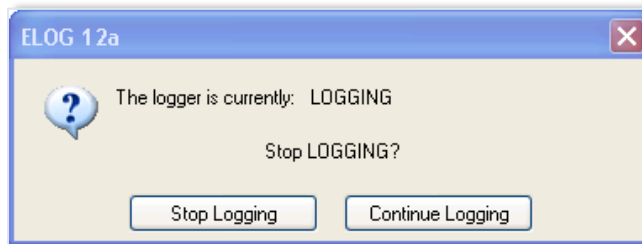

Clear Logger Sub-Menu

There are three options for clearing data stored in the Logger: Clear all logger data, Clear only peak demand values (kW, kVA, & kVAR), or Clear only KWh, KVARh, KVAh, etc., totals. After the data is deleted, it cannot be retrieved. See the section *Clear Logger Sub-menu* for more information.

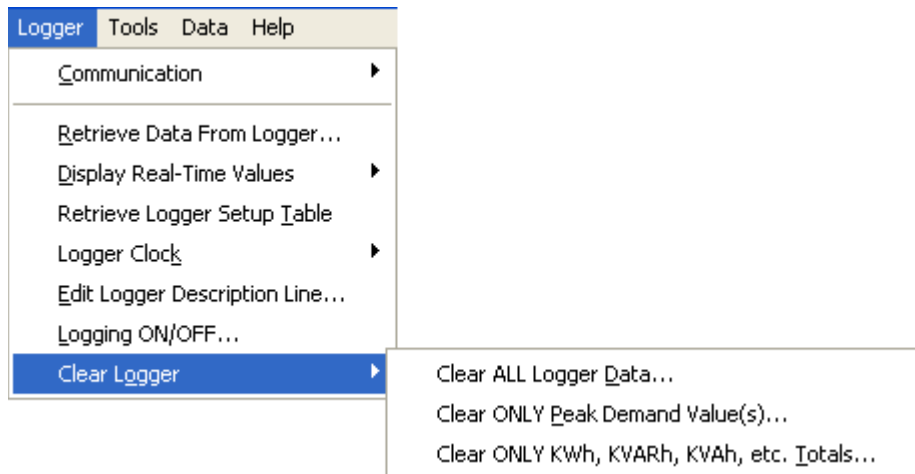

Do not select any options until you are sure that all information should be deleted from the logger.

- **Clear ALL Logger Data**

Clears all data in the logger memory, including Peak Demand and Totals. Once deleted, it cannot be retrieved.

- **Clear ONLY Peak Demand Value(s)...**


Clears only the peak demand values, kW, kVA, & kVAR. Once deleted, it cannot be retrieved.

- **Clear ONLY KWh, KVARh, KVAh, etc. Totals...**

Clears only cumulative totals. Once deleted, it cannot be retrieved.


TOOLS MENU

The Tools Menu accesses the same PC Setup option available on the Communication sub-menu and also includes options to install logger firmware or restore hidden messages.

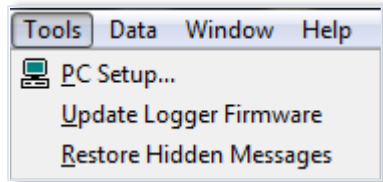

PC Setup

Selecting **Tools > PC Setup** allows you to configure the computer connected to the **ELITEpro SP**. It is also where you set the default file storage folders.

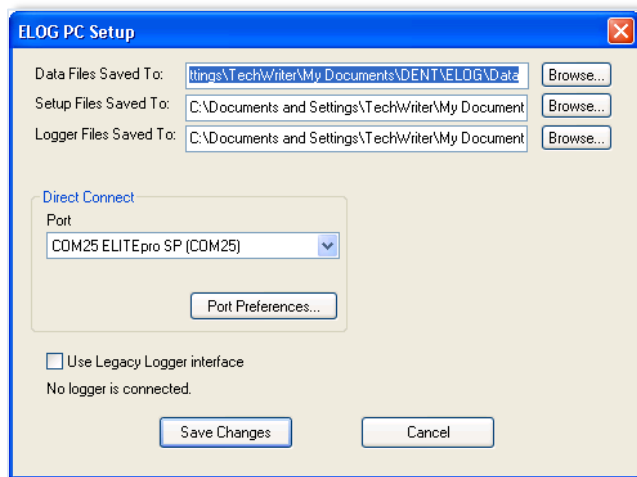

▪ Data Files Saved To:

Sets the default folder the data files will be saved in. When retrieving data files using the **Logger > Retrieve Data** function, the data files will be sent to the folder specified here.

▪ Setup Files Saved To:

Sets the default folder the Setup Tables will be saved in. When opening a Setup Table file ELOG will look in this folder first.

▪ Logger Files Saved To:

Sets the default folder the logger files will be saved in. When using the automatic data collection application, AutoPoll, ELOG will look in this folder first for the Logger Lists to call.

- **Direct Connect**

Select the computer's USB port the **ELITEpro SP** is connected to.

ELOG 12b is equipped with a new feature called **Friendly Ports™**. ELOG displays available Windows COM ports with easy-to-understand device descriptions enabling you to find the appropriate port quickly and easily.

- **Port Preferences**

This option is used to hide COM Ports from ELOG, to change the order of COM Ports as they appear in the dropdown control, and how they are searched when ELOG can't connect to a logger on the desired port.

Ports that are unchecked will be hidden from ELOG. Ports are listed and searched in the order shown. The order can be changed by selecting a port and moving it up or down.

Every time ELOG connects to a logger, its port is moved to the top of this list.

- **Use Legacy Logger interface**

The **Use Legacy Logger interface** checkbox defaults to unchecked, and the ELOG software will only display features and menu items relevant to the current software and hardware release. Select the checkbox and click **Save Changes** to enable legacy menu items for customers using older legacy products (ELITEpro).

Update Logger Firmware (ELITEpro SP only)


If you receive a message when attempting to communicate between the ELOG software and the logger stating, "The connected logger has firmware that is older than this version of ELOG supports, and may not operate properly with this version of ELOG" refer to **Appendix A** to update the **ELITEpro SP** firmware.

Restore Hidden Messages

Use this option to restore the alert messages that have been turned off.

DATA MENU

Data retrieved from an **ELITEpro SP** can be opened, graphed, exported, or analyzed.

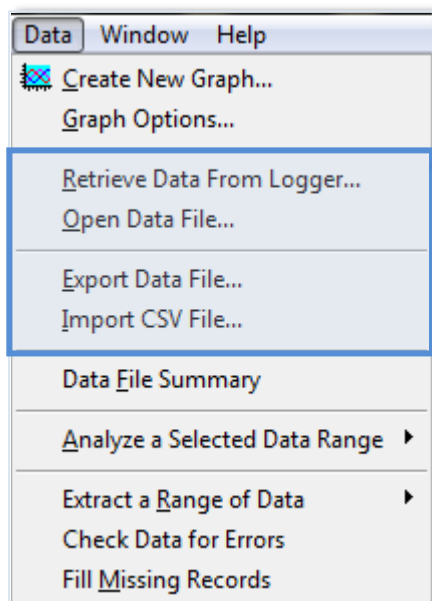


NOTE: These are the only options available on the Data menu when first accessed. The other options appear after a data file is open.

Create New Graph


- 1) When a data file is open, **Data > Create New Graph** displays the Select Data Types and Ranges dialog box.

NOTE: Use **Data > Open Data File** to create a graph from an existing file.

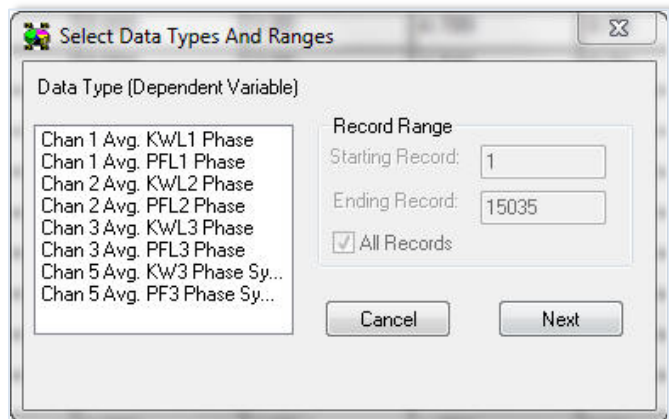

- 2) Select the parameters contained in the data file you want to graph by putting the mouse over the desired parameter and left-clicking. Hold down the Control (Ctrl) key to select multiple parameters, or the Shift key to select a continuous group of parameters.

- 3) Use **Record Range** to define a Starting and Ending range, or select the **All Records** checkbox to display all records available. Options default to All Records, but unchecking the box enables you to set the Record Range.
 - 4) Click **Next** to go to the **Set Graph Parameters** dialog window to select the type of graph to create.
 - 5) Under Axes, select the **Graph Type** in the drop-down menu. You may also choose to select the **Use Multiple Y Axes** checkbox if you have chosen more than one parameter to graph and they have very different ranges (e.g., kW and Power Factor). The option to assign the Y axes is displayed upon clicking **Next**.
 - 6) Under Options, select the checkboxes for the function you would like to use:
 - **Show graph data cursor**—the data cursor appears when the graph is created (you can also toggle the data cursor on and off with the right mouse button).
 - **Show graph data points**—displays the **Data Point** information above the graph display.
 - **Show analysis values**—shows summary statistics (minimum, maximum, average) on the graph.
 - Use the radio buttons to select one of the following:
 - a) **Use default graph attributes**—uses the default color, font and other graph attributes.
 - b) **Use current graph attributes**—uses the attributes selected for the last graph.
- If you selected more than one parameter to plot the **Use multiple Y axes** box will appear. If checked, the Select Y-Axis Assignments window displays that allows you to assign parameters to a Y axes.
- 7) Click **Finish** and the graph you have defined will appear similar to the following example. The parameter names to the right are color coded to match the visual representations on the graph.

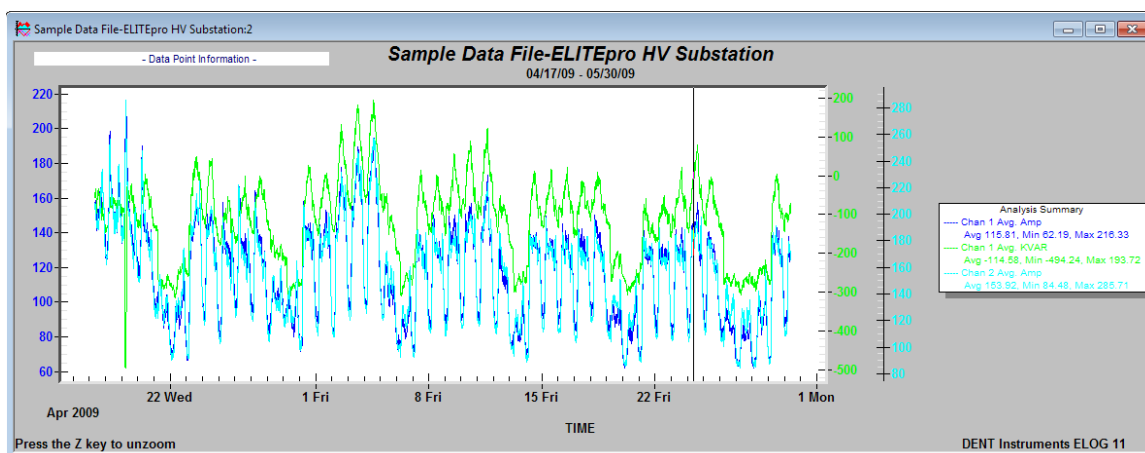

The graph values that are intersected by the Data Cursor are shown in the upper left-hand corner of the screen.

Once created, the graph may be edited in a number of ways. In general, any editable feature may be changed by double-clicking on the graph and making changes in the dialog box that appears. For example:

- Double-clicking anywhere in the graph area produces a dialog box that gives you various options to customize your graph by changing the graph type, colors, fonts and other options.
- Graphs as well as other file types (Data, Setup Tables, Logger Lists) may be printed using the **File > Print...** command (or **Ctrl + P**).
- Double-clicking the graph also provides an **Export** option that enables you to export the graph. Choose an option in the **Export** section to choose a graph type. Choose a location to export the graph in the **Export Destination** area. Set the size of the exported graph in the **Export Size** fields.
- Double-clicking the graph also provides a **Maximize** feature that enables you to increase the visual representation of the graph.

Did You Know? To zoom in on a portion of the graph, position the mouse pointer near the area to be zoomed. Hold the left mouse button down, then drag the pointer to make a rectangle that covers the area to be zoomed. Let go of the mouse and the graph will redraw a zoomed portion of the graph.


The graph may be zoomed as many times as desired. To unzoom, use **View > UnZoom, Ctrl+U**, or click the



Zoom speed button.

Graph Options

The Graph Options function allows you to set several defaults used when a new graph is created. The Graph Options window is shown below.

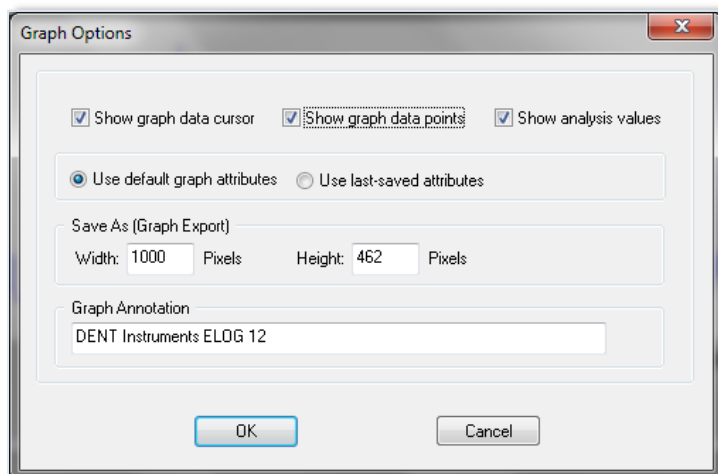

- **Graph Data Cursor:** The data cursor is a vertical line that appears on a graph and is used to help visually line up multiple graphs. Use the **Show graph data cursor** check box to turn on the data cursor. It can also be turned on and off at any time while viewing a graph by clicking the right mouse button.

If there is more than one variable plotted, all values are shown on the screen. The values are not labeled but are shown in the same order that the variables appear in on the graph.

The data cursor may be moved by using the left-right arrow keys or by using the mouse to left click on the cursor and drag it to the desired location. (**NOTE:** You will not see the cursor move when using the mouse until releasing the left mouse button.)

- **Graph Data Points:** Selecting this option displays the specific point at which the data was collected on the graph. It directly correlates to the Data Interval timeframe that was selected in the Setup Table File, e.g. 15 seconds, 5 minutes, 1 hour, etc.
- **Analysis Values:** For each parameter plotted on a graph the average, maximum and minimum value is also shown to the right of the graph where the graph labels are also shown. If desired, by unchecking the Show analysis values box, the values will not be shown (or printed) on the graph.
- **Graph Attributes:** This option enables you to use the default graph attributes or the last saved attributes chosen. The graph attributes include font sizes, background colors, graph colors and numerous others and can be changed on the graph itself by right-clicking. Every time a graph is made and there is a change to any of the attributes the changes are remembered by ELOG. At the creation of the next graph you have the option of using the default graph attributes or the changes that were last made. Once a graph is made you cannot change the graph attributes using this window. You must change them from the graph itself.
- **Graph Annotation:** If you make a lot of graphs and want to have the same annotation on the graph, you may use this feature to add a description to the graph. Common uses are the name of the consulting company performing the metering and analysis or the name of the client.

Retrieve Data From Logger

This function is identical to the **Retrieve Data...** command in the **Logger** menu. It is used to download the data from the logger to the computer prior to viewing, graphing, or exporting.

Open Data File

Data files stored on the logger can be viewed (but not edited) by selecting this menu item.

To view a data file it must first be downloaded from the logger by using the **Logger > Retrieve Data...** command or **Data > Open Data File** described above.

The data is always shown in the same way. The left-most column is the record number and begins with 1 and continues through all of the data records in the file. The second column is the date of the record and the third column is the time of the record.


The fourth and remaining columns will be the data recorded by the logger for each parameter. If minimum or maximum values were recorded then the time, to the second, that the maximum or minimum occurred will also be recorded.

Export Data File

This exports the raw, binary .elog file to a .csv format (Comma Separated Value) file, which can be brought into a spreadsheet or database program.

To view the data from a spreadsheet program follow these steps:

- 1) Retrieve the data from the logger.
- 2) Select **File > Export**. The Select a File for Export dialog box displays:

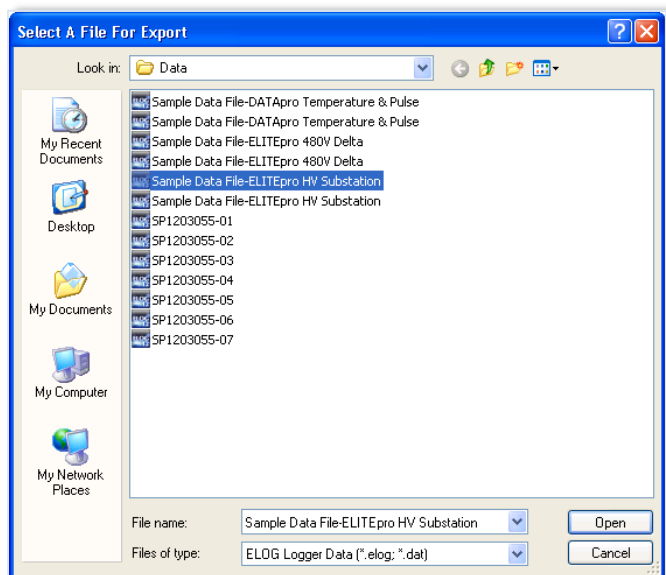

- 3) Select a file and click **Open**. When the file data has exported to a .csv file format the ELOG File Export dialog box displays.
- 4) Start a spreadsheet program such as Excel™.
- 5) Use the **File > Open** command in the spreadsheet and select **All Files** in the Files of type drop-down list.
- 6) Open the .csv data file from the folder you specified, for example:
C:\Users\UserName\Documents\DENT\ELOG\Data

Import CSV File

This feature imports a previously saved .csv file into ELOG 12b for use. Select the file you wish to import, and then choose Open.

Data File Summary

The Data File Summary is a useful feature for viewing a lot of information about the data file, the logger used to collect the data, and the setup table used in the logger. This is where the kWh, kVARh, and kVAh totalizer values are found. An example Summary is shown on the next page.

The file is divided into three parts:

- **Data Summary**

Provides the start and end times of the data, file name in the computer, and summary statistics for each channel and parameter that was recorded by the logger.

- **Setup Summary**

Shows the essential features of the active Setup Table in the logger during the data collection period.

- **Logger Summary**

Provides information about the logger used to collect the data. The Data File Summary is opened in Microsoft Notepad™ and can be edited, saved, printed or moved into another report.

Data Summary

Data File Name: SP1203055-07

First Data Record End Time: 02/08/13 16:30:00
Last Data Record End Time: 02/10/13 09:45:00
Monitoring Period Duration: 1.73 days

Peak Demand

Window Size Min.: 0

Channel	KW	KVA	KVAR
Chan 5	off		
Chan 6	off		

Totalizers

Channel	KWH	-KWH	+KWH	KVAH	KVARH	-KVARH	+KVARH
Chan 5	0.000	0.000	0.000	0.000	0.000	0.000	0.000
Chan 6	0.000	0.000	0.000	0.000	0.000	0.000	0.000

Channel	Average	Maximum (Date Time)	Minimum (Date Time)	Total
Chan 1 Avg. KW	0.000	0.000 (02/10/13 09:45:00)	0.000 (02/10/13 09:45:00)	
Chan 1 Avg. PF	1.00	1.00 (02/10/13 09:45:00)	1.00 (02/10/13 09:45:00)	
Chan 2 Avg. KW	0.000	0.000 (02/10/13 09:45:00)	0.000 (02/10/13 09:45:00)	
Chan 2 Avg. PF	1.00	1.00 (02/10/13 09:45:00)	1.00 (02/10/13 09:45:00)	
Chan 3 Avg. KW	0.000	0.000 (02/10/13 09:45:00)	0.000 (02/10/13 09:45:00)	
Chan 5 Max. Volt	0.0	0.0 (02/10/13 09:45:00)	0.0 (02/10/13 09:45:00)	
Chan 5 Avg. Volt	0.0	0.0 (02/10/13 09:45:00)	0.0 (02/10/13 09:45:00)	
Chan 5 Amp Hours	0.00	0.00 (02/10/13 09:45:00)	0.00 (02/10/13 09:45:00)	0.00
Chan 5 Min. Amp	0.00	0.00 (02/10/13 09:45:00)	0.00 (02/10/13 09:45:00)	
Chan 5 Max. Amp	0.00	0.00 (02/10/13 09:45:00)	0.00 (02/10/13 09:45:00)	
Chan 5 Avg. Amp	0.00	0.00 (02/10/13 09:45:00)	0.00 (02/10/13 09:45:00)	
Chan 5 Avg. KW	0.000	0.000 (02/10/13 09:45:00)	0.000 (02/10/13 09:45:00)	
Chan 5 KVA Hours	0.000	0.000 (02/10/13 09:45:00)	0.000 (02/10/13 09:45:00)	0.000
Chan 5 Min. KVA	0.000	0.000 (02/10/13 09:45:00)	0.000 (02/10/13 09:45:00)	
Chan 5 Max. KVA	0.000	0.000 (02/10/13 09:45:00)	0.000 (02/10/13 09:45:00)	
Chan 5 Avg. KVA	0.000	0.000 (02/10/13 09:45:00)	0.000 (02/10/13 09:45:00)	
Chan 5 Avg. PF	1.00	1.00 (02/10/13 09:45:00)	1.00 (02/10/13 09:45:00)	
Chan 5 Min. KVAR	0.000	0.000 (02/10/13 09:45:00)	0.000 (02/10/13 09:45:00)	
Chan 5 Max. KVAR	0.000	0.000 (02/10/13 09:45:00)	0.000 (02/10/13 09:45:00)	
Chan 6 Min. Volt	0.0	0.0 (02/10/13 09:45:00)	0.0 (02/10/13 09:45:00)	
Chan 6 Avg. Volt	0.0	0.0 (02/10/13 09:45:00)	0.0 (02/10/13 09:45:00)	
Chan 6 Min. Amp	0.00	0.00 (02/10/13 09:45:00)	0.00 (02/10/13 09:45:00)	
Chan 6 Avg. Amp	0.00	0.00 (02/10/13 09:45:00)	0.00 (02/10/13 09:45:00)	
Chan 6 Max. KW	0.000	0.000 (02/10/13 09:45:00)	0.000 (02/10/13 09:45:00)	
Chan 6 Avg. KW	0.000	0.000 (02/10/13 09:45:00)	0.000 (02/10/13 09:45:00)	
Chan 6 KVA Hours	0.000	0.000 (02/10/13 09:45:00)	0.000 (02/10/13 09:45:00)	0.000
Chan 6 Max. KVA	0.000	0.000 (02/10/13 09:45:00)	0.000 (02/10/13 09:45:00)	
Chan 6 Avg. KVA	0.000	0.000 (02/10/13 09:45:00)	0.000 (02/10/13 09:45:00)	
Chan 6 Min. PF	1.00	1.00 (02/10/13 09:45:00)	1.00 (02/10/13 09:45:00)	
Chan 6 Avg. PF	1.00	1.00 (02/10/13 09:45:00)	1.00 (02/10/13 09:45:00)	
Chan 6 Min. KVAR	0.000	0.000 (02/10/13 09:45:00)	0.000 (02/10/13 09:45:00)	
Chan 6 Avg. KVAR	0.000	0.000 (02/10/13 09:45:00)	0.000 (02/10/13 09:45:00)	

Setup Summary

Setup Table Description: 1 Phase - 3 wire

Channel 1 - Power: VH1: L1, VLO: N; PT = 1.000; CT = 100.000; Phase Shift = 1.100
Channel 2 - Power: VH1: L2, VLO: N; PT = 1.000; CT = 100.000; Phase Shift = 1.100
Channel 3 - Power: VH1: N, VLO: L1; PT = 1.000; CT = 100.000; Phase Shift = 1.100
Channel 5 - Power Sum: 1,2
Channel 6 - Power Sum: 1,2,3

Memory Type: Ring
Line Frequency: 60 Hz
Integration Period: 15 Minutes

Logger Summary

Logger Description Line: DENT ELITEpro SP
Logger Serial Number: SP1203055
Logger Type: ELITEpro SP
Firmware Version
ES400.210

Example of a Data Summary


Analyze a Selected Data Range

ELOG has a number of analysis features. With a data file open:

NOTE: The analyses features **only work on one variable at a time**. A variable may be selected in several ways all using standard Windows™ methods.

- 1) To select an entire column of data, place the mouse pointer over the column header (e.g., Chan 1 Avg. Amp) and click the left button. The entire column is selected.
- 2) To select a portion of a column, place the mouse pointer over the first record to be included then push the left button down and hold it while dragging the mouse down the screen. When located over the last record to be included, release the mouse button.
- 3) After selecting a data range, click **Data > Analyze a Selected Data Range** and choose the desired Analysis Functions.

A Sample Data File window displays.

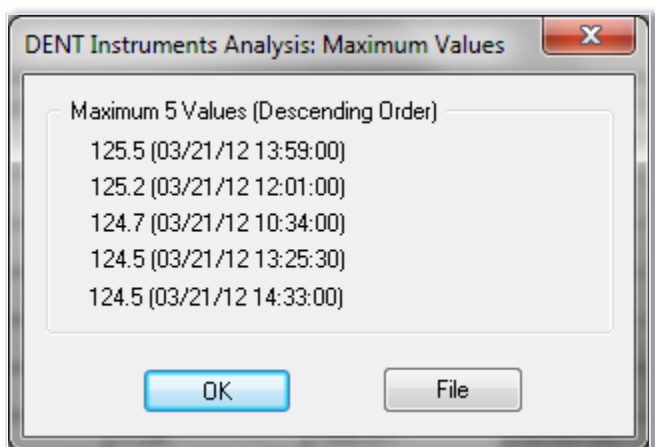

In this example, Maximum Value was chosen. Note that when maximum and minimum are selected, the date and time of the five (5) greatest maxima (or minima) are also shown along with the value.


Click **OK** to close the window.

- 4) Click **File** to open Windows Notepad™.

The maximum value and time of occurrence is shown with the date range for the data selected for analysis. As with the Data File Summary, the data contained in the Notepad file may be edited, saved, printed or moved into another program for reporting generation.

Each time an analysis function is used and File is selected, Notepad is opened and the result of the analysis function is *added* to the existing Notepad file.

For the first five analysis functions, **Average** is the arithmetic average of all the values in the selected column within the date range of data selected. **Load Factor** is the ratio of the peak (maximum) value divided by the average value. **Maximum** and **Minimum** are the largest and smallest values together with the day and time of the occurrence. **Total** is the algebraic sum of all the values (useful for summing kWh within a specified period of time).

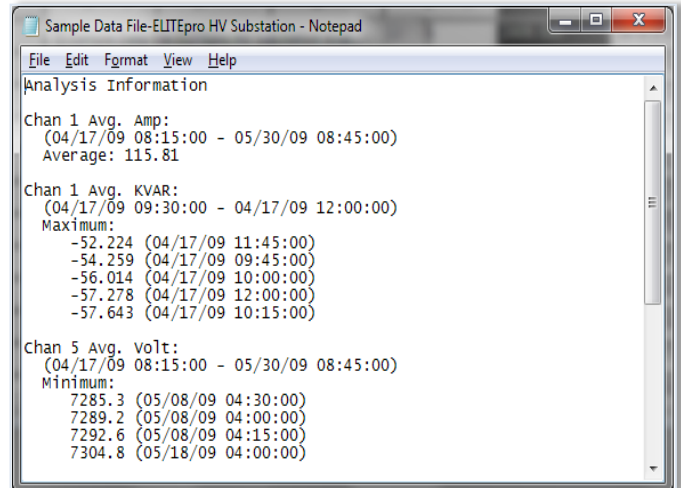

5) Select **Graph** to create a quick line graph for any selected variable and range.

-or-

Select **Daily Profile Graph** to create a composite average daily profile list of the average data values computed by ELOG.

Extract a Range of Data

Users may choose options from this sub-menu to display data from a specified range if all data points collected aren't needed for analysis.

▪ Extract By Date

This option provides the beginning and end date and times of the data file. Choose new endpoints to trim off unwanted data at the beginning or end of the file. Click **Ok** to display the selected range.

▪ Extract By Record Number

This option provides a File Record Range with the option of choosing a set of records based on the record number (first column in the data file). Click **Ok** to create the selected range.

DID YOU KNOW? All analysis features in the Analyze a Selected Data Range and Extract drop-down menu can be quickly accessed using the right mouse button. First use the mouse to select a range of data for analysis by holding the left mouse button down over the first record in the range and then dragging the mouse until the last record and releasing the button. Then place the mouse pointer over the selected range and use the right mouse button to select your options.

Check Data for Errors

Use this command to check the data shown for gaps or overlaps in the time sequence, or timestamp errors.

Fill Missing Records

"Fill Missing Records" detects gaps in the time sequence of the data shown, and fills the missing records with 0 values. This feature is useful when data logging has paused (such as during a power outage) and there are gaps in the time stamp records.

SECTION III: APPENDICES

Appendix A—Installing Firmware Updates

Firmware is software that is used as the control program for the microprocessor in your **ELITEpro SP**. Firmware updates provide new features and bug fixes for the **ELITEpro SP**. Contact DENT Instruments for more information.


FIRMWARE UPDATES

You can check the firmware version of your **ELITEpro SP** from the Tools menu. Select **Tools > Update Logger Firmware**. The Firmware Update dialog box displays. No update is required if your firmware File version and Logger Version are the same.

Downloading and Installing Firmware

To install firmware/updates:

- 1) Select **Tools > Update Logger Firmware**. The following dialog box displays:

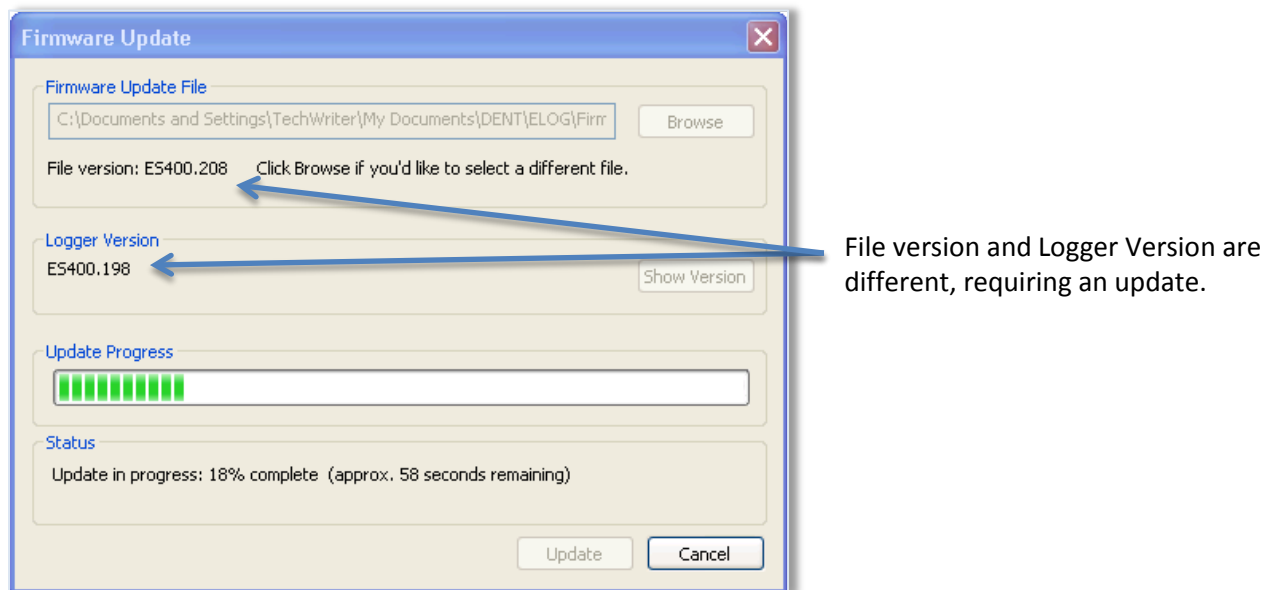

- 2) If necessary, click the **Browse** button to locate the firmware update file.
- 3) Click **Update**.
- 4) The Update Progress bar displays the progress of the firmware update.

TROUBLESHOOTING FIRMWARE UPDATE INSTALLATION ISSUES IN WINDOWS 7 64-BIT

If you are trying to update the **ELITEpro SP** firmware, but the “estimated time to completion” begins increasing instead of decreasing, you may need to temporarily run ELOG in Windows XP Compatibility Mode. To run ELOG in Windows XP Compatibility Mode, follow these steps:

- 1) **Right-click** on the **ELOG 12b** desktop icon.
- 2) Select **Properties** from the menu.
- 3) Click the **Compatibility** tab at the top of the window. (See Figure 1)

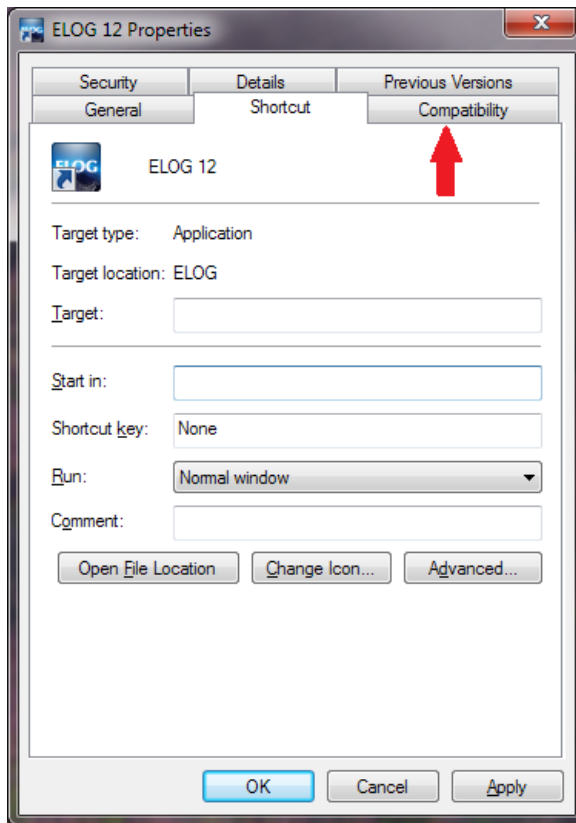


Figure 1


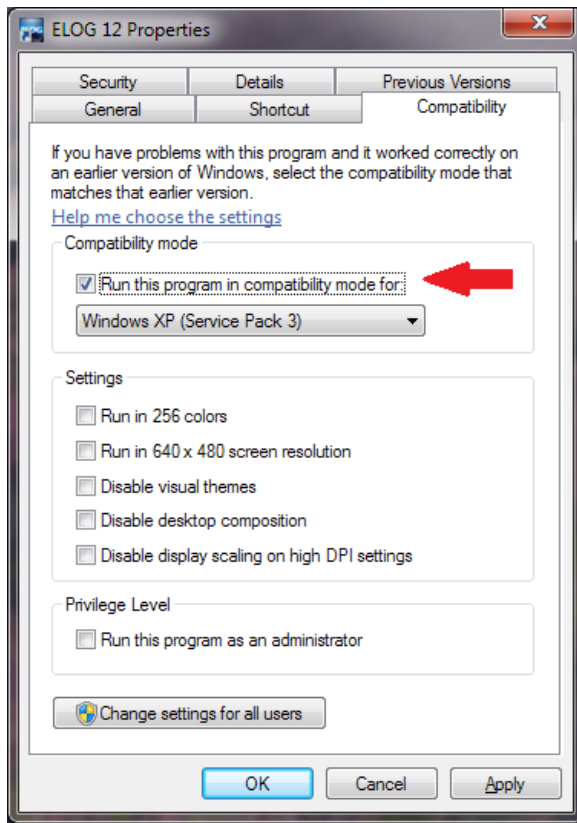


Figure 2

- 4) **Click the checkbox** labeled *Run this program in compatibility mode for:* and make sure that Windows XP (Service Pack 3) is selected in the drop-down menu. (See Figure 2)
- 5) Activate XP Compatibility Mode by clicking **OK**.
- 6) After completing the firmware update, it is important to turn off XP Compatibility Mode. To do this, uncheck the Compatibility Mode box and click **OK**.

2-½ ELEMENT METERS

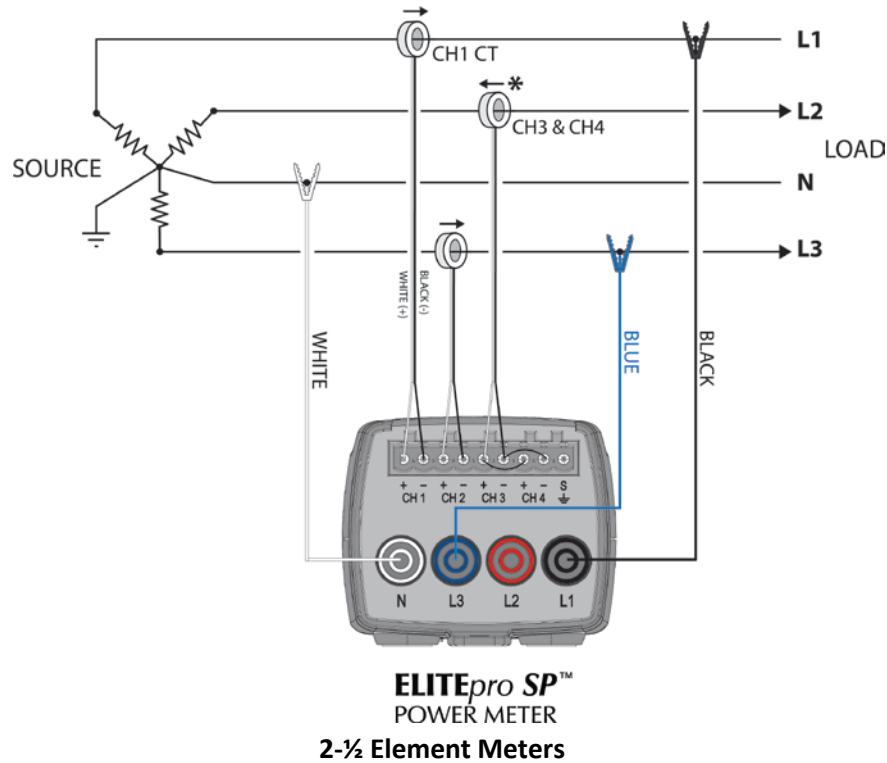

Configure the Setup Table as follows:

Channel 1	Name	V High	V Low	PT Ratio	Type	Amps	Phase Shift
Power	L1 CT	L1	N	1.**	MilliVolt	***	1.100
Channel 2	Name	V High	V Low	PT Ratio	Type	Amps	Phase Shift
Power	L3 (Not L2!) CT	L3	N	1.**	MilliVolt	***	1.100
Channel 3	Name	V High	V Low	PT Ratio	Type	Amps	Phase Shift
Power	L2 CT Reversed*	L3	N	1.**	MilliVolt	***	1.100
Channel 4	Name	V High	V Low	PT Ratio	Type	Amps	Phase Shift
Power	L2 CT Reversed*	L1	N	1.**	MilliVolt	***	1.100
Calculated Power Channels							
Channel 5	Name	Combine Channels					
Power Sum	2 1/2 Element Total	<input checked="" type="checkbox"/> 1	<input checked="" type="checkbox"/> 2	<input checked="" type="checkbox"/> 3	<input checked="" type="checkbox"/> 4		


*The CT on channel three of the **ELITEpro SP** is placed on the L2 phase and is backwards. Note that the Ch3 CT is jumpered in parallel into Ch4 of the logger.

**Since the 2 ½ Element method is often used on high voltage metering, a PT ratio other than one is typical and should be set to whatever the actual PT ratio is.

***Set the CT value that is true for the CT connected to the **ELITEpro SP**. Again, because the 2 ½ element method is most often used in high voltage applications, there will be high voltage CTs present. Use the high-accuracy 5A CT from DENT Instruments on the existing high voltage CT secondary. The CT value used in the Setup Table should be the primary rating of the high voltage CT (assuming the secondary output is 5A).

USING THE 2-WATT ELEMENT (2 CT) METHOD ON A 3-WIRE DELTA SERVICE

Blondel's Theorem states that the number of watt elements (CTs) needed to monitor a system is one less than the number of wires in the system. This means that a 3-Wire Delta service, even though three phase, requires only two CTs to meter it as there are only three current carrying conductors. The **ELITEpro SP** uses the 3 CT method for monitoring Delta services as a default because the data is easier to interpret. However, if it is required to use only 2 CTs on a Delta such as when it is desirable to use one **ELITEpro SP** to monitor two Delta connect loads simultaneously (such as two motors), connect the meter as shown below.

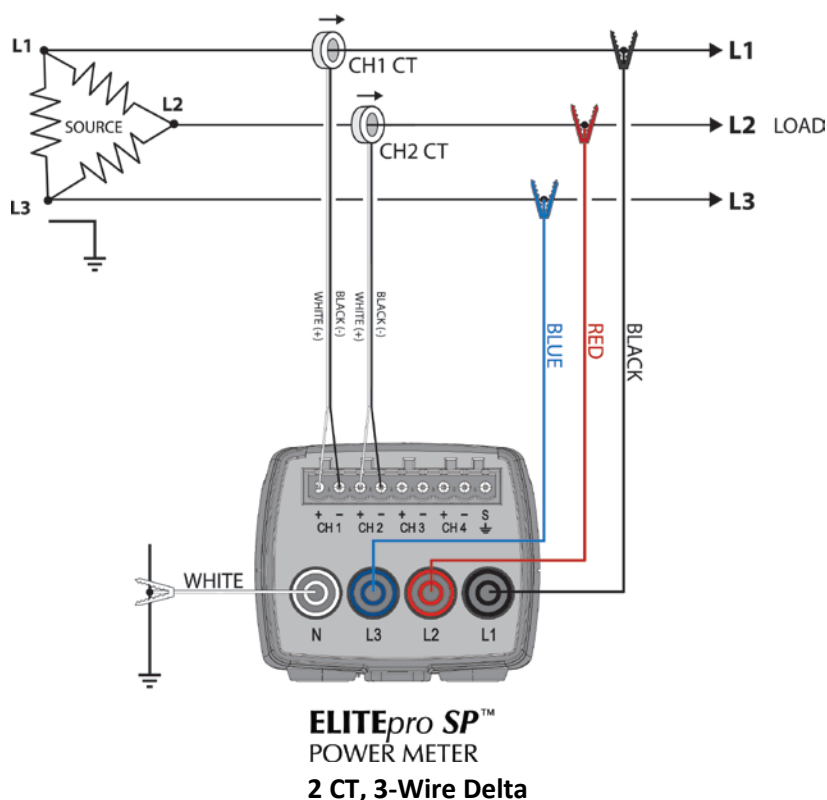

Configure the Setup Table as follows:

Physical Power Channels		Voltage References			Current Transformers			
Channel	Name	V High	V Low	PT Ratio	Type	Amps	Phase Shift	
Channel 1	Power	3 Phase 3 Wire	L1	L3	1.000	MilliVolt	100.000	1.100
Channel 2	Power	3 Phase 3 Wire	L2	L3	1.000	MilliVolt	100.000	1.100
Channel 3	Off							
Channel 4	Off							

Calculated Power Channels		Combine Channels
Channel	Name	
Channel 5	Power Sum	3 Phase System Total
		<input checked="" type="checkbox"/> 1 <input checked="" type="checkbox"/> 2 <input type="checkbox"/> 3 <input type="checkbox"/> 4

USING THE 3-WATT ELEMENT (3 CT) METHOD ON A 3-WIRE DELTA SERVICE

Using the two watt element method on 3-phase 3-wire Delta services is a perfectly valid measurement technique. The 2-element method also uses less logger memory and hardware channels and allows measuring two Delta (3-wire) loads simultaneously. However, there are two times when it may be desirable to use the 3 watt-element method. They are:

- 1) The 3-element method is more intuitive. By placing a CT on each phase wire, it is easier to understand what is happening in each phase without referring to phasor diagrams
- 2) Different power factor calculation. As noted in the description of the Power Sum Equations above, the System VA and, consequently, System Power Factor are calculated differently between the 2- and 3-element methods.

In 2-element measurements, Systems VA is calculated from Watts and VARs using the power triangle. In 3-element measurements, System VA is calculated as the sum of the VAs from the individual phases. Both methods are completely valid.

The major difference is how harmonics are treated. When harmonics exist, they are usually only (or mostly) present in the current and not in the voltage. Because watts and VARs are calculated as the instantaneous product of volts and amps and because an existing third or fifth harmonic current does not have a corresponding voltage harmonic, then the harmonics' products are zero. Therefore, the instantaneous product of volts and amps used to obtain watts and VARs does not include any harmonic component. Thus the 2-element method does not include any harmonic content in the calculation of System VA, or System Power Factor. The Power Factor calculated in this way is also known as the "Displacement Power Factor." In 3-element systems, because System VA is calculated as the sum of the phase VAs, which in turn are the product of the RMS volts multiplied by the RMS amps, then harmonics

are included (in the RMS amps). The System Power Factor then also includes harmonics and is sometimes called the “Apparent Power Factor.”

If there are no harmonics present, the displacement power factor and harmonic power factor are identical. If harmonics are present, the harmonic power factor (3 element) will always be smaller than the displacement 100 power factor (2-element). Similarly, the 3-element VA will always be larger than the 2-element VA. When comparing the **ELITEpro SP** three-phase measurements with other meters, make sure that the same method of calculating VA and Power Factor is used.


Connecting the ELITEpro SP to a 3-phase 3-wire Delta load using the 3 element method:

It is very similar to the 3-phase, 4-wire WYE connection. Use a CT on each phase and connect the three **ELITEpro SP** voltage wires to each phase. The neutral wire should then be connected to earth ground. The second page of the logger Setup table should look just like that of the 4-wire WYE setup. See *ELOG Quick Setup Wiring Diagrams* in Section II.


Appendix C—Troubleshooting ELITEpro SP Driver Installation

If you have connected the **ELITEpro SP** to a computer via the USB cable and the driver fails to install, follow these steps to correct the problem.

- 1) Go to the Device Manager by right-clicking **My Computer** in the Start Menu and selecting **Properties**.

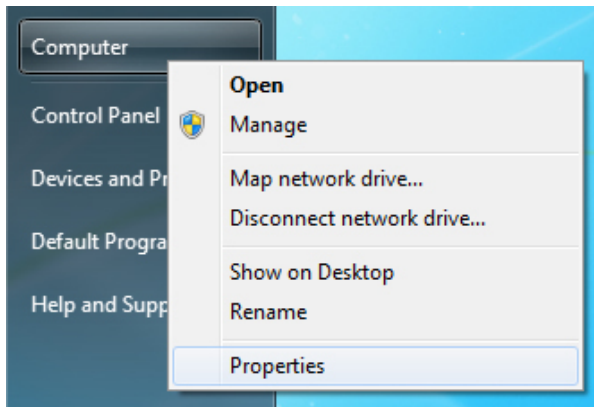


Windows Vista and 7

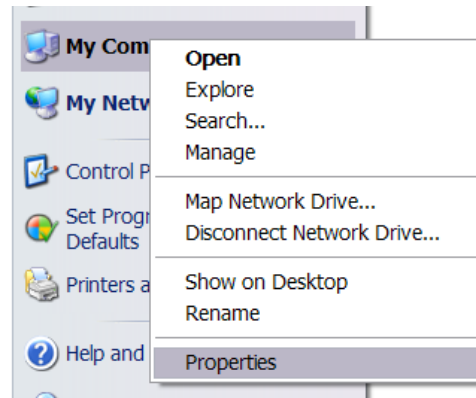

Windows XP

- 2) In the Properties window, select **Device Manager**. In Windows 7, the Device Manager is on the left side of the window. In Windows XP, select the Hardware tab, then select the Device Manager. See below.

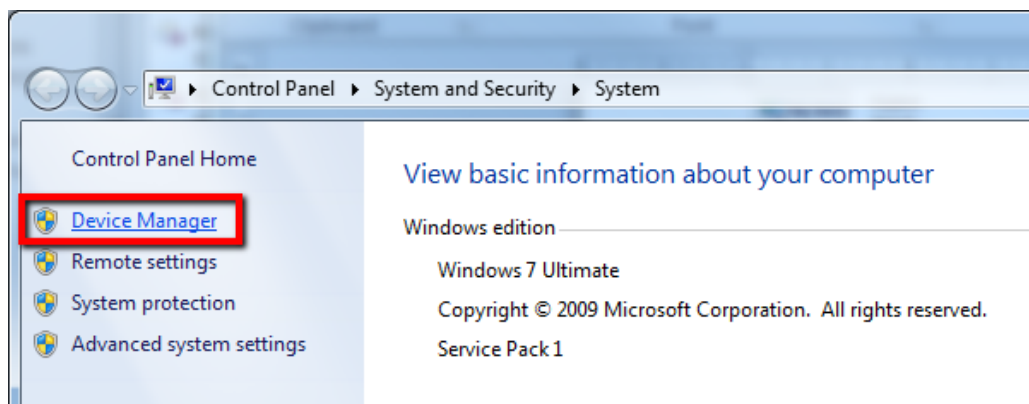


Windows Vista and 7




Windows XP


- 3) Look for the **ELITEpro SP** listed in the Device Manager Window:

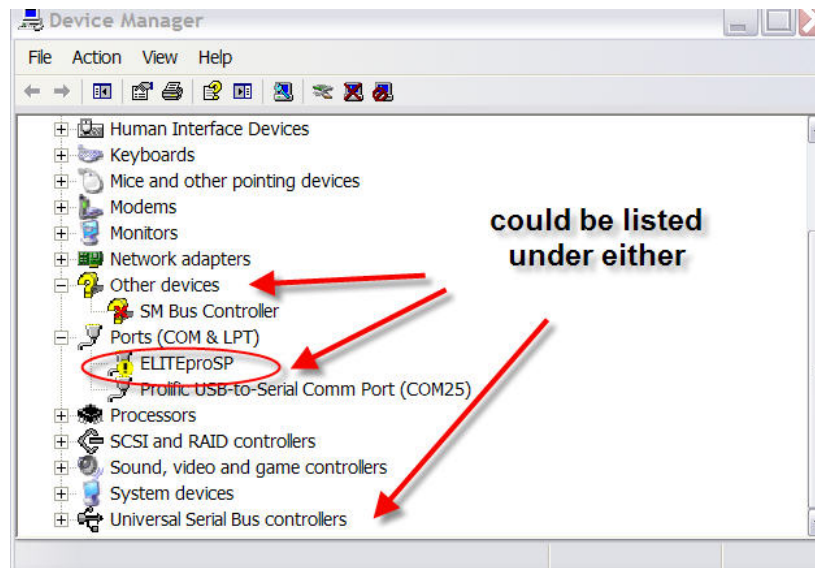


- 4) Right-click the **ELITEpro SP** and select **Update Driver...**

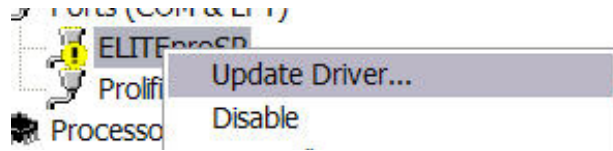

- 5) In the Hardware Update Wizard, select ***Install from a list or specific location (Advanced)*** and click **Next**.

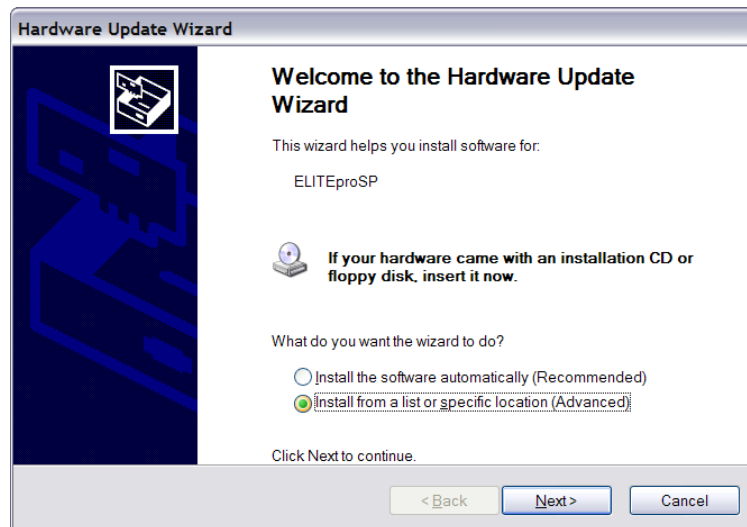

- 6) In the next window, select **Search for driver software in this location:** and Include Subfolders in the search. Click **Browse** and locate the **ELITEpro SP** driver folder in the ELOG 12b directory.

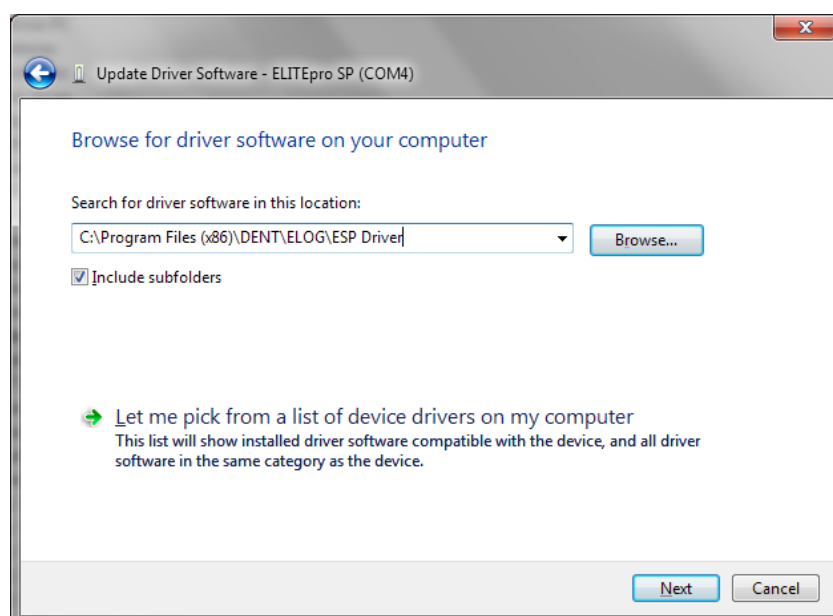


- 7) Click **Next>** and the **ELITEpro SP** driver will install. In the event that you receive a warning dialog box from Microsoft, click **Continue** to proceed.
- 8) Unplug the **ELITEpro SP** and plug it back in. **ELOG 12b** should launch and automatically connect to the **ELITEpro SP**.


Appendix D—AUTOPOLL: Unattended Data Collection

When ELOG is installed onto the PC, AutoPoll is also installed. AutoPoll may be used for unattended and automatic data retrieval from a number of remote loggers where the PC calls the loggers.

AutoPoll (short for **Automatic Polling**) is a stand-alone Windows application program that may be launched from ELOG by using the **Logger > Communication > AutoPoll** menu command. AutoPoll works in conjunction with a *Logger List*, which is a compilation of the remote loggers to be interrogated, their connection information, call schedule, and other tasks to be performed.

AutoPoll has limited user interaction and should be thought of primarily as an automatic dialer. After launching AutoPoll, you are prompted to first select a Logger List containing the loggers that you wish to access. Only one Logger List may be active at a time. After selecting the desired Logger List, a screen similar to the one below becomes the active window.

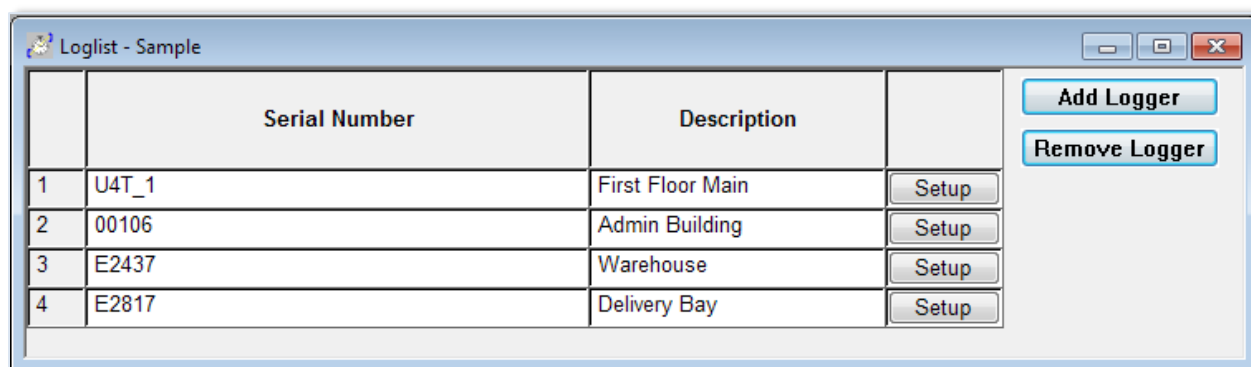

At this point, the AutoPoll program is running and may be minimized by clicking on the  button. AutoPoll will run in the background and you may continue to use the PC for any other tasks during the day.

AUTOPOLL MENU OPTIONS

File Menu


Typical Windows commands are found in this menu item.

- **New**

Opens a new empty Logger List.

- **Open**

The **Open** function is very similar to the **New** command except it assumes that a Logger List is already stored somewhere on the computer disk. Logger list files have an .lst extension.

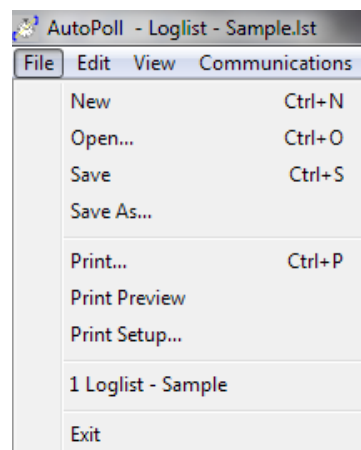

- **Save (Ctrl+S) and Save As:**

These functions allow you to save an open Logger List using the current name and location (**Save**) or with a new name and/or to a new location on the PC hard drive (**Save As**).

- **Print**

Used to initiate printing and to select the pages to be printed. Print Setup may also be accessed from this menu.

- **Print Preview**

Allows you to view the document as it will appear on the paper.


- **Print Setup**

Used to select the active printer, paper tray source, and paper orientation.

- **Exit**

Exits and closes the AutoPoll program.

Edit Menu

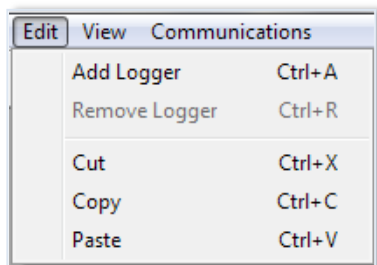

- **Add Logger**

Adds a new logger to a logger list


- **Remove Logger**

Removes a selected logger from a logger list

- **Cut, Copy, Paste**

Standard Windows commands.


View Menu

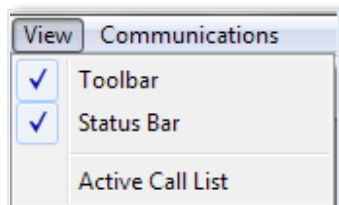

View is used to toggle the **T**oolbar and **S**tatus Bar on or off as desired. The Toolbar contains the speed buttons and the Status Bar is the line at the bottom of the screen that reports the callout status.


The Current Call List is the active Logger List that is being used by AutoPoll to schedule calls to loggers. The logger list may be closed and hidden but is still active in AutoPoll until a new logger list is opened, replacing the current list.


Communications Menu

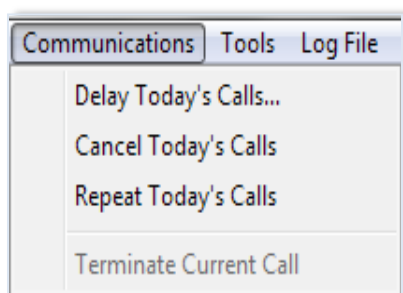

▪ Delay Today's Calls

Is used to *temporarily* change the time calls are to be made. If the window is minimized, AutoPoll operates in the background and the computer may be used for other purposes at the same time AutoPoll is running. Use Delay Today's Calls... to delay all scheduled calls for the day for up to 24 hours.

To use, click on the  buttons to select the length of the delay and then click **OK**. When the delay period has passed, any loggers that had been scheduled during the delay period will then be immediately called.

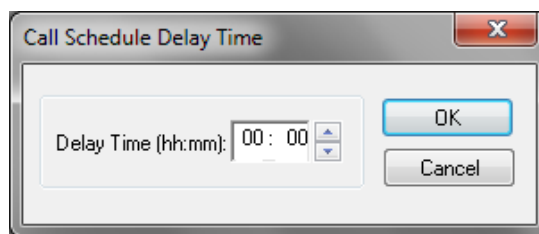

▪ Cancel Today's Calls


This feature deletes all calls scheduled for the day and they are *NOT* called later.

- **Repeat Today's Calls**

This function allows all loggers on the day's call list to be recalled. This feature would be useful if, for example, if the Ethernet cable came unplugged when the calls were attempted and, consequently, no data retrieval took place. Repet Today's Calls makes it easy to call all of the loggers again.


- **Terminate Current Call**

This menu item will cancel a call in process.


DID YOU KNOW? You may also cancel any operation, including data retrieval by clicking on the Cancel Communication Operation (Cancel COMM Op) speed button. 

Tools Menu

PC Setup is used to set parameters related to the computer including port settings, baud rates and more.

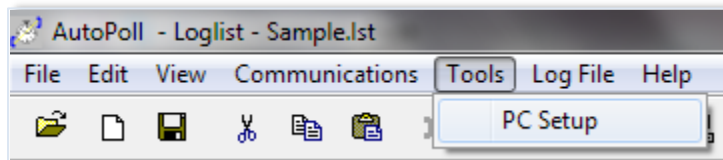


Clicking on **PC Setup** brings up the following screen:

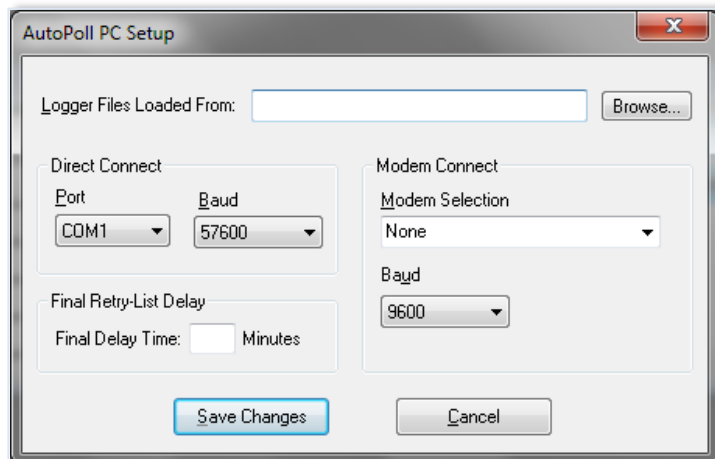

The default folder from which Logger Lists may be selected is set here.

The **Direct Connect** section shows the port and baud rate of the connected **ELITEpro SP**. The **Modem Connect** section displays connection information about legacy products. Enter an amount of minutes into the **Final Delay Time** box to retry data retrieval one last time.

Log File

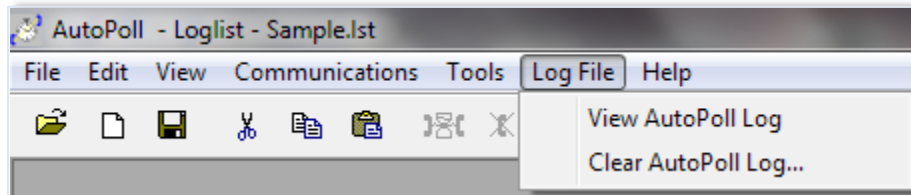

▪ View AutoPoll Log

When the AutoPoll program calls loggers, it creates a text file that contains a summary of all of the calls made called the AutoPoll Log. An excerpt example of the Log is shown below:

```
- DENT Instruments -  
AutoPoll Event Log File  
Connecting to logger ELITE on 04/10/12 at 10:54:31  
Direct connection to logger ELITE completed  
Setting clock from 10:54:36 04/10/12 to 10:54:38 04/10/12 for logger ELITE  
Task complete for call to logger ELITE  
Downloading data for logger ELITE  
Download of data from logger ELITE completed. Appended to file ELITE-01.ealog  
All session calls completed - 1 Calls Attempted - 0 Calls Failed
```

```
-----  
  
Connecting to logger ELITE on 04/10/12 at 11:08:01  
Direct connection to logger ELITE completed  
Setting clock from 11:08:07 04/10/12 to 11:08:08 04/10/12 for logger ELITE  
Task complete for call to logger ELITE  
Downloading data for logger ELITE  
Download of data from logger ELITE completed. Appended to file ELITE-01.ealog  
All session calls completed - 2 Calls Attempted - 0 Calls Failed  
  
-----
```

At the end of each call, a dashed line is added to the bottom of the file to separate calling sessions.

The file created shows the status of each call (and attempted call) made to the logger(s) in the Logger List and includes changes made to the logger clock if the *Set Logger Clock* flag has been checked in the Logger List. At the end of the session, a summary of the calls attempted and failed will be shown. If the software took three attempts to contact a logger and was successful on the third try, the summary would still show 1 Call Attempted - 0 Calls Failed.

The file created is labeled autopoll.log and is automatically saved to whatever folder contains the ELOG application program (typically C:\Users\UserName\Documents\DENT\ELOG\Data). The folder where the file is saved may not be changed except by moving the ELOG application too.

As subsequent polling sessions are completed, the autopoll.log file is automatically updated and the new contact reports are appended to the existing .log file. The maximum size of the autopoll.log file is 1 Megabyte. If this limit is exceeded, AutoPoll automatically changes the existing .log file into a .bak (backup) and starts a new .log file. If there is already an existing autopoll.bak file, the existing file is deleted and replaced by the new autopoll.bak file.

Autopoll.log is a text format document (.txt) and may be opened by a word processor or any application that reads ASCII files from which it may then be viewed or printed.

▪ Clear AutoPoll Log


Can be used to clear the current call log.

NOTE: Once cleared, the call log information cannot be retrieved.

UNDERSTANDING THE LOGGER LISTS

Logger Lists are used to maintain information about groups of loggers (the lists) related to the communication medium, including the IP address or telephone number of the logger modem and a schedule of calls to be made to the logger by the host computer. This information can be used for manual connecting and by the AutoPoll program. A Logger List may have as few as one logger in it or hundreds.

Logger Lists are accessed through the **File > Open (or New) > Logger List File** command. Selecting **Open** will bring up a folder from which to select an existing Logger List to edit or use. Selecting **New** will bring up a blank Logger List as shown below:

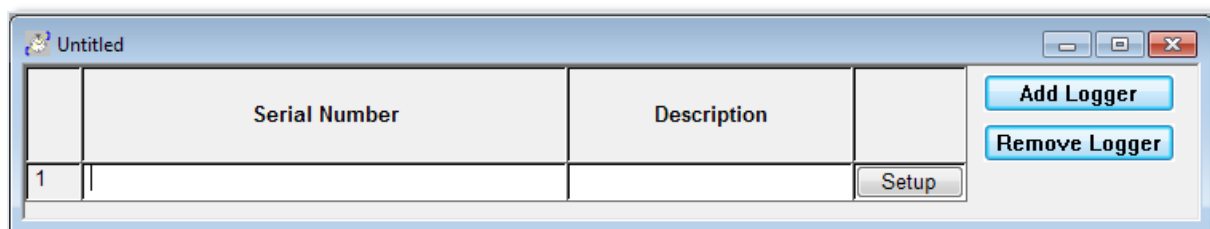

	Serial Number	Description	
1			Setup

Add Logger
Remove Logger

Serial Number is the 9-digit logger serial number. If the serial number entered here does not match the serial number of the logger that AutoPoll connects to, the data will be retrieved but an error will be noted in the Call Log.

Description (optional) is a 20 character description of the load monitored


Setup is where additional information about connecting to the logger is kept.

Add Logger is used to add a new, blank line at the bottom of the Logger List to create new entries for additional loggers.

Remove Logger is used to remove a logger from the list. To remove a logger, place the mouse cursor over the number in the left-most column of the logger to be removed. Left click the mouse to highlight the logger and then click Remove Logger.

Configuring a Logger List

Clicking **Setup** in the Logger List brings up the following screen for entering network connections and AutoPoll tasks:

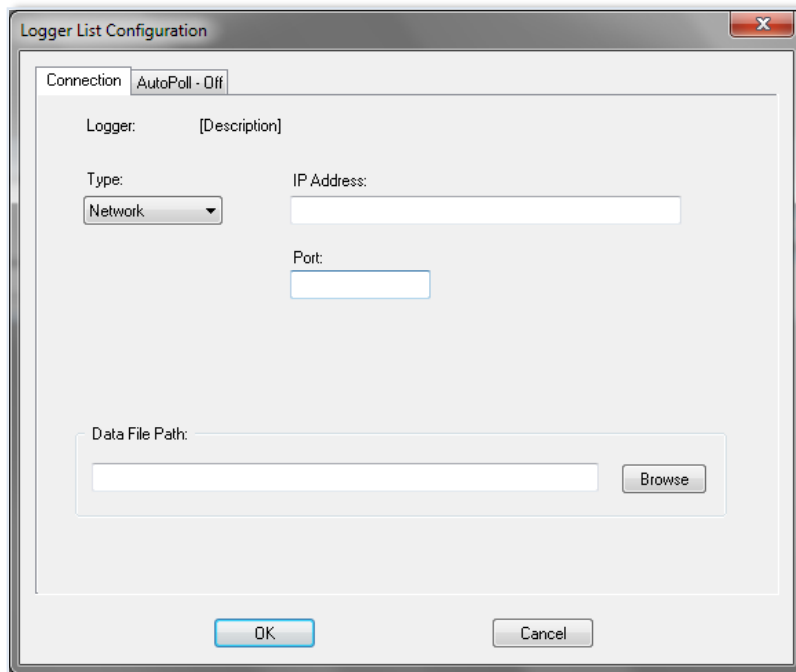

The screenshot shows a window titled "Logger List Configuration". At the top, there are two tabs: "Connection" and "AutoPoll - Off", with "Connection" being the active tab. Below the tabs, there is a section for configuring a logger. It starts with a label "Logger:" followed by a text box containing "[Description]". Below this, there is a "Type:" label and a dropdown menu currently set to "Network". To the right of the dropdown, there is an "IP Address:" label and a text box. Below the IP Address box, there is a "Port:" label and a text box. At the bottom of the configuration section, there is a "Data File Path:" label and a text box, followed by a "Browse" button. At the very bottom of the window, there are "OK" and "Cancel" buttons.

▪ Connection Tab

The default connection type is Network. If the logger is to be used on a network enter the IP Address and Port Number assigned to the logger.

If the logger is not connected to a network, click the **Type:** down arrow to change the connection method to Network (Ethernet or cell modem) or Telephone (Modem), or Direct (USB). For a Direct USB connection the baud rate does not need to be set. If for a Legacy Logger serial connection, set the logger baud rate (default is 57600) and PC COM port (default is COM 1) to be used. For Telephone connection, select the baud rate (default is 14400 baud) and enter the telephone number of the logger modem. For a network connection enter the IP address of the logger and the port number (default is 3001).

Data File Path: is the location of the folder where data files retrieved from the logger are saved.

Entering AutoPoll Tasks

A Call Schedule must also be defined for each logger in the list which is done by clicking on the AutoPoll tab which brings up the following default call scheduler:

The screenshot shows the 'Logger List Configuration' dialog box with the 'AutoPoll - Off' tab selected. The dialog is divided into several sections:

- Connection:** 'AutoPoll - Off' is selected.
- Logger Tasks:**
 - ☐ AutoPoll On
 - ☐ Set Logger Clock
 - ☒ Download Data
 - ☐ Download All Data
 - ☒ Append New Data
 - ☐ Create .csv File
- Call Interval:**
 - ☐ Immediate Call
 - ☒ Single Call
 - ☐ Multiple Calls
 - ☐ Daily
 - ☐ Weekly
- Single Call Date/Time:**
 - mm/dd: 01 / 01
 - hh:mm: 00 : 00
- Multiple Call Setup:**
 - First Call Time: hh:mm 00 : 00
 - Then Call Every: hh:mm 00 : 00
- Daily Call Setup:**
 - Time to Call: hh:mm 00 : 00
- Weekly Times To Call:**

Day	hh:mm
<input type="checkbox"/> Sunday	00 : 00
<input type="checkbox"/> Monday	00 : 00
<input type="checkbox"/> Tuesday	00 : 00
<input type="checkbox"/> Wednesday	00 : 00
<input type="checkbox"/> Thursday	00 : 00
<input type="checkbox"/> Friday	00 : 00
<input type="checkbox"/> Saturday	00 : 00

At the bottom are 'OK' and 'Cancel' buttons.

The default call schedule shown above is a Single Call on January 1st at 00:00 (Midnight). Because the *Append New Data* button is selected, when the PC calls the logger only the “new” data in the logger stored since the last data download will be retrieved.

Logger Tasks

Set Logger Clock—If the *Set Logger Clock* box is checked then, after the PC calls the logger and the data download is complete, the PC will set the logger clock to the PC time.

Download Data—Data retrieval may be one of two options: Download All Data or Append New Data. Append New Data is used for on-going metering projects and only data collected and stored in the logger since the last download is retrieved. The new data is appended to the existing data file.

DID YOU KNOW? When appending a data file, AutoPoll looks in the data folder specified in the **Tools > PC Setup** for that logger. If the data file has been moved or this is the first time the logger has been read and Append New Data is selected, then AutoPoll will download the entire memory of the logger.

Create .csv File—If it is desired to have the downloaded data also be created in a .csv (Comma Separated Value) format for use in other applications such as Excel, check this box. Creating a .csv does not affect the original .elog file downloaded from the logger.

Call Interval


Five choices are available for automatic polling and data retrieval however *only one Call Interval may be selected at a time*. The choices are:

Immediate Call—Calls the logger as soon as the AutoPoll program is initiated. Use this to test the system after completing a logger installation to verify correct operation.

Single Call—Use this option to make a one-time call and data retrieval from a logger. Use the Single Call Date/Time box to set the month and day (mm/dd), and hour and minute (hh:mm) the call is to be made.

Multiple Calls—Use this option to make multiple calls to a logger in the same day. The First Call Time is when AutoPoll first calls the logger. AutoPoll then calls the logger at the interval set in: Then Call Every. The time of the first call happens on the first day that the call out time is encountered *after* the Logger List has been saved.

Daily Call—Use this option to call the logger every day at the same time. Use the Daily Time To Call box to set the hour and minute (hh:mm) that the call is to be made.

DID YOU KNOW? Click on the  arrows to change to the desired value for any of the times (days or months).

Weekly Call—Use this option to configure the host computer to call the logger on one or more days every week. Use the Weekly Times To Call box to select the days and the hour (hh) and minute (mm) the calls are to be made. Only one call per day is permitted but they can be at different times on different days.

Appendix E—Calculated Power Channel Formulas

The following information details the formulas used to calculate the parameters available in the Power Sum Channels 5 and 6.

WYE CONFIGURATION L1-N, L2-N, L3-N

Measurement	Formula	Notes/Description
Amps (System)	$\frac{L1 + L2 + L3}{3}$	Average of L1, L2, and L3 amp values.
Volts (System)	$\frac{\text{Sum of three phase to neutral voltages}}{3}$	For a Phase to Neutral with WYE configured meter. Average of the three phase-to-neutral voltages.
kW (System)	$L1 \text{ kW} + L2 \text{ kW} + L3 \text{ kW}$	Sum of L1, L2, and L3 phase watt values.
kWh (System)	$\frac{L1 \text{ kW} + L2 \text{ kW} + L3 \text{ kW}}{\text{\# of samples in an hour}}$	Calculated per waveform sample with a running total of each waveform kWh for the integration period. The average of the system kW/# cannot be taken of integration periods in an hour because if the load contains channels that vary between generating and consuming power, resulting in an instance that it may not be correct.
VAR (System)	$L1 \text{ kVAR} + L2 \text{ kVAR} + L3 \text{ kVAR}$	
VARh (System)	$\frac{L1 \text{ kVAR} + L2 \text{ kVAR} + L3 \text{ kVAR}}{\text{\# of samples in an hour}}$	See kWh (System) WYE notes.
VA (System)	$L1 \text{ kVA} + L2 \text{ kVA} + L3 \text{ kVA}$	
VAh (System)	$\frac{L1 \text{ kVA} + L2 \text{ kVA} + L3 \text{ kVA}}{\text{\# of samples in an hour}}$	See kWh (System) WYE notes.
Apparent PF System	kW System kVA System	Measurement calculation information is provided for reference only.
Displacement PF System	kW System $\text{SQRT} [(kW \text{ System})^2 + (kVAR \text{ System})^2]$	

DELTA CONFIGURATION: L1-L2 AND L3-L2

When using the 2 CT method. When using the 3 CT method on a Delta service the channel 5 and 6 Power Sum equations are the same as for the WYE configuration shown above.

Measurement	Formula	Notes/Description
Amps (System)	$\frac{L1 + L3}{2}$	Average of L1 and L3 amp values.
System Volts (Phase to Phase with DELTA configured meter)	$\frac{(L1-L2) + (L3-L2)}{2}$	Average of L1- L2 and L3 – L2 phase to phase voltages
kW (System)	L1 kW + L3 kW	Sum of kW L1 and kW L3 phase watt values.
kWh (System)	$\frac{L1kW + L3kW}{\# \text{ of samples in an hour}}$	See kWh (System) WYE notes.
kVAR (System)	L1 kVAR + L3 kVAR	
kVARh (System)	$\frac{L1 \text{ kVAR} + L3 \text{ kVAR}}{\# \text{ of samples in an hour}}$	See kWh (System) WYE notes.
kVA (System)	$\text{SQRT} [(\text{System kW})^2 + (\text{System kVAR})^2]$	
kVAh (System)	$\text{SQRT} [(\text{System kW})^2 + (\text{System kVAR})^2]$	Cannot calculate from System kWh and System kVARh or from integrated kW or kVAR values. Needs to be calculated from the base sample period kW and kVAR.
Apparent PF System		Same as Displacement PF System below. Cannot calculate APF for delta loads.
Displacement PF System	$\frac{\text{kW System}}{\text{SQRT} [(\text{kW System})^2 + (\text{kVAR System})^2]}$	

 
Appendix F—Communication Options

In this section the available communication options and their setup steps are described in further detail, including USB, Ethernet(LAN), WiFi, *Bluetooth*, and Cell Modem.

USB (STANDARD)


A USB connection is the standard (and fastest) connection option for the **ELITEpro SP**, used locally for transferring data when a laptop is available in the field.



- 1) Connect the USB cable to a USB port on your computer, inserting the other end in the USB port on the **ELITEpro SP** (Hint: Look for this USB symbol: ). If a USB cable is used inside an electrical panel, it must be rated to the appropriate voltage or wrapped in an appropriately rated insulating sleeve. The DENT-supplied cable does not meet this requirement without an insulating sleeve.
- 2) ELOG 12b should launch automatically and connect to the logger. If it does not, click on the icon on the computer desktop.
- 3) The **ELITEpro SP** should automatically connect to the PC. If it does not, choose the correct location from the Friendly Ports™ drop-down menu. For more information regarding Friendly Ports™, see **Communicate with the ELITEpro SP** in Section 1.


ETHERNET LAN (STANDARD)

The Ethernet option is also used for a direct connection where a network is available. Ethernet connections must be configured initially via USB by users familiar with the network details, and may require the assistance of a network administrator.

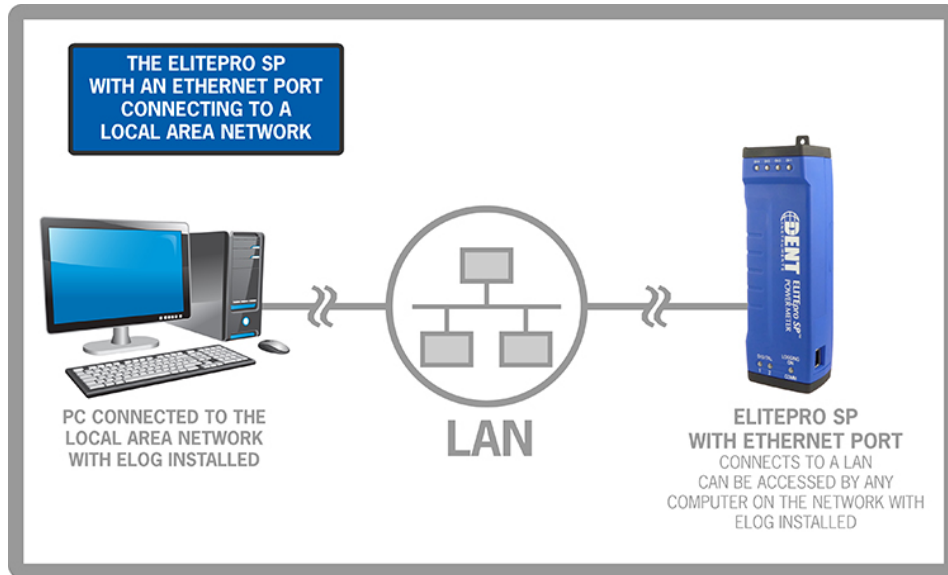

 NOTE: Each **ELITEpro SP** connected to the network requires its own unique network IP Address. An address will be provided automatically if the network allows DHCP (Dynamic Host Configuration Protocol) and the **ELITEpro SP** is configured to request an address.



- 1) Configure the ESP for use on the network. First connect the USB cable to a USB port on your computer, inserting the other end into the USB port on the **ELITEpro SP**. (Hint: Look for this USB symbol: ) If a USB cable is used inside an electrical panel, it must be rated to the appropriate voltage or wrapped in an appropriately rated insulating sleeve. The DENT-supplied cable does not meet this requirement without an insulating sleeve.
- 2) ELOG 12b should launch automatically and connect to the logger. If it does not, click on the icon on the computer desktop.

- 3) The **ELITEpro SP** should automatically connect to the PC. If it does not, choose the correct location from the Friendly Ports™ drop-down menu. For more information regarding Friendly Ports™, see **Communicate with the ELITEpro SP** in Section 1.
- 4) Configure the Logger Ethernet Setup information once the **ELITEpro SP** has established a connection with the PC.
 - a) From the ELOG menu, select **Logger > Communication > Logger Ethernet Setup...** The Logger Ethernet Setup dialog box displays.

The Ethernet connection must have an IP Address that can either be set manually with the *Use Static IP* address option (for a fixed address) or obtained automatically from the router connected to the logger using the *Use DHCP* option (dynamic address). Both options have advantages.

- Static Connection

If you know an IP address that is not being used by another device on the network select the **Use Static IP** option and enter that address into the IP Address: field. This may require permission from a network administrator. With a static IP address it is easy to connect to the logger with ELOG as there is no doubt about what IP address to use.

- Dynamic Connection


If you want the router to assign an IP address to the meter automatically, select **Use DHCP**. This may avoid the need of a network administrator as the router will assign an IP address that does not conflict with any other devices on the network. A disadvantage of the DHCP option is that the “lease” of the IP address may expire after a period of time and the router could assign a different IP address. A new IP address means that ELOG cannot connect to the logger until the new IP address has been entered when using the Network Connect option. (See below.)


An additional option is to set the logger to DHCP and go to the router and assign a specific IP address to the MAC address that corresponds to the logger. In this way, if the lease does expire, the router will always assign the same IP address back to the logger. This option may also require the network administrator.


- b) If necessary, change the Port Number. The factory default is 3001 and will usually work in most cases.

The use of the Subnet Mask and Gateway Address are outside the scope of this manual. If needed, ask the network administrator for assistance

- c) Click **Update Logger**. The following message displays:

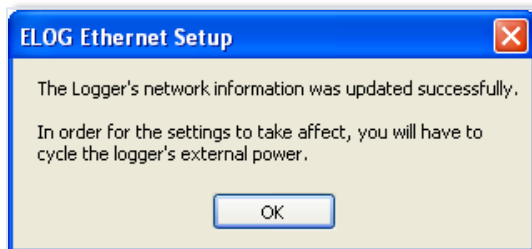

- d) Select **OK** then remove all power to the logger including the USB cable to perform a power cycle.
 - e) **(Skip this step is Static IP was used.)** If DHCP was selected, reconnect the logger using the USB cable and use **Logger > Communication > Logger Ethernet Setup...** to determine what IP address was assigned by the network router to the logger. Note this IP address and disconnect from the USB connection.
- 5) Connect an Ethernet cable from the network into the Ethernet port on the side of the logger.
- 6) Click the  **Ethernet or WiFi Connection** speed button on the toolbar to reconnect via Ethernet. The Network Connect dialog box displays:

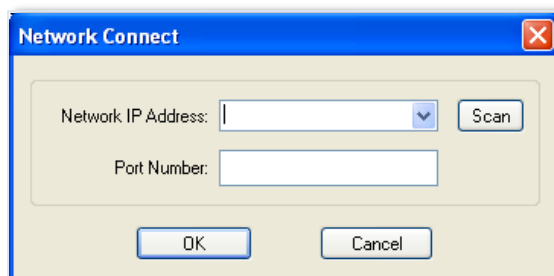

- 7) Enter the **Network IP Address** and **Port Number** if it is not automatically populated. Select **OK** to proceed and establish your Ethernet connection.

NOTE: If you do not know your *Network IP Address* or *Port Number*, click the **Scan** button on the Network Connect window. ELOG will scan the network for loggers and display them in the Logger


Selection dialog box. Look for the serial number of the logger to determine which connection point is yours. The logger's serial number can also be found on the back of the logger. Select your logger in the Logger Selection dialog box and click **OK**, and then **OK** again in the Network Connect window.

WiFi AND WIRELESS ACCESS POINT CONNECTION (OPTIONAL)

When the **ELITEpro SP** is equipped with the optional WiFi module it may be used in one of two ways: as a WiFi connection to an existing WiFi network or in Access Point Mode where the logger connects one-to-one to a single device such as a laptop or smart phone.


Connection ranges also depend on whether an internal or high-gain external antenna is used.


DID YOU KNOW? The WiFi connection will work over a range of 30 to 300ft range, depending on the installation environment. Range is limited when mounted within a metal cabinet.

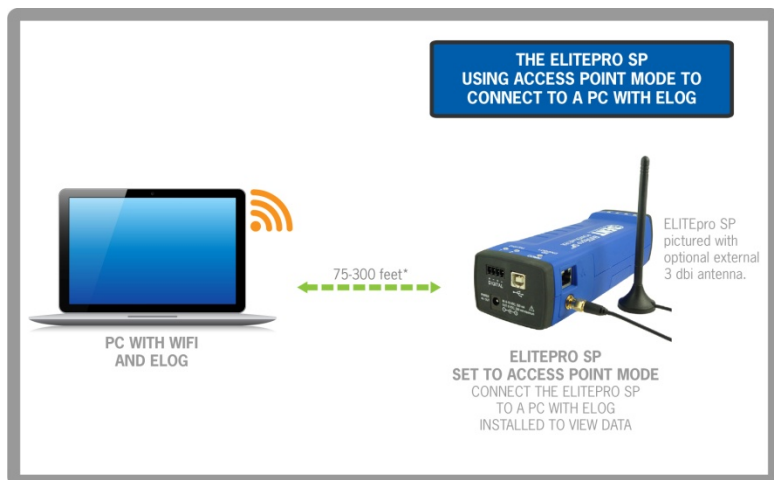

ELITEpro SP as its own Access Point

Using the ELITEpro SP as an Access Point “Hot Spot” is probably its most useful mode. As a Hot Spot, the logger allows one-to-one connection between the meter and a WiFi enabled device such as a laptop computer, tablet, or smartphone.


- 1) Set up the logger for Access Point connection. Connect the USB cable to a USB port on your computer, inserting the other end in the USB port on the **ELITEpro SP** (Hint: Look for this USB symbol: ). If a USB cable is used inside an electrical panel, it must be rated to the appropriate voltage or wrapped in an appropriately rated insulating sleeve. The DENT-supplied cable does not meet this requirement without an insulating sleeve.
- 2) If it does not launch automatically, start ELOG 12b and connect to the logger.
- 3) From the ELOG menu, select **Logger > Communication > Logger WiFi Setup....** The Logger WiFi Setup dialog box appears.

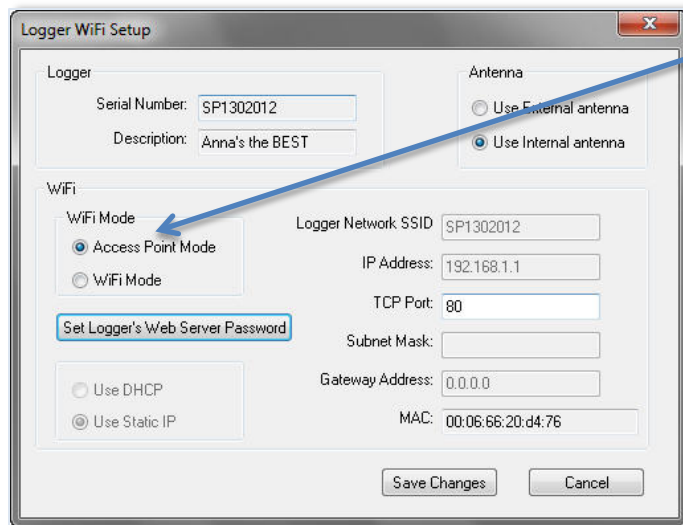

Access Point Mode
Radio Button

NOTE: *ELITEpro SP* loggers equipped with a WiFi module all contain an *internal* antenna. An *external* antenna is optional. You may toggle between the internal and external antenna (if it is available on your logger) by selecting the appropriate radio button.

- 4) Select the **Access Point Mode** radio button in the WiFi Mode section of the dialog box.
- 5) Click **Set Logger's Web Server Password**. The Set Logger's Web Server Password dialog box displays. Enter a password (if desired) for use when connecting to the loggers internal web server and click **OK**. The factory default password is 1234. (**NOTE:** This password is only used when connecting through a web browser. *See below.*)
- 6) Click **Save Changes** in the Logger WiFi Setup dialog box.

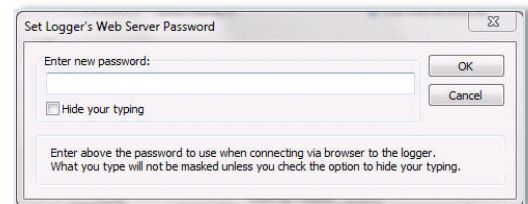

ELOG updates the WiFi settings and prompts you to click **OK** in order to reset the *ELITEpro SP*.



NOTE: After the blue COMM LED on the *ELITEpro SP* device stops blinking, use the ELOG command **Logger > Communication > About the Connected Logger** to verify that all entries in the Logger Properties dialog box match the values you entered.

When using Access Point Mode the SSID will be P + the logger serial number and the IP address will be 192.168.1.1 and the Port number will be 80.

- 7) Open the Wireless Network Connection dialog on your PC. (You may need to click **Refresh**.) Look for an access point with the **SSID** (P + logger serial number) and then click **Connect**. Ensure that Windows connects to the access point.

There are two ways to access the **ELITEpro SP** once you are connected:

- **Using ELOG to connect to the ELITEpro SP access point**

- a) Disconnect from the USB connection using **Logger > Connection > Terminate Connection** or by using the  **Disconnect** speed button.
- b) Click the  **Ethernet or WiFi Connection** speed button on the toolbar.
- c) In the Network Connect dialog box, enter **192.168.1.1** for the IP Address, **80** for the Port Number, and click **OK**. Sometimes it may be necessary to disconnect and reconnect the WiFi connection from the PC.

You may now use all of the capabilities of ELOG with the logger.

- **Using a Web Browser (Smart Phone, Tablet, etc.) to connect to the ELITEpro SP Built-in Web Server**

The **ELITEpro SP** includes a primitive internal webserver that allows external Smart devices such as Smart Phones, Tablets, PCs, etc. to connect to the logger and replicate a limited set of ELOG functions, i.e., viewing Real-Time Values or reading data.


After connecting the smart device to the logger's WiFi module in Access Point Mode as described for a PC in Step 7 above:


- a) Open a web browser in the smart device.
- b) In the Address box of the browser, enter the IP Address of the **ELITEpro SP**, which is: **192.168.1.1**
- c) When the login page appears, enter the **Web Page Password** you set in the Logger WiFi Setup dialog box in step 5 above. (The default password is 1234)


Once connected, you can view real-time values, view or download logged data as an Excel CSV file, start/stop logging, clear the logger memory, and view the logger properties. Other ELOG functions such as creating or changing a Setup Table are not yet available. The Web Server interface is convenient for verifying a meter is correctly connected by viewing real-time values without needing a PC or laptop.

ELITEpro SP Connected to a Wireless Network

In addition to acting as an Access Point for one-to-one connections, an ELITEpro SP with the WiFi module may also be connected to a local area network (LAN) through a wireless access point or wireless router. To set up the logger it must first be configured via a USB connection to a PC running ELOG and may require assistance from someone familiar with the network you want to connect to. Below is a diagram of this communication method:

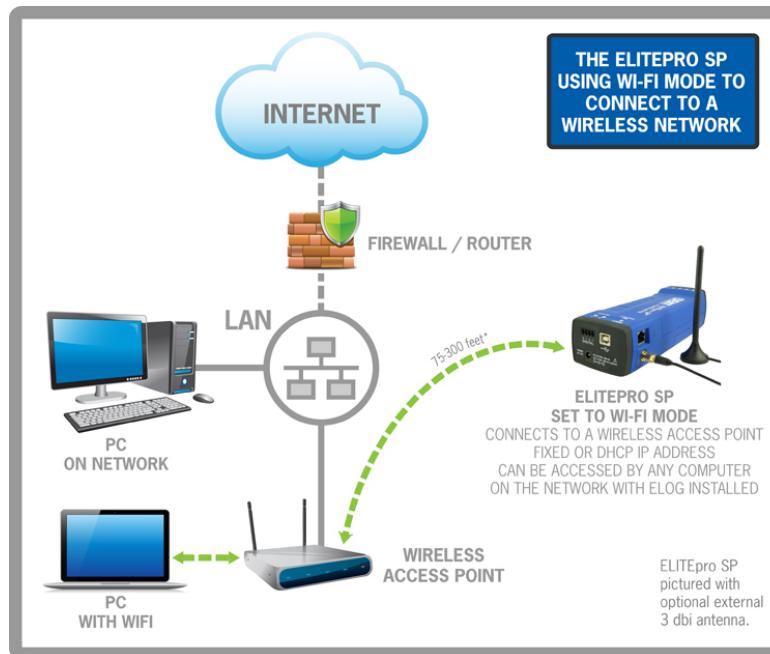

- 1) Set up a WiFi logger for connection to a wireless network first. Connect the USB cable to a USB port on your computer, inserting the other end in the USB port on the **ELITEpro SP** (Hint: Look for this USB symbol: ). If a USB cable is used inside an electrical panel, it must be rated to the appropriate voltage or wrapped in an appropriately rated insulating sleeve. The DENT-supplied cable does not meet this requirement without an insulating sleeve.
- 2) If it does not launch automatically, start ELOG 12b and connect to the logger.
- 3) From the ELOG menu, select **Logger > Communication > Logger WiFi Setup....** The Logger WiFi Setup dialog box appears.

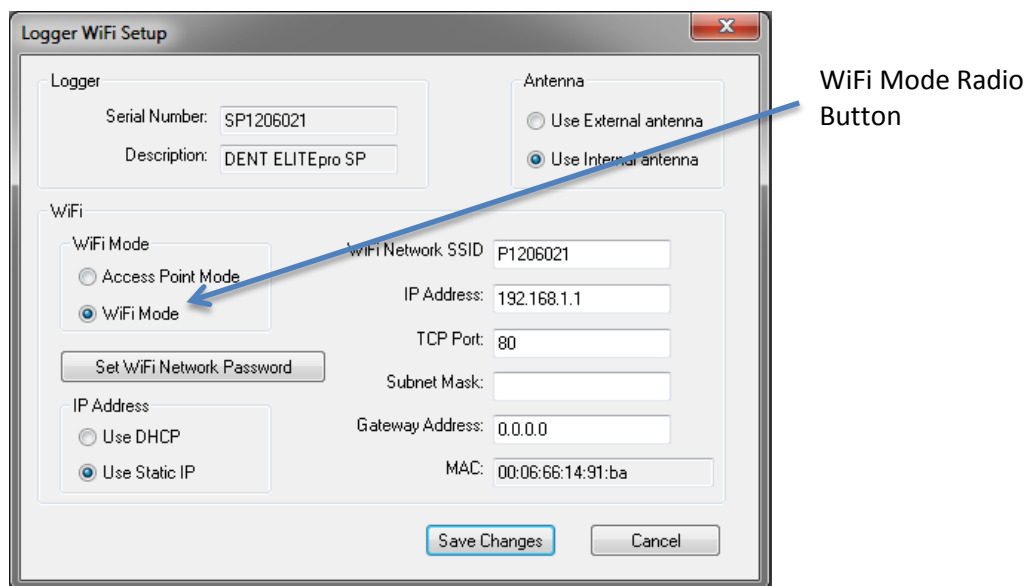

Note: *ELITEpro SP* loggers that are equipped with a WiFi package all contain an *internal* antenna. An *external* antenna is optional. You may toggle between using the internal and external antenna (if it is available on your logger) by selecting the appropriate radio button.

- 4) Select the **WiFi Mode** radio button in the WiFi Mode section of the dialog box.

A network administrator may be needed for the next three steps.


- 5) Enter the name of the wireless network in the **WiFi Network SSID** field.
- 6) Click **Set WiFi Network Password** and enter the network's password.
- 7) Click the **Use Static IP** radio button and enter the **IP Address** and **TCP Port** assigned by the network administrator.
-or-
Click the **Use DHCP** button.


NOTE: To connect to the logger wirelessly you will need to know what IP address the router assigned to the logger. This can be found by making a direct, USB connection to the logger and then use **Logger > Communication > About the Connected Logger...** to see the IP address.

- 8) Click **Save Changes**.

ELOG updates the WiFi settings and prompts you to click **OK** in order to reset the *ELITEpro SP*.

NOTE: After the blue COMM LED on the *ELITEpro SP* device stops blinking, use the ELOG command **Logger > Communication > About the Connected Logger** to verify that all entries in the Logger Properties dialog box match the values you entered.

- 9) The logger should now be connected to the LAN via a WiFi link to the wireless router on the network. To connect to the logger from a PC on the network, click the  **Ethernet or WiFi Connection** speed button on the toolbar. The Network Connect dialog box displays:

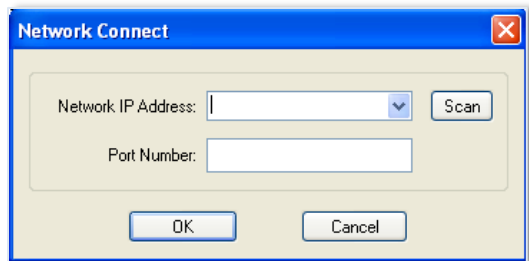

- 10) Enter the **Network IP** address and **Port Number** if it is not automatically populated. Select **OK** to proceed and establish your WiFi connection.

NOTE: You cannot use the **Scan** button to search for a logger that is connected wirelessly to the network. **Scan** only works with a wired, Ethernet connected logger.

Troubleshooting WiFi Connections

If you are unable to connect to the logger, check the following items:

- 1) Connect to the logger using a USB connection. From within ELOG, view the logger properties under **Logger > Communication > Logger Properties**.
- 2) Check the signal strength indicator (in percent or dBm) to ensure you have a good signal.
- 3) Ensure the WiFi section has the proper settings (i.e. correct addresses). Ensure the WiFi module is active, which can be determined by the “No TCP connection” message. Ensure the blue COMM LED is not blinking.
- 4) If you are unable to make a connection, contact DENT Instruments for questions and assistance.

NOTE: The WiFi access point has a 5 minute inactivity timeout. After 5 minutes of no usage the connection is dropped. Depending on the version of the Windows operating system in use, this could mean you must close/reopen or disconnect/reconnect your WiFi connection to the logger.

BLUETOOTH (OPTIONAL)

Bluetooth is intended for wireless connections up to 100ft, depending on the installation environment. The **ELITEpro SP** uses the higher power Class 1 *Bluetooth* transceiver for longest range. Please note that range may be limited if the **ELITEpro SP** is mounted within a metal cabinet.


NOTE: A laptop cannot be in a docking station when using *Bluetooth*.




Connections must be configured initially via USB by users with knowledge of Windows *Bluetooth* wireless technology enabled products.


To make a *Bluetooth* connection from a PC to an ELITEpro SP both devices must have a Bluetooth module. Most PCs, including laptops, do not have *Bluetooth* and it may be necessary to purchase a *Bluetooth* dongle (usually a plug-in USB device) and add it to the PC. If purchasing an external *Bluetooth* dongle ensure that it supports SPP, Serial Port Protocol. Typically the packaging will indicate if it supports SPP. Follow the *Bluetooth* manufacturer's instructions for installing the Bluetooth device.

The rest of this discussion assumes that the PC has *Bluetooth* capability. Additional information may be found by opening Windows Help and searching for "Bluetooth." Look for "Add a Bluetooth enabled device."

Bluetooth devices must be "paired" to communicate. Look in the Task Bar on your PC for the  *Bluetooth* icon (Hint, the symbol may be hidden until the "Show hidden icons" button is clicked). After clicking the *Bluetooth* icon a window should open as shown below (Windows 7):

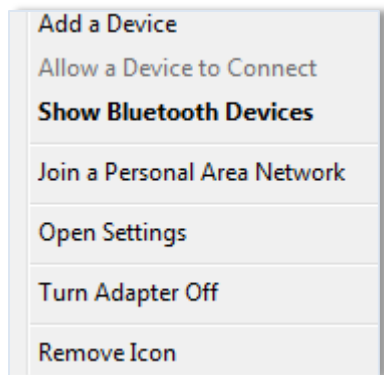


- 1) Click **Add a Device**. You should then see a list of *Bluetooth* devices external to the PC including the **ELITEpro SP** identified by its serial number. (The logger may be the *only* device the PC sees.)
- 2) Select the desired **ELITEpro SP** and click **Next**.
- 3) In Windows 7 you will next be asked to create a pairing code, enter the device's pairing code, or pair without using a code. Click **Enter the device's pairing code**.
- 4) When prompted, enter the **ELITEpro SP** pairing code. The factory default value is 1234. Windows should then display a message that your device is ready to use.
- 5) Next determine which com port Windows assigned to the *Bluetooth* link. In ELOG, click on the **PC Setup** speed button. Windows may have assigned two com ports to the *Bluetooth* link but only one will work for communication. The correct port to use is found through trial and error.

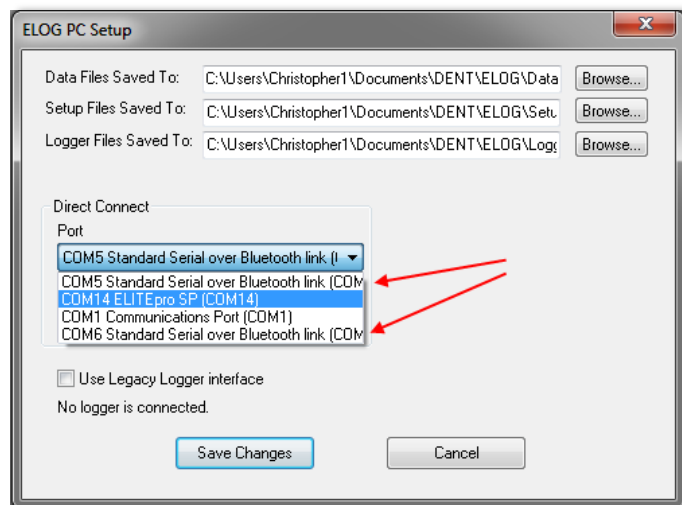

- 6) Click on the first "...Standard Serial over Bluetooth link..." found in the Direct Connect Port drop-down list, click **Save Changes**, and attempt to communicate using Direct Serial or Bluetooth Connection speed button or use **Logger > Communication > Connect via USB or Bluetooth**. The connection may take up to 10 seconds to complete.

If the first port attempted fails, try again using the other *Bluetooth* port found in PC Setup. Repeat, if necessary, until a connection is established and the correct *Bluetooth* port is known.

- 7) Reopen ELOG PC Setup and click the **Port Preferences** button. The COM Port Preferences dialog box displays where you can deselect the check boxes for the ports that are not used by ELOG, including the extra com port(s) for the *Bluetooth* connections by clicking on an unneeded checkbox to remove the check. In the example below, the *Bluetooth* Com 6 has been removed and Com 5 is kept.

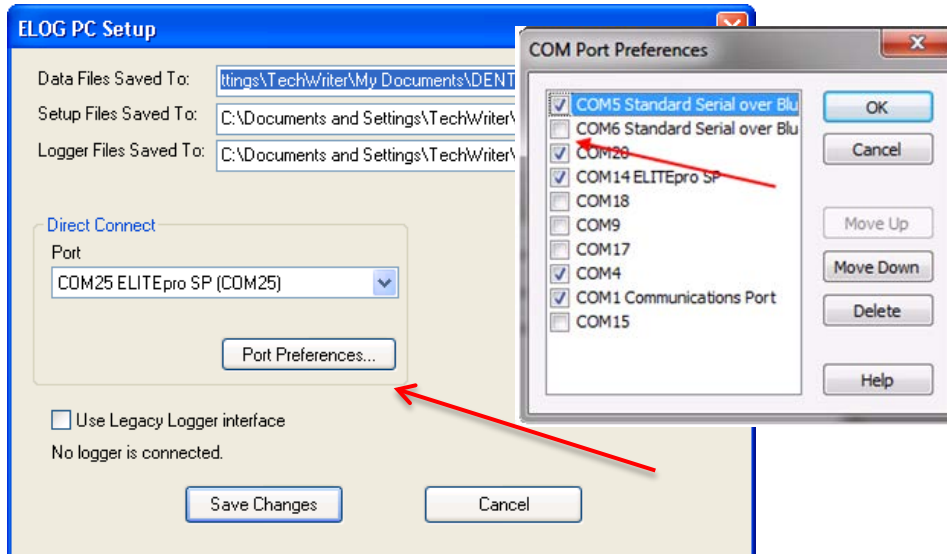

- 8) Click **OK**, and then **Save Changes** in the ELOG PC Setup dialog box. The unused Com Ports no longer appear in the Port drop-down list.

If you are unable to connect to the logger, check the following items:

- 1) In Windows Control Panel, open Devices and Printers and verify that the ELITEpro SP is shown in the Bluetooth devices along with the Bluetooth module in the PC. If not, reinstall the PC's Bluetooth device and/or re-pair the PC to the logger.
- 2) If the logger does not appear after repeating the steps, ensure that the device is powered and the blue COMM light is flashing.
- 3) If the logger is visible and you are unable to make a connection, or if you are unable to get the device added via the Windows Control Panel, contact DENT Instruments for questions and assistance.

CELL MODEM CONNECTION (OPTIONAL)

The cell modem connection option is limited based on availability and customer requirements. Contact DENT Instruments for further information and assistance.

If at any time you have questions or comments, please contact DENT Instruments for assistance.

DENT Instruments | 925 SW Emkay Drive | Bend, Oregon 97702 USA

Phone 541.388.4774 | Fax 541.385.9333 | www.DENTinstruments.co

INDEX

A

active Logger list, AutoPoll.....	95
appending new data	59
AutoPoll	16, 58, 93
active Logger list	95
clear log.....	98
configuring a logger list.....	99
delay, repeat calls	95
entering tasks.....	100
logger tasks	100
PC Setup.....	96
set logger clock	100
understanding logger lists.....	98
view log	97
AutoPoll Menu	
Communications	95
Edit.....	94
File.....	93
Log File.....	97
Tools.....	96
View	95

B

Bluetooth	26, 56
detailed connection information	115

C

Calculated Power Channel	
calculations	102
combining channels	37
Calculated Power Channels	34, 37
calculating CT value	44
cancel communications operation.....	57
Communication Sub-Menu	55
About the Connected Logger	58
AutoPoll	58
Cancel Communications Operation	56
Choose From Last Used Logger List.....	56
Connect via Ethernet of WiFi	56
Connect via USB or Bluetooth.....	56
Logger Ethernet Setup	56
PC Setup.....	56
Terminate Connection	56
communications, AutoPoll.....	95
configuring a power channel	35

connection	
terminating.....	29
creating a CSV file.....	60
CT Connection	
polarity	44
CT Connections.....	19, <i>See also</i> CTs
millivolt.....	20
polarity	21
RoCoil	22
UL listings	42
CTs	
calculating the value.....	44
commonly available.....	43
connecting.....	44
current ratings.....	43
selecting	42
selection of	44
UL recognized.....	43
Current Transformer	<i>See</i> CTs

D

data	
appending.....	59
data range	79
exporting	76
extract by date or record number	80
Data File Summary	
report example.....	78
data interval	32
data logging.....	33
Data Logging	
start options	33
stop options.....	33
Data Menu.....	72
Analyze a Selected Data Range.....	79
Check Data for Errors	81
Create New Graph	72
Data File Summary	77
Export Data File	76
Extract a Range of Data	80
Fill Missing Records	81
Graph Options	74
Import CSV File	77
Open Data File	75
Retrieve Data From Logger.....	75
Data summary	77

DELTA configuration	103
Digital Channel	
maximum output rate	24
pulse output	24
scale	24
value	24
Digital Connections	23
Display Real Time Values Sub-Menu	
Harmonics	65
Show as Graphs	62
Show as Text	61
Waveform Capture	64

E

ELITEpro SP	<i>See</i> Logger
communicating with	27
Configure using the ELOG Logger Menu	55
configuring	70
connections	18
firmware	82
mounting	17
specifications	13
ELITEPRO SP Connections	15
Bluetooth	26
digital	23
ethernet	26
power in/out	25
USB	25
voltage	23
WiFi	26
ELOG	
connection window	54
Data menu	72
Edit menu	53
File menu	52
firmware updates	82, <i>See also</i> Firmware
Installing the software	16
Logger menu	55
memory capacity	33
overview of the software screen	50
PC Setup	27
quick setups	34
Setup window	70
speed buttons	50
status bar	54
toolbar	54
Tools menu	70
View menu	54
window	50
ELOG Data File	52
Ethernet	26, 57
detailed connection information	105
Export data file	53
exporting data to spreadsheet	76
extracting a range of data	80

F

Firmware	71
downloading, installing updates	82
troubleshooting	83
Friendly ports	27

G

Graph File	52
graphs	62, 72
analysis values	75
annotation	75
attributes	75
creating	73
data cursor	75
data options	74
data points	75
export	64
export formats	64
options	73
parameters	73
record range	73

H

Harmonics	65
recording values to your PC	66

I

Import CSV file	53
Installing ELOG software	16

L

last used logger list	57
LED Diagnostics	40
Communication	40
PhaseChek	40
Legacy Logger	28
line frequency	32
Logger	
about the connected logger	58
configuring a Setup Table	32
creating a setup table	31
data logging	33
existing setup table	31
retrieving a setup table	30
saving a setup table	39
sending a setup table to logger	38
logger clock	
set in AutoPoll	100

Logger Clock Sub-Menu	
Manually Set Logger Time.....	67
Synchronize Time To Match PC.....	67
logger connection window	28
logger list	93
active, AutoPoll	95
configuring in AutoPoll.....	99
last used	57
understanding in AutoPoll	98
Logger List File	52
Logger Menu	55
Clear Logger option 69, <i>See also</i> Clear Logger Sub-Menu	
Communication option <i>See also</i> Communication Sub-Menu	
Display Real Time Values option <i>See also</i> Display Real Time Values Sub-Menu	
Logger Clock option <i>See also</i> Logger Clock Sub-Menu	
Logger summary	77

M

memory	
maximizing	37
memory capacity	33
Menus	
Data.....	72
Edit.....	53
File.....	52
Logger	55
Tools.....	70
View	54
messages	
connecting with ESP	28
metering systems, unusual	84
Millivolt CTs	20
Mounting the ESP	17
maximum weight	17
removal	17

P

PC Setup.....	27, 56, 70
PhaseChek	40
Physical Power Channel	
options	36
polarity.....	21, 44
Port preferences	27
friendly ports.....	27
Power Channel.....	24
Calculated	37
calculating formulas.....	102
combining	37
configuring	35
configuring for power measurement.....	41
delta configuration calculations.....	103
Digital	24

Physical.....	36
wye configuration calculations.....	102
Power In/Out.....	25
Power Measurement	
connecting sensors.....	41
CT selection	42
CT selection examples	44
preventing shock hazard	7, 41
wiring conventions	42
PT Ratio	35
Pulse Output.....	24

Q

Quick Setups.....	34, 45
wiring diagrams	45

R

Recorded Values.....	35
retrieving data	75
RoCoil CTs.....	22

S

safety information.....	7
Setup summary	77
Setup Table	
configuring	32
creating.....	31
existing	31
maximizing memory	37
retrieving	30
saving.....	39
sending to logger	38
Setup Table File	53
Software installation	16
spreadsheets	76
Summaries	
data, setup, logger.....	77
symbols on the ELITEpro SP	7

T

terminate connection.....	57
Tools Menu.....	70
PC Setup	27, 70
Restore Hidden Messages	71
Update Logger Firmware	71
troubleshooting	
communications	28
troubleshooting ESP driver installation	89

U

UL Listings	42
update driver	89
update firmware	71
USB	25, 56
detailed connection information.....	104

V

voltage connections.....	23
voltage rating.....	23

W

Waveform capture	64
WiFi	26, 57
detailed connection information.....	109
troubleshooting connections	114
Wiring Connections	
CTs	19
Wiring Conventions.....	42
Wiring Diagrams	
quick setups.....	45