


# **GMC Circular Saw 1750W 235mm**

# **USER MANUAL**



Following manual not for exact saw but a general how to use for a saw with same functionality.

# CIRCULAR SAWS

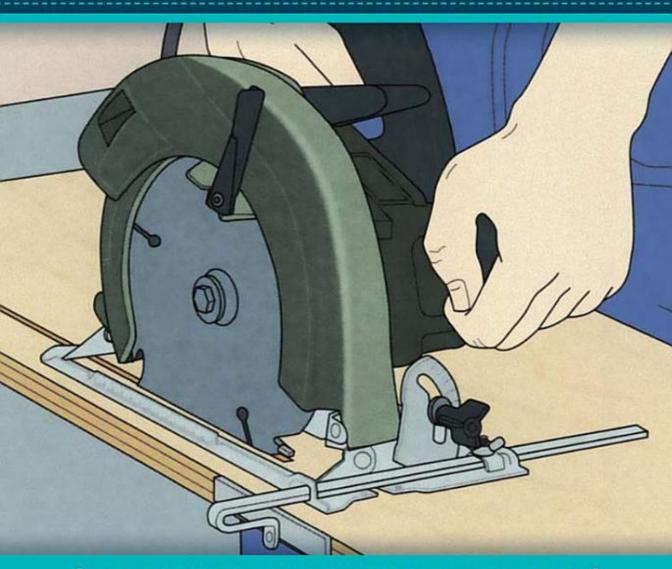

the tool information you need at your fingertips

# Contents

Chapter 1: Portable Circular Sav	W	•	•	•	•	•	. 6
Chapter 2: Circular Saw Setup							18
Chapter 3: Circular Saw Cuts .							24

Still, do not think of the circular saw as strictly a rough cutoff tool.

With a plywood blade on its arbor, the saw can make quick work of crosscutting a plywood or hardboard panel without splintering the edges. An edge guide will make a big difference, improving the accuracy of both rip cuts and crosscuts. Shopmade jigs and accessories will also help guide the saw for miter and taper cuts, and most saws have a built-in adjustment that tilts the baseplate for bevel cuts. Portable power saws can also make plunge cuts (page 42), an operation beyond the scope of any stationary saw.

Circular saws are designated according to their blade diameter.

Models range from 4 to 16 inches, but the 7¼- and 8¼-inch sizes are the most popular home workshop saws.

Power is another factor that distinguishes one model from another.





Even with its blade tilted to create a bevel, this 7¼inch circular saw cuts deep to saw through 1-inchthick stock.



Riding along
the edge of a
commercial jig,
a circular saw
can make a miter
cut at a precise
angle. The jig
ensures that
the blade keeps
to the intended
cutting path.

#### SAFETY TIPS

- · Avoid steadying a workpiece by hand or propping it on your knee; always clamp stock to a work surface or sawhorses.
- · Unplug the saw before changing the blade or making any other adjustments.
- . To keep a panel from sagging in the middle and causing the blade to bind, support it all along its length on a platform of 2-by-4s.
- . Do not use the saw if parts are loose, missing, or damaged; keep the tool clean to ensure the guards remain in good working order.
- . Keep the power cord out of the saw's cutting path.
- · Always wear safety glasses when operating the saw; because it cuts on the upstroke, the blade produces a shower of wood chips.
- . Whenever possible, keep both hands on the saw throughout a cutting operation.
- . Make sure the blade is not in contact with the workpiece when you turn on the saw. Allow the blade to come to full speed before feeding it into the stock.
- . Do not force the saw through a cut; allow it to cut at its own speed.
- If the blade binds during a cut, do not lift the saw out of the kerf. First, turn the saw off, and then back the blade up slowly and allow it to stop spinning.
- When finished cutting, make sure the lower blade guard springs back over the blade at the end of a cut before setting the saw down.
- . Do not attempt to cut through nails; this can cause kickback and ruin a blade.

#### CHOOSING A SAW

There are approximately 40 million portable circular saws in the United States. They vary widely in their design, but all models share certain common features; most importantly, they are powered by a motor connected to an arbor assembly that turns a blade counterclockwise. Depending on the height or angle of the baseplate relative to the blade, a saw can be set to cut stock of different thicknesses at a variety of angles between 45° and 90°.

When shopping for a circular saw, keep several factors in mind. Most tools range in horsepower from ½ to 2½ hp. Get a saw with at least 1 hp. For the sake of convenience, the tool should have a comfortable handle and a balanced design. Make sure the depth-of-cut and bevel settings are easy to adjust and the saw has a large, stable baseplate with both a long straight edge and a precise tilting mechanism. For safety's sake, select a saw that features a lock-off switch that must be depressed along with the trigger to turn on the tool. The two-step switch prevents accidental motor startup.

There are two main designs available for setting a circular saw's depth of cut. On pivot-foot saws, such as the model shown on page 21, the tool swivels up or down from a point at the front of the baseplate. The angle of the handle changes with the depth of cut. On drop-foot saws, the motor and blade housings are raised or lowered straight up or down relative to the baseplate. The handle angle remains constant, a feature many users find convenient.

# CHOOSING A SAW (continued)




While the 71/4-inch saw shown here has been the traditional choice of most woodworkers because of its generous depth-of-cut capacity-2% inches-a compact 6-inch model can also slice through a 2-by-4 at both 90° and 45°.

# CHOOSING A SAW (continued)



# CHOOSING A SAW (continued)

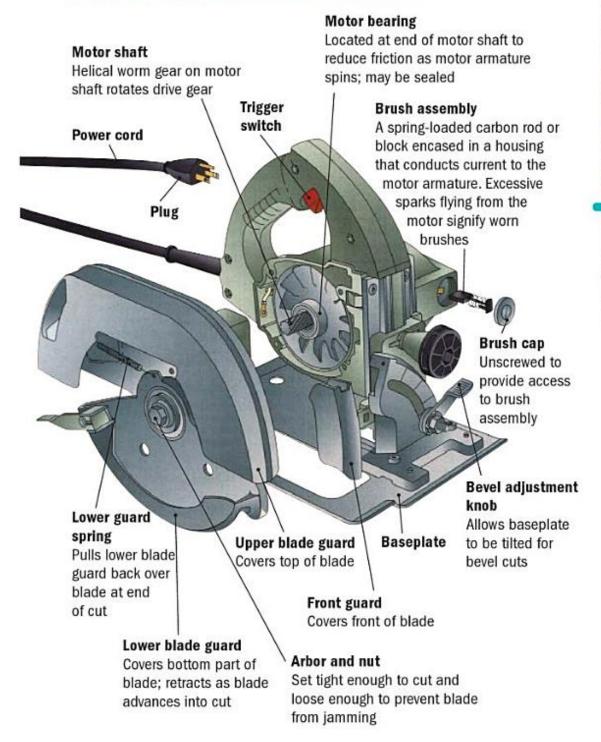

#### SAW BLADES

With the dozens of specialty blades on the market it is entirely possible to transform a circular saw from a job site workhorse into a precision cutting tool. Equipped with a standard combination blade and ones designed to cut specific materials, a saw can crosscut and rip accurately through hardwood, softwood, or manufactured panels such as plywood.

The cutting ability of a circular saw blade depends on several factors. A blade's hook angle, which determines how much bite it will take, is a key variable. (The angle is formed by the intersection of one line drawn from the tip of a tooth to the center of the arbor hole and one drawn parallel to the tooth's face.) The width of the kerf that the cutting edge creates is also important; so, too, is the number of teeth per inch (TPI). A 40 TPI crosscut blade will do its job slower than a 20 TPI combination blade, for example, but the finer-toothed model will produce a cleaner cut.

Although all of the blade types illustrated on page 15 are available in high-speed steel, carbide-tipped models have for years been the first choice of the majority of woodworkers. While they are more expensive than their steel counterparts, carbide-tipped blades are more economical in the long run. The small tips of carbide alloy welded onto the bodies of these blades can be sharpened dozens of times and hold their edge up to fifty times longer than steel blades.

But even carbide-tipped blades dull with extended use. Smoking, burning, off-line cutting, and frequent binding are all signs of a blade in need of sharpening. The best way to keep a blade sharp is to choose the right one for the material you are cutting and to avoid cutting into fasteners or accumulations of pitch.

# SAW BLADES (continued)

#### Combination blade

The blade type usually supplied with the saw; a general-purpose blade for ripping and crosscutting.

# Rip blade

Also knows as a framing blade; the large hooked teeth make it idea for fast cuts along the grain.

#### Plywood blade

For smooth cuts in plywood and veneered stock; small, pointed and finely ground teeth help reduce splintering.

#### Crosscut blade


For fast, smooth cuts across the grain; the blade's teeth are sharpened on the face and back, forming sharp cutting points.


#### Hollow ground planer blade

For very smooth rip cuts crosscuts and angle cuts; ideal for precision cabinet work. The blade's body is thinner than the hub and teeth reducing the chance of binding in the kerf.




# SAW ACCESSORIES

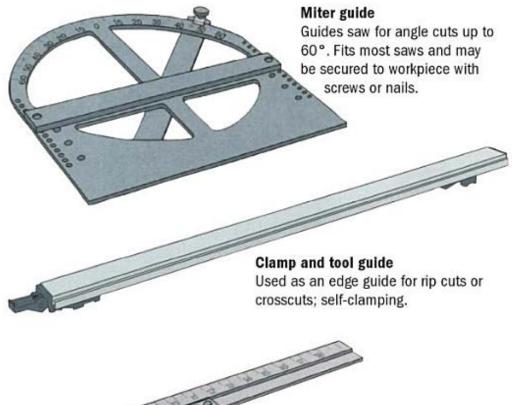

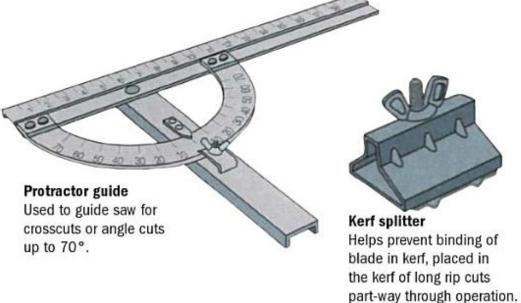

# KERF SPLITTER

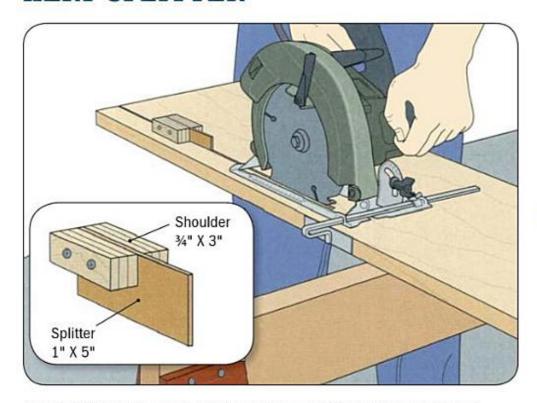

A kerf splitter helps prevent the saw from binding and kicking back. Instead of buying a kerf splitter like the one shown to the left in the inventory of accessories, you can easily make your own. Refer to the inset for suggested dimensions.

Choose 1/8-inch hardboard for the splitter piece and 3/4-inch plywood for the shoulders. Fasten the three pieces together with screws. To use the jig, start the cut, turn off the saw, then insert the splitter in the kerf a few inches behind the saw. Pull the saw back slightly and continue the operation (above). For particularly long cuts, keep a few kerf splitters on hand, slipping them into the kerf at 2- to 3-foot intervals.


## CHAPTER 2:

# Circular Saw Setup

Proper maintenance of the circular saw blades will provide you with years of use.

## CHANGING A BLADE

Unplug the saw and set it on its side on a work surface with the blade housing facing up. Retract the lower blade guard and, while gripping the blade with a rag, loosen the arbor nut with the wrench supplied with the saw (above). Remove

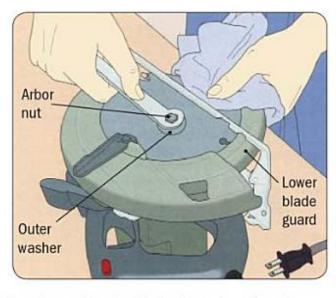

the nut and the outer washer, then slide the blade from the arbor. As with table saw blades, carbide-tipped blades should be sent out for sharpening, but high-speed steel types can be sharpened in the shop. To install a blade, place it on the arbor with its teeth pointing in the direction of blade rotation. Install the washer and the nut, and tighten them by hand. Holding the blade with the rag, use the wrench to give the nut an additional quarter turn. Do not overtighten.


# **CLEANING A BLADE**



Clean the blade using a commercial resin solvent. (Commercial oven cleaner, turpentine, or a solution of hot water with ammonia may also be used.) For stubborn pitch and gum deposits, soak the blade in the cleaning agent in a shallow pan and use a brass-bristled brush to clean the teeth (above).


# SQUARING THE BLADE


After pulling the plug, set the saw upside down on a work surface with the blade at its maximum cutting depth (top). Retract the lower blade guard, then butt the two sides of a try square against the baseplate and the blade between two teeth (bottom). The square should fit flush against the blade. If there is a gap between the two, loosen the bevel adjustment knob and tilt the baseplate until it touches the square, then tighten the knob.

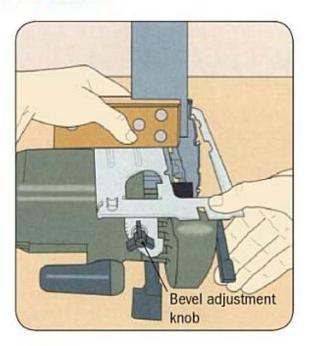



## DEPTH OF CUT

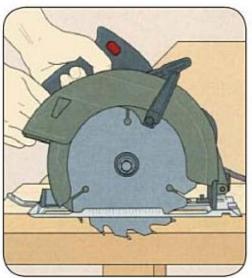

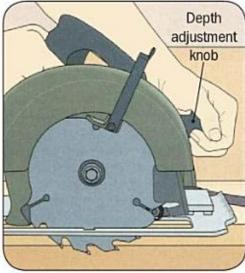


With the saw unplugged, retract the lower blade guard and set the baseplate on the workpiece, butting the blade against the edge of the stock. When cutting through a workpiece, set the blade to clear the stock by about 1/4-inch. For most blades, one tooth and at least part of the adjoining gullets should project below the workpiece; if not, sawdust will fail to clear the kerf, causing burning. For a pivot-foot saw (above left), release the depth adjustment lever. Then, keeping the baseplate flat on the workpiece, hold the handle and pivot the saw up or down until the blade reaches the correct depth. Tighten the lever. For a drop-foot model (above right), loosen the depth adjustment knob, then hold the baseplate steady as you pull up or press down on the handle. When you have the blade at the depth you need, tighten the knob.

# SHARPENING STEEL BLADES

#### Jointing the Teeth


To sharpen the teeth of a circular saw blade, install the blade in a commercial saw-setting jig following the manufacturer's instructions. For the model shown, the blade teeth should be pointing counterclockwise. Install the jointing head on the jig, butting its file up against the saw teeth. Then tighten the thumbscrew

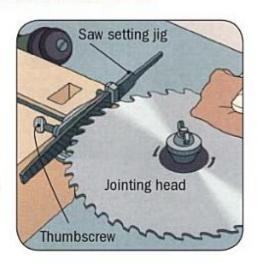

until the teeth drag against the file. To joint the teeth so they are all the same length, clamp the jig in a bench vise and rotate the blade against the file clockwise (above). After each rotation, tighten the thumbscrew slightly and repeat until the tip of each tooth has been filed flat.


### Setting the teeth

Remove the jointing head from the jig and install the setting head. Also remove the jig from the vise and set it on the benchtop. Adjust the head for the appropriate amount of set, or bend. Using a pin punch and ball-peen hammer, lightly strike every second tooth against the setting head (right). Remove the blade and reverse

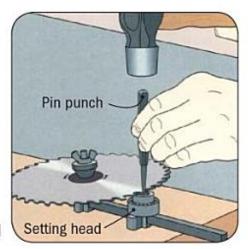

the position of the setting head. Reinstall the blade with the teeth pointing in the opposite direction, and repeat for the teeth you skipped, again striking every second tooth.

# SHARPENING STEEL BLADES (continued)

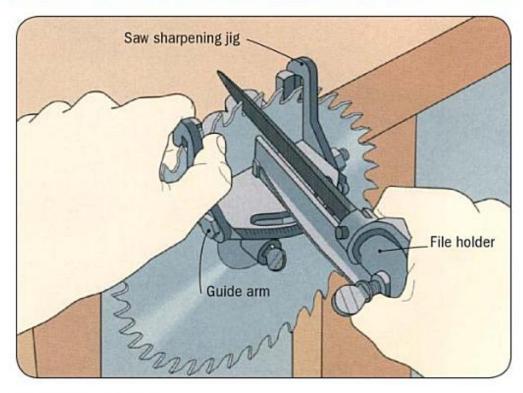

### **Filing the Teeth**

Once the saw teeth have been jointed and set, file them using a commercial saw-sharpening jig. Mount the jig to a workbench and install the blade loosely on the jig so the blade turns. Following the manufacturer's instructions, rotate the triangular file in the file holder and adjust the guide arm to match the required pitch and angle of the saw teeth. Starting with a tooth that is pointing to the right, file the cutting edge by sliding the file holder along the top of the jig (above). Rotate the blade counterclockwise, skipping one tooth, and repeat. Sharpen all of the right-pointing teeth the same way. Adjust the triangular file and the guide arm to work on the left-pointing teeth and repeat, sharpening all of the teeth you skipped.

CHAPTER 3:

# Circular Saw Cuts

Careful use of the circular saw can provide you with both rough and fine cuts.

## BASIC CUTS


Whether you are crosscutting a narrow board or ripping a sheet of plywood, always protect yourself from kickback by using C-clamps and protective wood pads to clamp stock to a work surface before cutting it with a circular saw. Other safeguards include keeping blades clean, setting the cutting depth no deeper than you need, and making sure your stock is dry and free of any fasteners. To get accurate results, cut with the blade just to the waste side of the cutting line and use an edge guide.

Get in the habit of cutting face down because circular saw blades cut on the upstroke. If you are working with hardwood or veneered plywood, which has two good faces, score with a utility knife before making the cut.



Some commercial guides can be extended up to 8 feet. The one shown at left is more suitable for crosscutting. It features clamps underneath the guide that secure the device to a workpiece, eliminating the need for separate clamps.


# CROSSCUT TO LENGTH

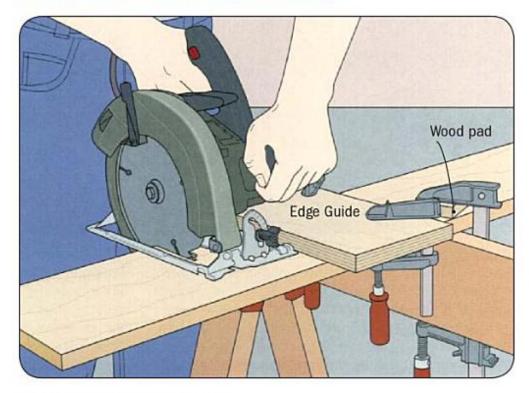

### **Cutting stock to length**

Clamp the workpiece to sawhorses. Align the blade with the cutting line, then clamp a straightedge guide to the workpiece flush against the saw's baseplate. The guide should be longer than the width of the workpiece and square to the edges of the stock. Take care also to set up the clamps so that they will not interfere with the motor as you make the cut. Turn on the saw with the baseplate flush against the guide and the blade clear of the stock. Then, gripping the handles firmly with both hands, feed the saw steadily into the workpiece.


#### **CROSSCUTTING JIG**

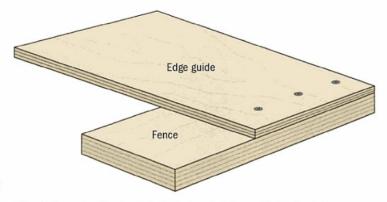

Simple to make, the shop-built jig shown above will ensure your crosscuts are square to the edges of the stock. Select 1/2-inch plywood for the edge guide and ¾-inch plywood for the fence. The dimensions of the jig depend on the width of the stock you will be cutting and the width of your saw's baseplate.

Make the edge guide at least as long as the width of your workpiece and wide enough to clamp to the board without getting in the way of the saw as you are making the cut. The fence should be about 4 inches wide and longer than the combined width of the edge guide and the baseplate of the saw. Screw the two parts of the jig together, checking with a try square to make sure that they are perfectly perpendicular.


# CROSSCUTTING JIG (continued)

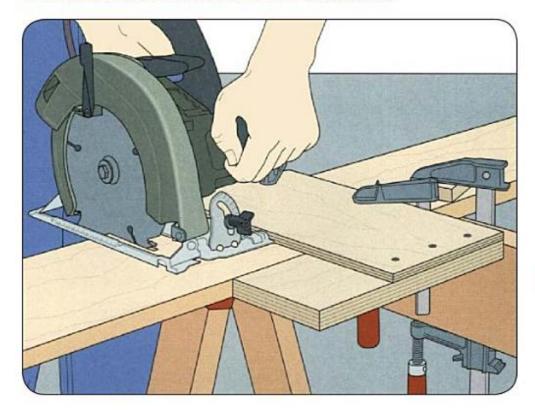

To use the jig, clamp it to the workpiece as you would for a standard crosscut (page 25), making sure the blade is held in alignment with the cutting mark on the workpiece. The fence should always be kept flush against the edge of the workpiece. Run the saw along the edge guide to make the cut. (The first use of the jig will immediately trim the end of the fence flush with the blade.)

For subsequent cuts, clamp the jig to the workpiece, aligning the end of the fence with the cutting mark on your stock.


# RIPPING TO WIDTH

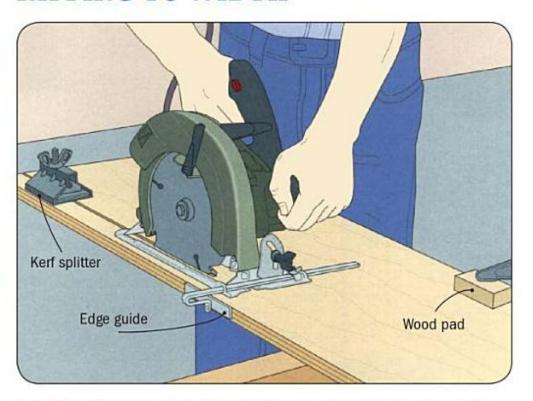

Install a commercial edge guide on the saw, then align the blade with the cutting line on the board. Butt the edge guide's fence against the edge of the workpiece, then lock it in place. Holding the saw firmly, feed the blade into the board, keeping the edge guide fence flush against the stock. To prevent the blade from binding in a long workpiece, turn off the saw a few inches into the cut and insert a kerf splitter. Pull the saw back a bit, then turn it on and continue the cut.

#### REFERENCE MARKS

Some saws do not provide reference marks to help you align the blade with a cutting line on a workpiece; other machines have lines that may not be perfectly aligned for a particular saw blade. Solve the problem by adding your own marks. Cut into a scrap board, then back the saw partly out of the kerf and unplug the machine. Make a mark on the toe of the baseplate in line with the kerf, then fix a strip of masking tape on the toe, aligning its edge with the mark. Use the same procedure to make additional marks for angle cuts.

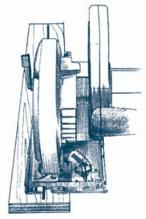


#### ShopTip

#### Avoid Splintering

Plywood is particularly prone to splintering when cut with a circular saw. A plywood blade will help, but another solution is to reinforce the wood surface with a strip of masking tape. Mark the cutting line on the tape and make the cut. The tape will keep the edges of the kerf clean.


## SAWING PLYWOOD

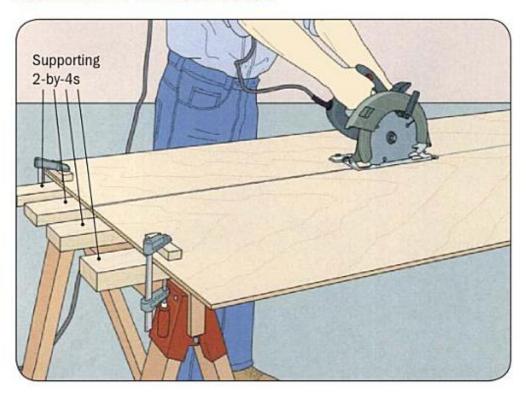

## Ripping

To prevent a panel from sagging in the middle during a cut and causing the blade to bind, support the stock on a platform of sawhorses and 2-by-4s as shown at left. Make sure that two of the boards will be about 3 inches on either side of the cutting line. Position the panel on the 2-by-4s and clamp it in place. For extra accuracy, clamp a straightedge guide to the panel (page 25). Aligning the blade with the cutting line, cut slowly and steadily while guiding the saw with both hands. Insert kerf splitters as you go to keep the blade from binding.


# SAWING PLYWOOD (continued)

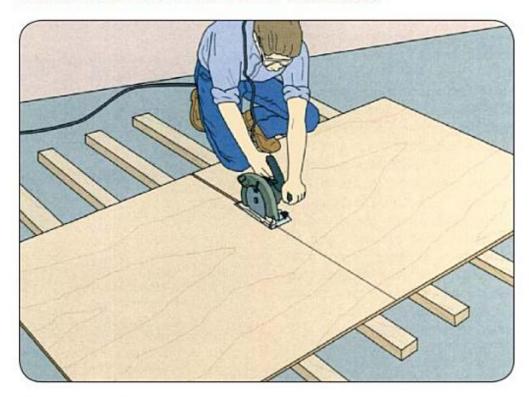

### Crosscutting

Set enough 2-by-4s face up on the shop floor to support the panel at 12-inch intervals; the boards should be a few feet longer than the width of the panel. Position the stock on the boards, shifting two of them to rest about 3 inches on either side of the cutting line. To make the cut, drop to one knee and align the blade with the cutting mark. Gripping the saw with both hands, cut steadily while carefully maintaining your balance (above). As much as possible, keep your weight on the 2-by-4 immediately to the side of the cutting line, rather than on the panel itself.


#### STRAIGHTEDGE GUIDE

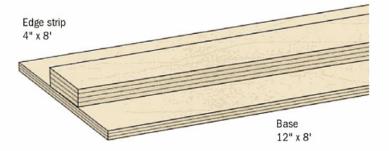

The shop-built straightedge guide shown above makes it easy to rip manufactured panels like plywood with great accuracy. Refer to the illustration for suggested dimensions.

Make the base from ¼-inch plywood; use ¾-inch plywood for the edge strip. Glue the strip parallel to the base, offsetting its edge about 4 inches in from one edge of the base. Trim the base to its proper width for your saw by butting the tool's baseplate against the jig's edge strip and cutting along the base.


# STRAIGHTEDGE GUIDE (continued)

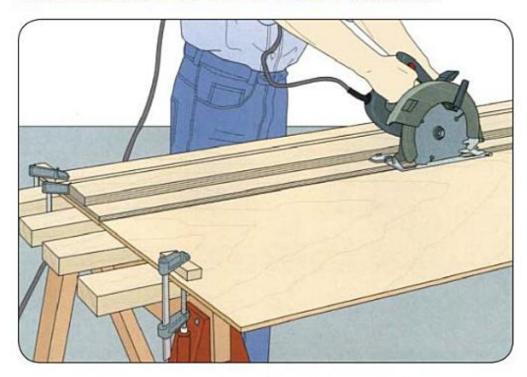

To use the jig, make a cutting mark on the panel, then clamp the stock to a platform of 2-by-4s resting sturdily atop sawhorses. Clamp the guide to the panel, aligning the trimmed edge of the base with the mark on the workpiece.


Make the cut as you would a standard rip cut (page 26), keeping the saw's baseplate flush against the edge strip throughout the operation (above).

# THICK WOOD

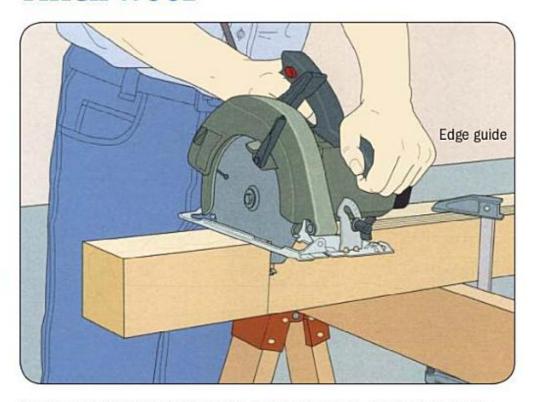


To crosscut stock thicker than the maximum blade depth of your saw, make intersecting cuts from opposite sides of the workpiece. First, mark a cutting line on one face of the stock, then use a try square to extend the line around the other three faces. Set the workpiece on sawhorses and clamp it in position. Align the blade with the cutting line, then butt an edge guide against the saw's baseplate and clamp it to the workpiece. Set the cutting depth at slightly more than one-half the thickness of the stock, then make the cut (above). Flip the workpiece over, reposition the clamps and the edge guide, then complete the cut.

# **ANGLES**

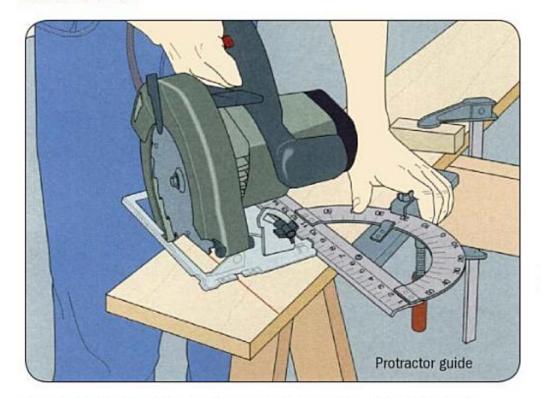

Clamp the workpiece to sawhorses, then set a protractor guide or a miter guide to the angle you wish to cut. Align the saw blade with the cutting line on the work-piece. Place the protractor on the stock, holding its guiding edge against the saw's baseplate and its fence against the edge of the workpiece. Grasp the saw and the guide firmly while you are making the cut.


## BEVELS

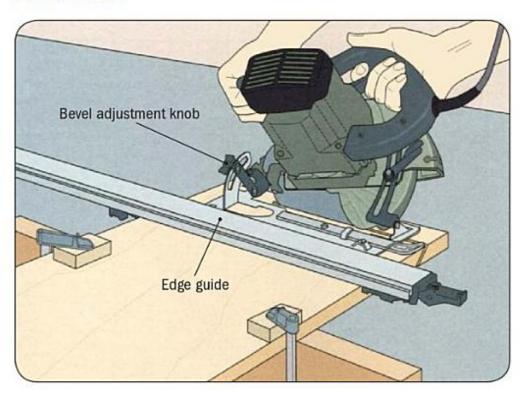

### Making a bevel cut

Loosen the bevel adjustment knob on the saw and set the blade to the desired angle, then tighten the knob. Clamp the workpiece to sawhorses, making sure nothing is in the way of the blade during the cut. Align the blade with the cutting mark, then butt an edge guide flush against the saw's baseplate. Clamp the guide to the board. Make the cut as you would a standard crosscut, holding the saw firmly with both hands and keeping the baseplate flat on the workpiece.


## TAPERS

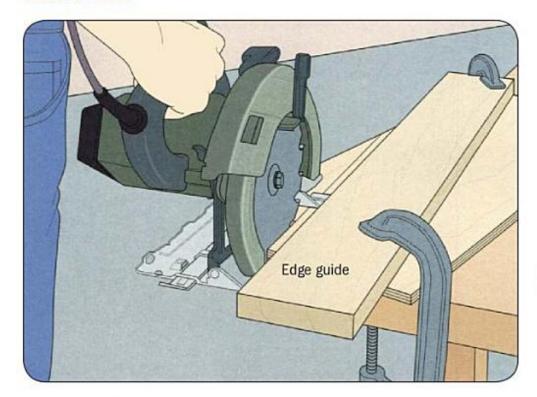

## **Cutting a taper**


Set the stock on a work surface with the cutting line extending several inches off the edge. Position the workpiece so you will be able to start the cut at the end of the board, rather than on its edge. Line up the blade with the cutting mark, then clamp an edge guide on top of the stock flush against the saw's baseplate; measure, if necessary, to make sure the guide is parallel to the line. Make the cut as you would a standard rip cut. Keep a firm hold on the saw, especially near the end of the cut, when the waste section supporting the tool becomes progressively narrower.

#### MITER GUIDE

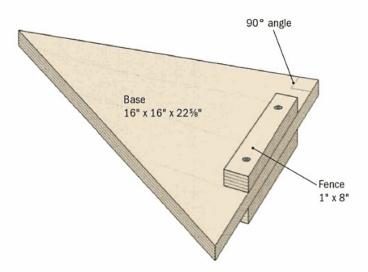

Cut a triangle with one 90° angle and two 45° angles. (To make a jig for 30° or 60° angles, the sides should be 12, 16, and 20 inches-or any other variation with a 3-4-5 ratio.) Screw the fences to the base, one on each side, opposite one of the 45° angles. The fences must be flush with the edge of the jig base.

# MITER GUIDE (continued)

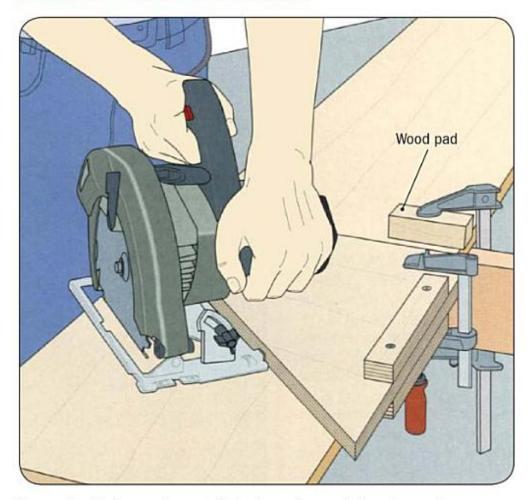

To use the jig for a miter cut, first clamp the workpiece to sawhorses. Then align the blade of the saw with the cutting line on the stock and butt the long side of the jig against the saw's baseplate. Place the fence on the bottom of the guide flush against the workpiece. Clamp the jig in place, and make the cut as you would a standard miter. Keep the saw flush against the jig throughout the operation. To make a crosscut, use the other side of the jig as your guide.

## DADOES


#### Saw Kerfs

A little ingenuity—along with the appropriate jigs and setups—greatly expands the versatility of a circular saw. Although the tool is not a substitute for a table saw, it does more than simple dimensioning of stock. Dadoes, rabbets, and miters can be formed with precision approaching that of a stationary saw. For cleaner results and less tearout, use a fine-tooth blade when performing such tasks.

Although the circular saw may not always cut wood as quickly as the table saw, the tool's portability allows it to work in places off limits to stationary machines. The saw can plunge into the middle of a panel, for example, cutting a rectangular hole out of it while leaving the edges intact.


## **Cutting kerfs within** the dado outline

Mark the width of the dado on the face of the stock, then clamp it to a work surface. Mark a depth line on the edge of the workpiece as a reference point and set the cutting depth of the blade appropriately. Align the blade

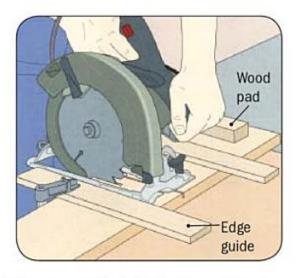

with one of the width marks and clamp an edge guide in place. Repeat for the other side of the dado. Gripping the saw firmly, ride the baseplate along one guide to cut an edge of the dado. Then run the saw along the second support to cut the channel's other edge (above). Saw a number of kerfs between the two cuts, working at roughly 1/8-inch intervals.

# DADOES (continued)

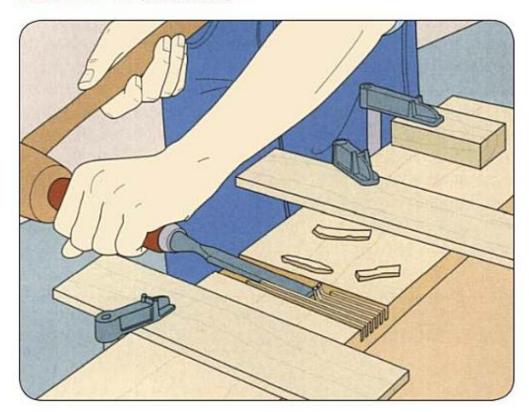


## **Chisel the Waste**

Holding a wood chisel at a slight angle as shown, strike the handle with a wooden mallet to split off the ridges between the edges of the dado (above). Make sure the beveled side of the chisel is facing up. After the bulk of the waste has been removed, pare away at the bottom of the dado until it is smooth and flat.

## PLUNGE CUT


#### Starting the Cut

Clamp the workpiece to sawhorses and align the blade with one of the cutting lines. Then clamp an edge guide to the workpiece flush against the baseplate of the saw. Make the guide longer than the cutting mark and high enough to guide the saw when it is tilted up. Retracting the lower blade guard with one hand and

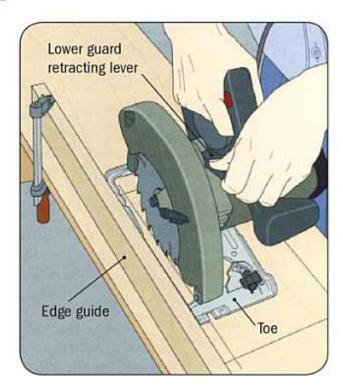

gripping the handle firmly with the other, rest the toe of the baseplate on the workpiece and pivot the saw forward to raise the blade completely clear of the stock. With the back of the blade directly above the start of the cutting line, turn on the saw and slowly lower the cutting edge into the stock (above), keeping the baseplate flush against the edge guide. Once the saw is flat on the workpiece, release the blade guard and push the tool forward. When the blade reaches the end of the cutting line, turn off the saw, let the blade stop, and pivot the tool forward to lift it out of the kerf. Make plunge cuts along the three remaining cutting lines, repositioning the edge guide as necessary.


# PLUNGE CUT (continued)

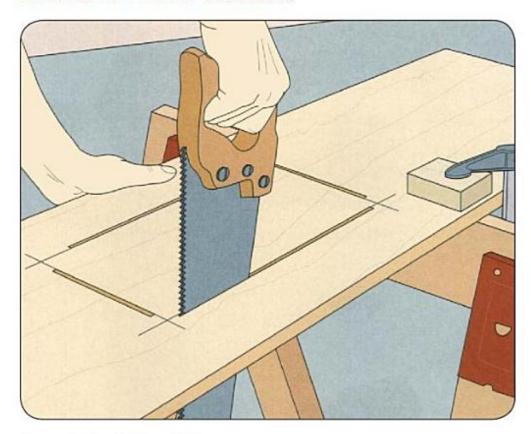

### Completing the Cut

Because of its circular blade, a portable power saw leaves a small amount of waste at the beginning and end of each plunge cut. Square the corners with a saber saw or a handsaw (above), making sure you keep the blade vertical as you cut.

#### EXTEND THE EDGE GUIDE

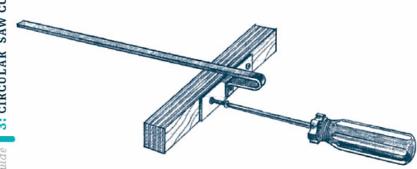

Commercial edge guides are often too short to provide proper support, especially for long rip cuts. One answer is to make the guide longer. Cut an 8-inch-long strip of ¾-inch plywood. Drill two screw holes through the edge guide's fence, then secure the auxiliary guide in place.